


Installation Instructions / Warranty

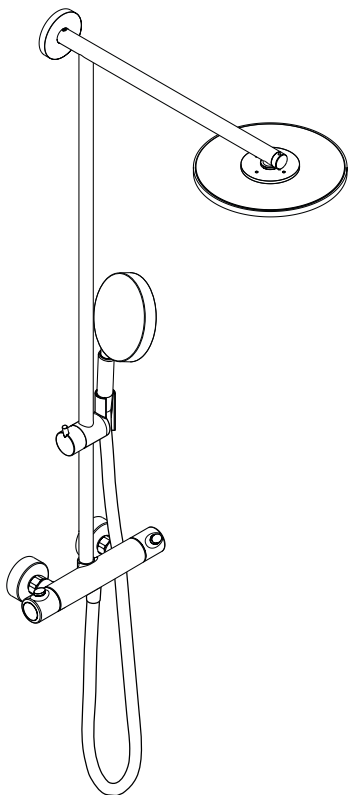

Raindance Showerpipe
27160XX1

hansgrohe



Ihr Online-Fachhändler für:

hansgrohe


- Kostenlose und individuelle Beratung
- Hochwertige Produkte
- Kostenloser und schneller Versand

- TOP Bewertungen
- Exzelerter Kundenservice
- Über 20 Jahre Erfahrung



E-Mail: info@unidomo.de | Tel.: 04621 - 30 60 89 0 | www.unidomo.de

Raindance Showerpipe 27160XX1

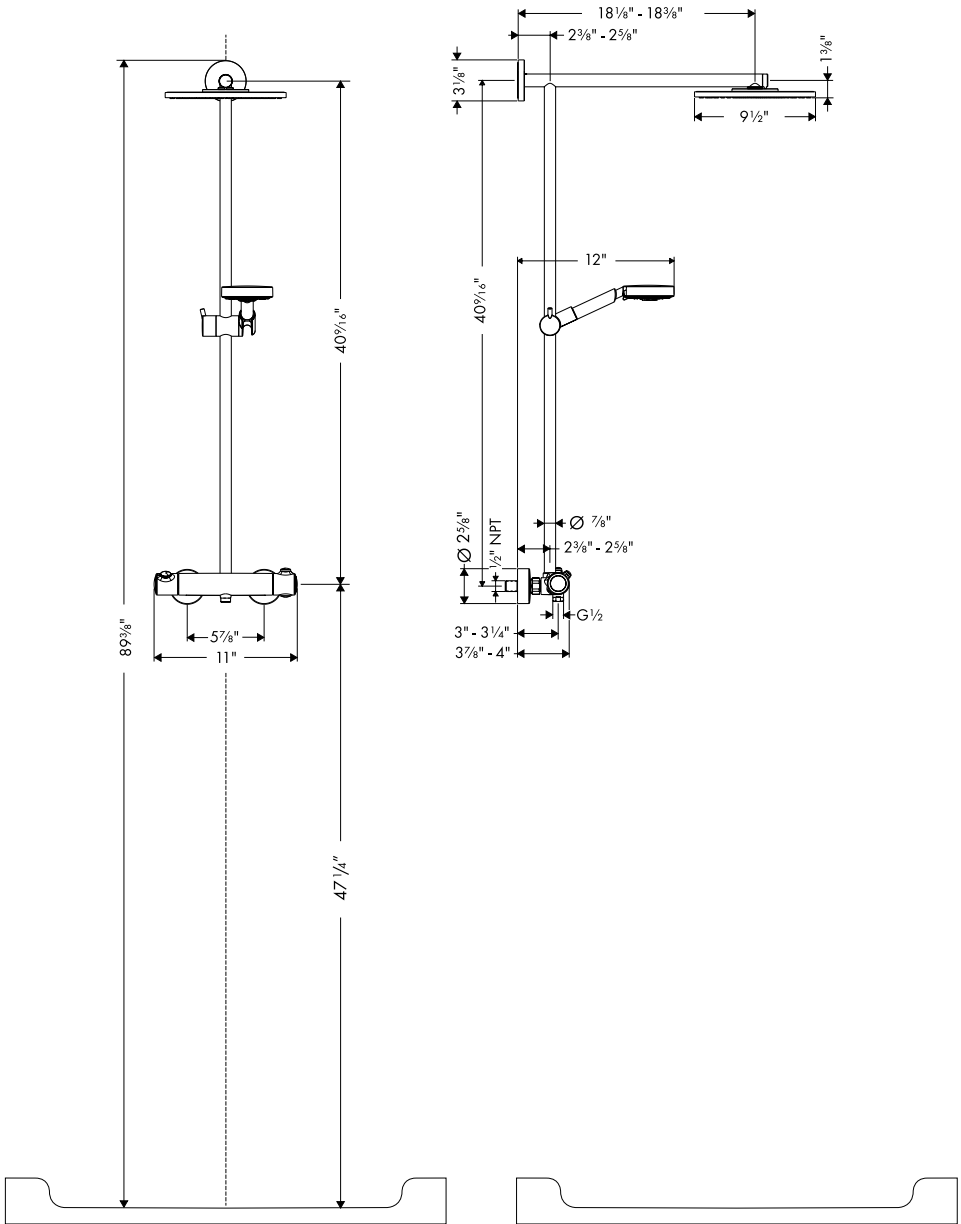

Technical Data

Operating pressure:	max. 145 psi
Recommended operating pressure:	14.5 - 72 psi
Test pressure:	232 psi
Hot water temperature:	max. 176° F*
Recommended hot water temp.	120° F - 140° F*
Connections distance	5 ⁷ / ₈ "
Connections 1/2" NPT	cold right - hot left
Protection against back siphonage provided by check valves.	

*Please know and follow all applicable local plumbing codes when setting the temperature on the water heater.


Roughing In

Install 1/2" NPT female fittings, recessed 3/8" behind the surface of the finished wall for the hot and cold supplies. They should be positioned 5⁷/₈" apart on center.

The finished wall surface should be installed and made watertight prior to installation of the Showerpipe.

Installation Considerations

- This unit is suitable for installation on solid surfaces such as tile, dense natural stone, etc. The wall should be flat, without protruding tiles, joints, etc.
- If the Showerpipe is to be installed in a fiberglass or acrylic shower enclosure, the wall must be reinforced at the mounting points.
- For correct operation of the thermostatic mixing valve, the hot supply must be on the left, and the cold supply must be on the right.

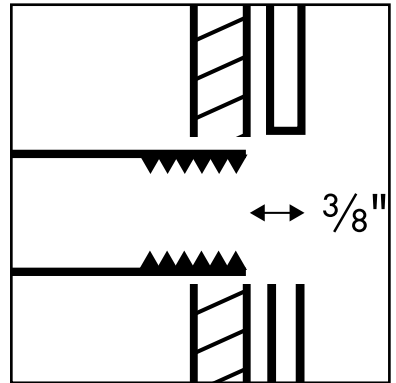


Installation


Flush the hot and cold supplies thoroughly (1).

 **Seal the wall around the female fittings using waterproof sealant (2).**

 **Failure to seal the wall may lead to water damage.**

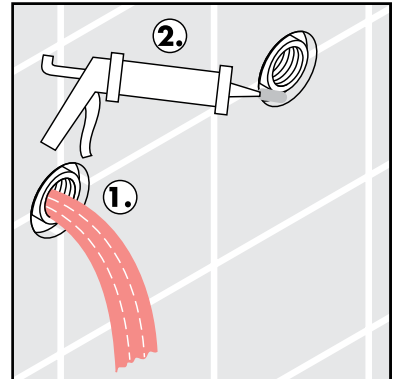


Wrap the threads on the 1/2" side of the s-union with Teflon tape. Screw the s-unions into the female fittings.

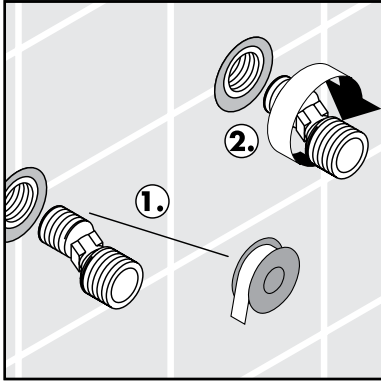


Make sure that the s-unions are level.


The end of the s-union should extend 1 3/8" outside the surface of the finished wall.

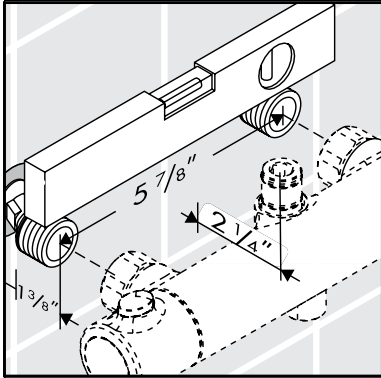

Install the escutcheons.

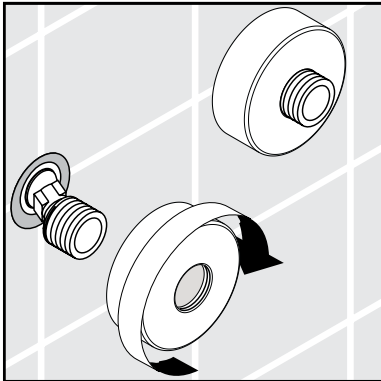


Install the washers into the inlets on the valve body.
Install the connecting threads on the s-unions.

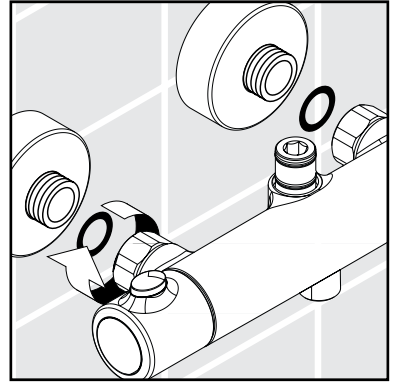

Drill the holes for the shower arm using a 6 mm bit.
Install the anchors.




 **Seal the wall around the anchors with waterproof sealant.**

 **Failure to seal the wall may result in water damage.**

Install the shower arm mounting plate using the included screws and washers (A). Do not tighten the screws completely.


OR

If the tile does not go all the way up the wall, install the mounting plate with the tile matching disk (B). Do not tighten the screws completely.

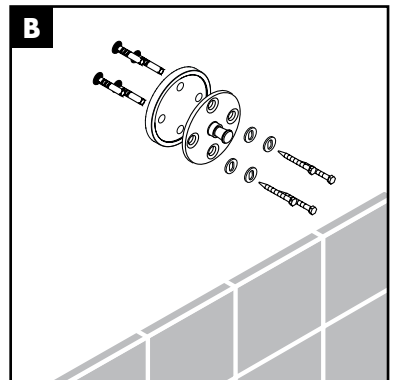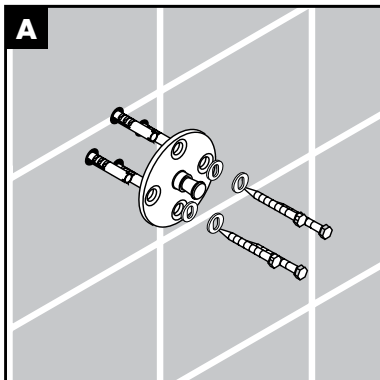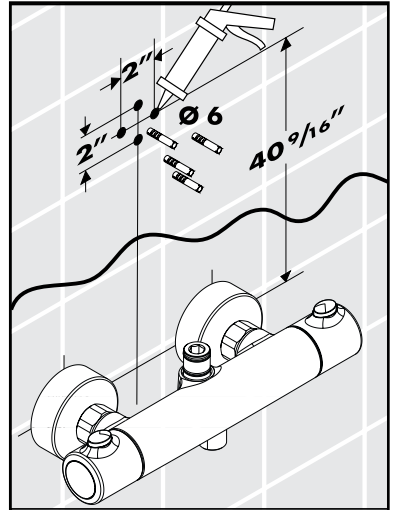


Push the inlet of the shower arm down into the riser.

Place the escutcheon on the shower arm.

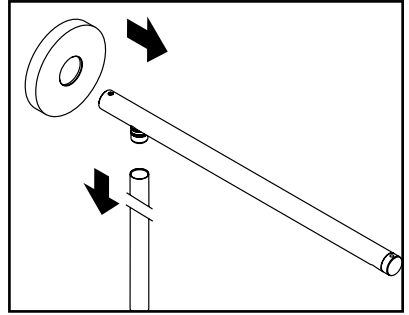

Install the showerhead on the shower arm.


 **Tighten the safety screw using a 2 mm Allen wrench.**

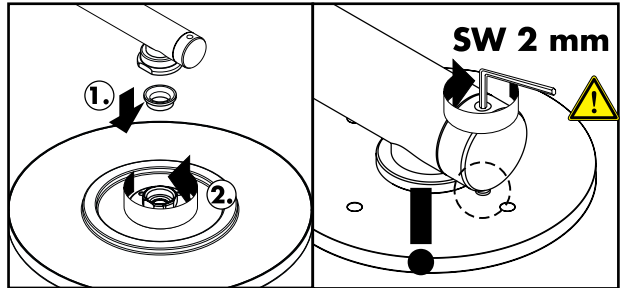

Push the riser firmly over the valve outlet (1), and the shower arm assembly over the mounting plate (2).


 **Make sure that the riser is level.**

Tighten the set screw using a 3 mm Allen wrench (3).

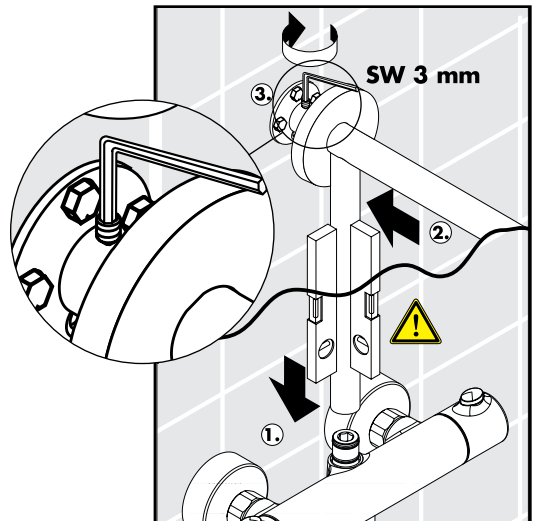


Level the shower arm.

Tighten the mounting screws.

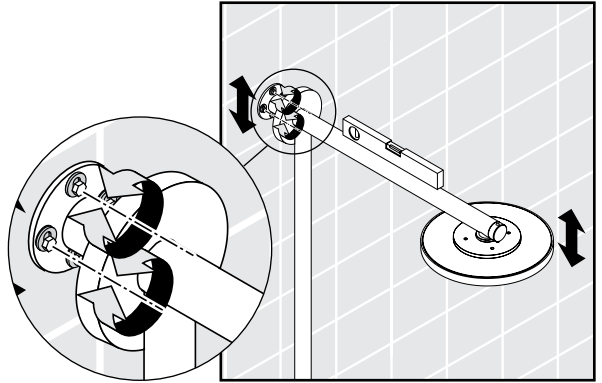

Thread the escutcheon over the mounting plate.

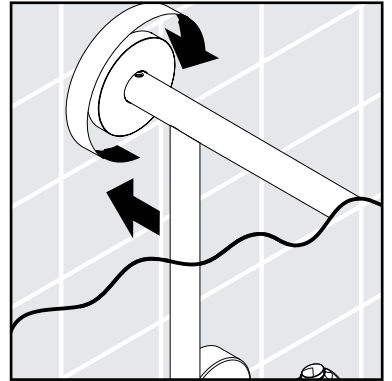


Place the black rubber hose washer in one end of the hose. Screw this end to the handshower port on the valve.

Place the screen washer in the other end of the hose. Screw this end to the handshower. Place the handshower in the holder.

Set the high temperature limit stop (optional).


Justify the handle.

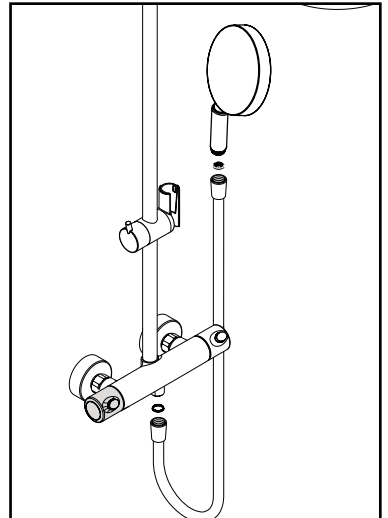


Justify the Handle

Turn the water on to the handshower.


Turn the thermostat handle until the output water is 100°.

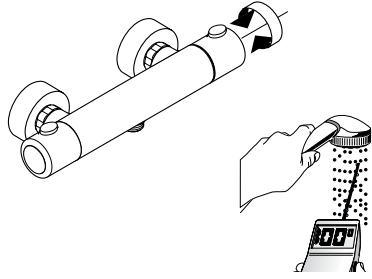

Remove the screw cover.

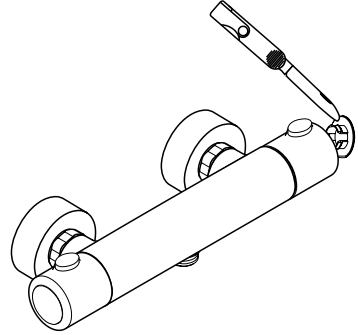


Remove the handle and safety set.

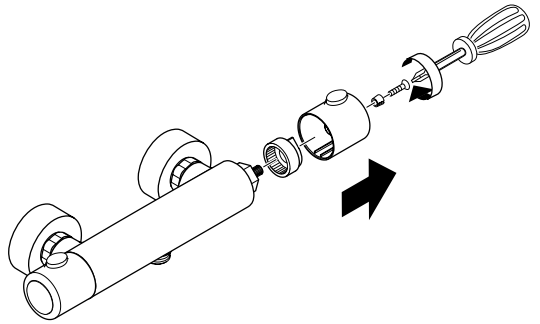

Replace the safety set so that it is oriented as shown in the diagram.

Replace the handle so that the safety stop override button is at the 12:00 position. Tighten the handle screw.


Replace the screw cover.

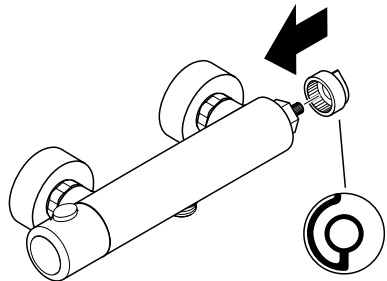

Set the High Temperature Limit Stop (Optional)

Remove the handle and safety set.


Remove the clip and the safety stop ring from the thermostatic valve stem.

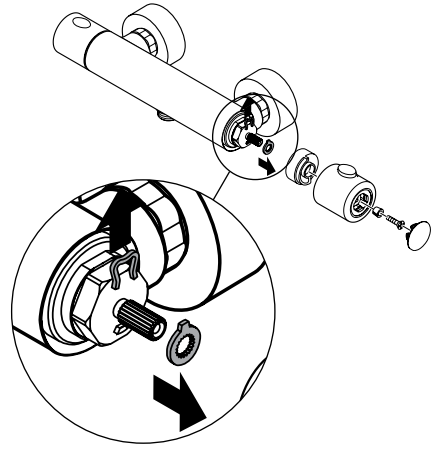

Turn the water on to the handshower.

Turn the thermostatic valve stem until the output water is 110°*.


Turn the water off.

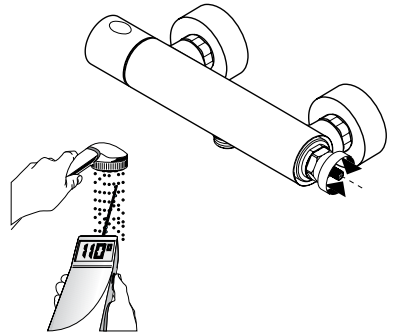

Replace the stop ring so that it is against the stop.

Replace the clip.

Justify the handle.

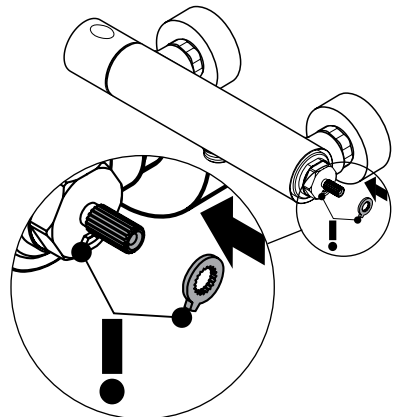


*Know and follow all applicable local plumbing codes when setting the high temperature limit stop. In Massachusetts, the maximum output temperature may be no higher than 112°F.

User Instructions

Turn the temperature control handle to the rear to make the water cooler. Turn it to the front to make the water warmer. The handle will stop when the safety stop override button is at the top, and the output water is 100°F.



To obtain water hotter than 100°, press the safety stop override button, and continue turning the handle to the front.

Turn the diverter handle to the rear to obtain water from the showerhead, to the front to obtain water to the handshower.

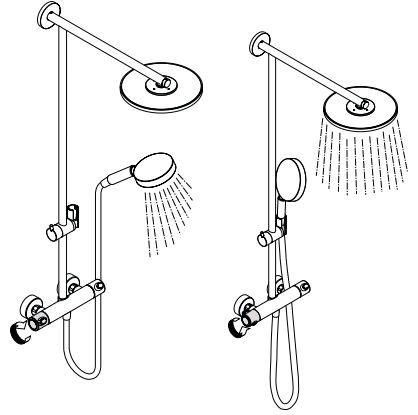


Using the handshower:

The handshower has 3 spray modes: RainAir, BalanceAir, and WhirlAir. Push the function lever until the desired spray mode is achieved.

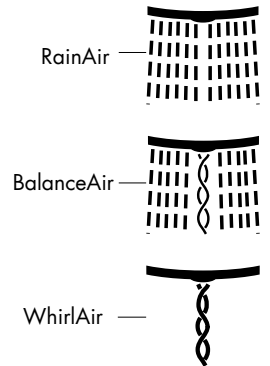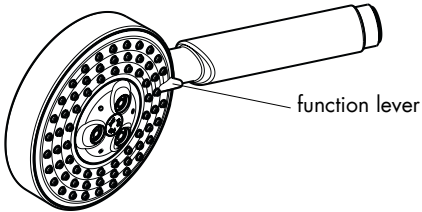

Scale Removal

The showerhead and the handshower use the Quiclean™ self cleaning system. If scale deposits are noticed in the spray channels, rub across the channels with a finger or a sponge to dislodge the deposits.


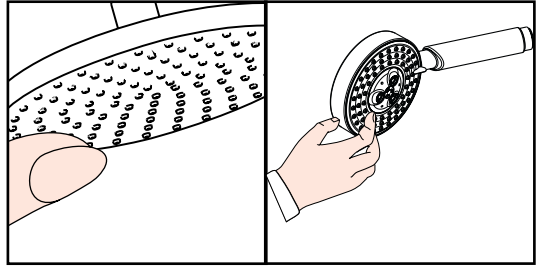


If scale deposits are noticed on the spray face, use a commercial scale remover, such as Lime-Away or CLR. Dilute the remover as directed on the label instructions.


Pour about $\frac{3}{4}$ " of the solution into a shallow dish.

Soak the spray face in the solution for the amount of time specified in the label instructions.


Rinse thoroughly when finished.

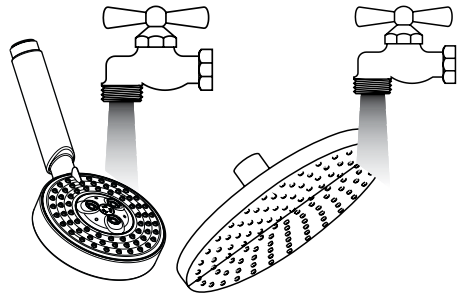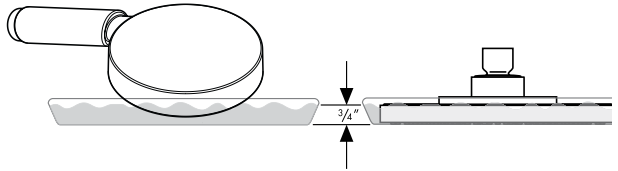

Reinstall and allow to flush for at least one minute.

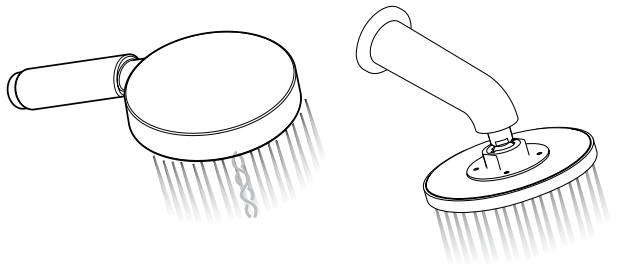

Replacement Parts

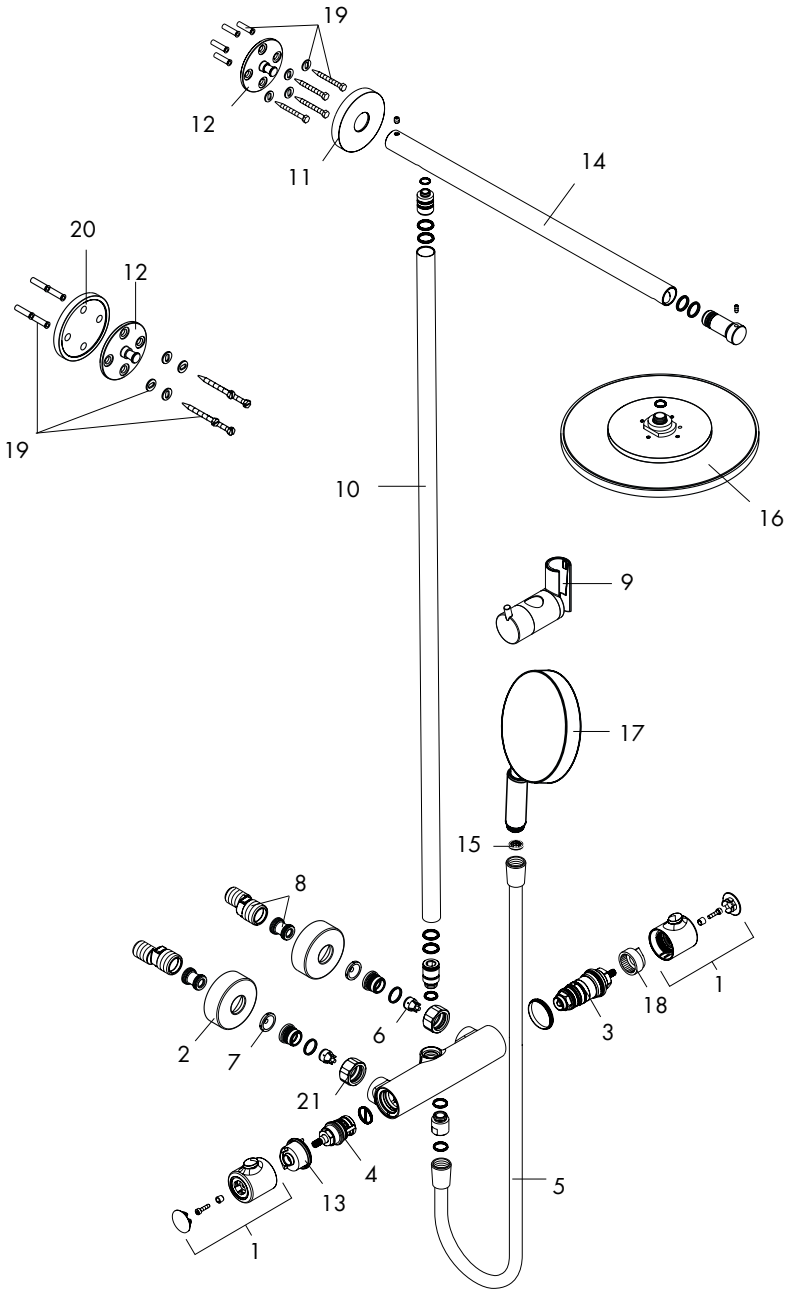

1	handle for thermostat	96618XX0
2	escutcheon	96467XX0
3	thermostat cartridge	94282000
4	shut off unit with selector	96509000
5	hose	28276XX0
6	check valve	96737000
7	filter packing	96922000
8	s-unions	94140001
9	handshower holder	97651XX0
10	riser	96770XX0
11	escutcheon	98672XX0
12	wall flange	98673XX0
13	safety set	98674000
14	shower arm	98675XX0
15	screen washer	94246000
16	showerhead	98855XX1
17	handshower	28504XX1
18	safety set	95041000
19	mounting kit	98716000
20	tile matching disk	98681000
21	connecting thread	96157XX0

XX = color

00 = chrome

82 = brushed nickel

Troubleshooting

Problem	Possible Cause	Solution
Showerhead or handshower drips for several minutes after the unit is turned off	Normal clearing of showerhead or handshower	Not a problem
Showerhead or handshower drips constantly after the unit is turned off	Shut off unit is dirty or faulty	Replace shut off unit
The unit outputs hot water and cold water, but not mixed water	The hot and cold supplies are reversed	Correct the plumbing
Output water is not hot enough	Handle is not justified	Justify handle
	High temperature limit stop not set correctly	Reset high temperature limit stop
	Thermostat cartridge is faulty	Replace thermostat cartridge
Insufficient water volume	Thermostat cartridge is dirty	Clean filter screens on thermostat cartridge

Cleaning Recommendation for Hansgrohe Products

Modern lavatory faucets, kitchen faucets, and showers consist of very different materials to comply with the needs of the market with regard to design and functionality. To avoid damage and returns, it is necessary to consider certain criteria when cleaning.

Cleaning Materials for Faucets and Showers

Acids are a necessary ingredient of cleaning materials for removing lime, however please pay attention to the following points when cleaning faucets and showers:

- Only use cleaning materials which are explicitly intended for this type of application.
- Never use cleaning materials which contain hydrochloric, formic, phosphoric, or acetic acid, as they cause considerable damage.
- Never mix one cleaning material with another.
- Never use cleaning materials or appliances with an abrasive effect, such as unsuitable cleaning powders, sponge pads, or micro fiber cloths.

Cleaning Instructions for Faucets and Showers

Please follow the cleaning material manufacturer's instructions. In addition, pay attention to the following points:

- Clean the faucets and showers as and when required
- Use the amount of cleaning product and the amount of time recommended by the manufacturer. Do not leave the cleaner on the fixture longer than necessary.
- Regular cleaning can prevent calcification.
- When using spray cleaners, spray first onto a soft cloth or sponge. Never spray directly onto the faucet as droplets can enter openings and gaps and cause damage.
- After cleaning, rinse thoroughly with clean water to remove any cleaner residue.

Important

Residues of liquid soaps, shampoos, and shower foams can also cause damage, so rinse with clean water after using.

Please note: if the surface is already damaged, the effect of cleaning materials will cause further damage.

Components with damaged surfaces must be replaced or injury could result.

Damage caused by improper treatment is not covered under the warranty.

Limited Lifetime Consumer Warranty

This product has been manufactured and tested to the highest quality standards by Hansgrohe, Inc. ("Hansgrohe"). This warranty is limited to Hansgrohe products which are purchased by a consumer in the United States after March 1, 1996, and installed in either the United States or Canada.

WHO IS COVERED BY THE WARRANTY

This warranty extends to the original consumer purchaser only. This warranty is non-transferable.

WHAT IS COVERED BY THE WARRANTY

This warranty covers only your Hansgrohe manufactured product. Hansgrohe warrants this product against defects in material or workmanship as follows: Hansgrohe will repair at no charge for parts only or, at its option, replace any product or part of the product that proves defective because of improper workmanship and/or material, under normal installation, use, service and maintenance. If Hansgrohe is unable to provide a replacement and repair is not practical or cannot be timely made, Hansgrohe may elect to refund the purchase price in exchange for the return of the product.

LENGTH OF WARRANTY

Replacement or repaired parts of products will be covered for the term of this warranty as stated in the following two sentences. If you are a consumer who purchased the product for use primarily for personal, family, or household purposes, this warranty extends for as long as you own the product and the home in which the product is originally installed. If you purchased the product for use primarily for any other pur-

pose, including, without limitation, a commercial purpose, this warranty extends only (i) for 1 year, with respect to Hansgrohe and Commercial products, and (ii) for 5 years, with respect to AXOR products.

THIS WARRANTY DOES NOT COVER, AND HANSGROHE WILL NOT PAY FOR:

- A. Conditions, malfunctions or damage not resulting from defects in material or workmanship.
- B. Conditions, malfunctions or damage resulting from (1) normal wear and tear, improper installation, improper maintenance, misuse, abuse, negligence, accident or alteration, or (2) the use of abrasive or caustic cleaning agents or "no-rinse" cleaning products, or the use of the product in any manner contrary to the product instructions. (3) Conditions in the home such as excessive water pressure or corrosion.
- C. Labor or other expenses for the disconnection, deinstallation, or return of the product for warranty service, or for installation or reinstallation of the product (including but not limited to proper packaging and shipping costs), or for installation or reinstallation of the product.
- D. Accessories, connected materials and products, or related products not manufactured by Hansgrohe.

TO OBTAIN WARRANTY PARTS OR INFORMATION

Contact your Hansgrohe retailer, or contact Technical Service at:

Hansgrohe Inc.
1492 Bluegrass Lakes Parkway
Alpharetta GA 30004
Toll-free (800) 334-0455.

In requesting warranty service, you will need to provide

- 1. The sales receipt or other evidence of the date and place of purchase.
- 2. A description of the problem.
- 3. Delivery of the product or the defective part, postage prepaid and carefully packed and insured, to Hansgrohe Inc. 1492 Bluegrass Lakes Parkway, Alpharetta, Georgia 30004, Attention: Technical Service, if required by Hansgrohe.

When warranty service is completed, any repaired or replacement product or part will be returned to you postage prepaid.

EXCLUSIONS AND LIMITATIONS

REPAIR OR REPLACEMENT (OR, IN LIMITED CIRCUMSTANCES, REFUND OF THE PURCHASE PRICE) AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE PURCHASER. HANSGROHE NEITHER ASSUMES NOR AUTHORIZES ANY PERSON TO CREATE FOR IT ANY OBLIGATION OR LIABILITY IN CONNECTION WITH THIS PRODUCT.

HANSGROHE SHALL NOT BE LIABLE TO PURCHASER OR ANY PERSON FOR ANY INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES, ARISING OUT OF BREACH OF THIS WARRANTY OR ANY IMPLIED WARRANTY (INCLUDING MERCHANTABILITY).

Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from State to State. You may be required by law to give us a reasonable opportunity to correct or cure any failure to comply before you can bring any action in court against us under the Magnuson-Moss Warranty Act.

PRODUCT INSTRUCTIONS AND QUESTIONS

Upon purchase or prior to installation, please carefully inspect your Hansgrohe product for any damage or visible defect. Prior to installing, always carefully study the enclosed instructions on the proper installation and the care and maintenance of the product. If you have questions at any time about the use, installation, or performance of your Hansgrohe product, or this warranty, please call or write to us or call us toll-free at 800 334 0455.

hansgrohe

Hansgrohe, Inc. • 1490 Bluegrass Lakes Parkway • Alpharetta, GA 30004
Tel. 770-360-9880 • Fax 770-360-9887

www.hansgrohe-usa.com