



CHACHA

2022.06


Montageanleitung
Assembly instructions
Instructions de montage
Istruzioni di montaggio
Instrucciones de montaje
Instrucțiuni pentru montare

BEMM


Service:
BEMM GmbH
Postfach 10 01 44
D-31101 Hildesheim
Fon +49(0) 51 21 / 93 00 - 0
Fax +49(0) 51 21 / 93 00 84
eMail info@bemm.de

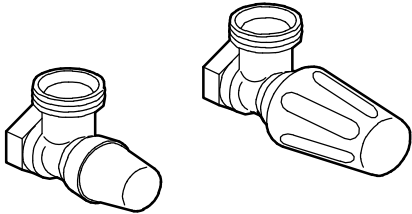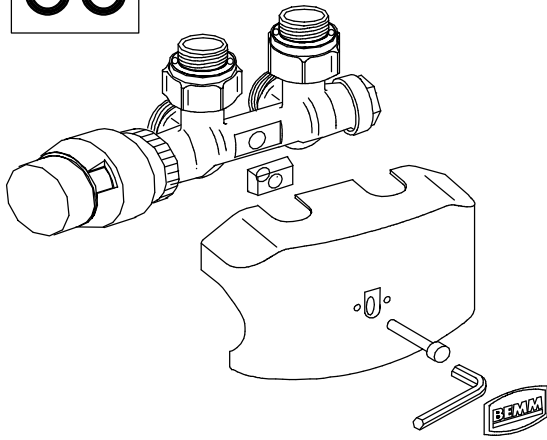


1

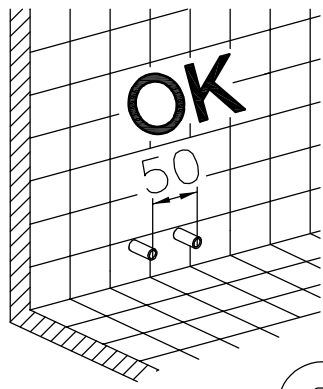


2

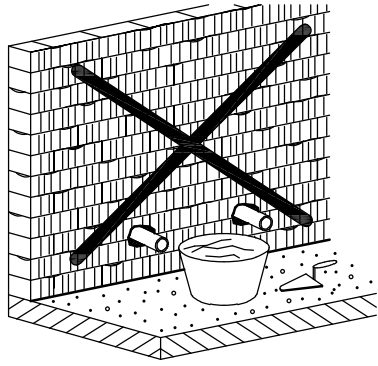


3

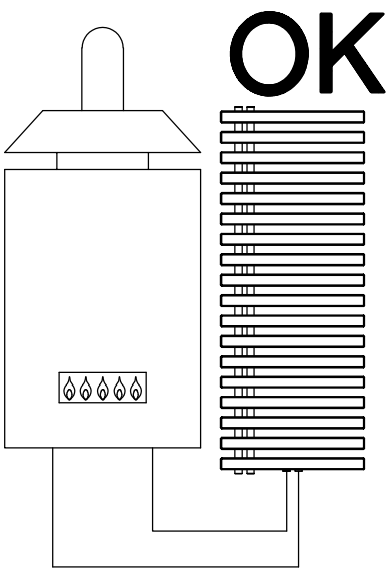


4

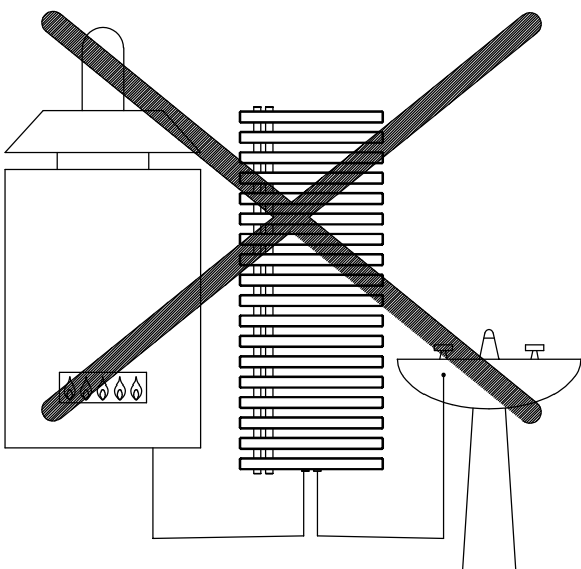


5

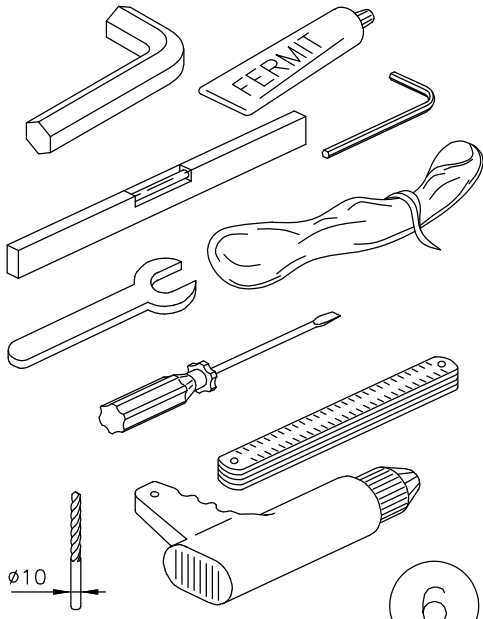


6

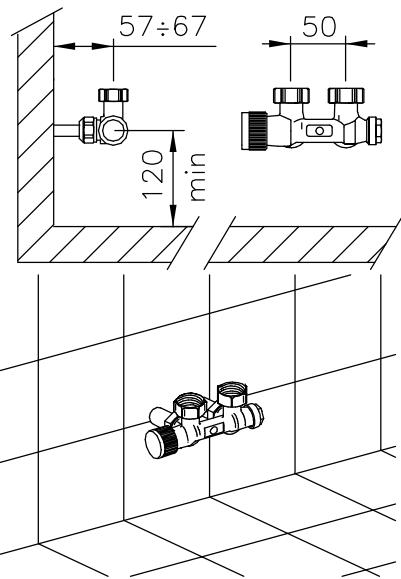


A

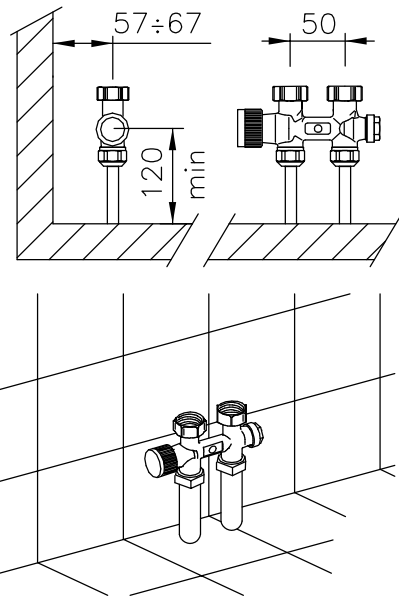


7

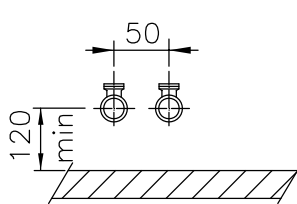


B

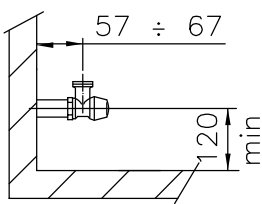

8

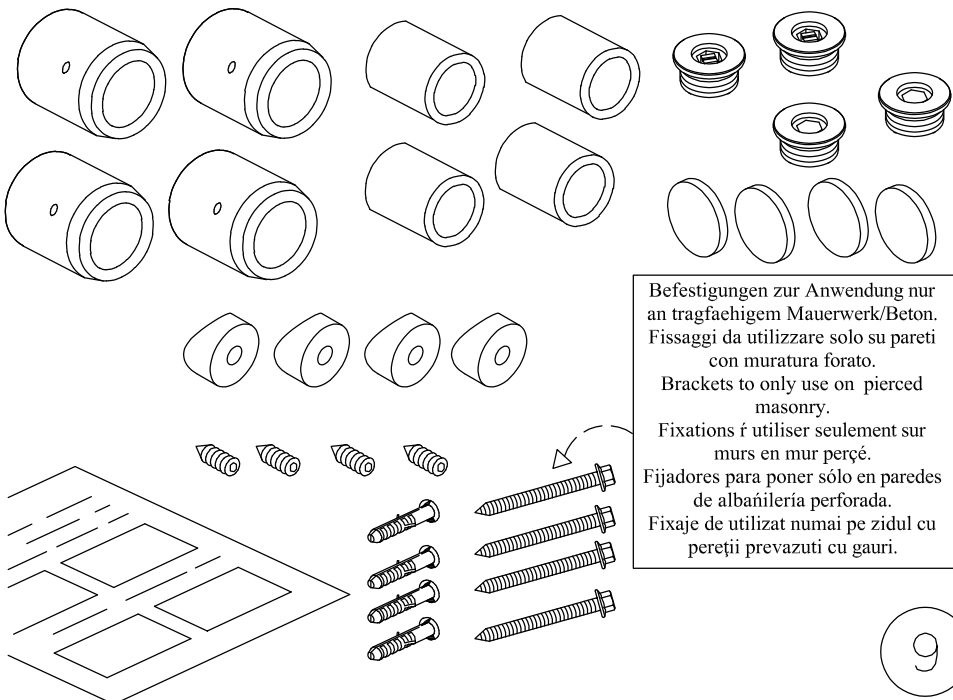

9

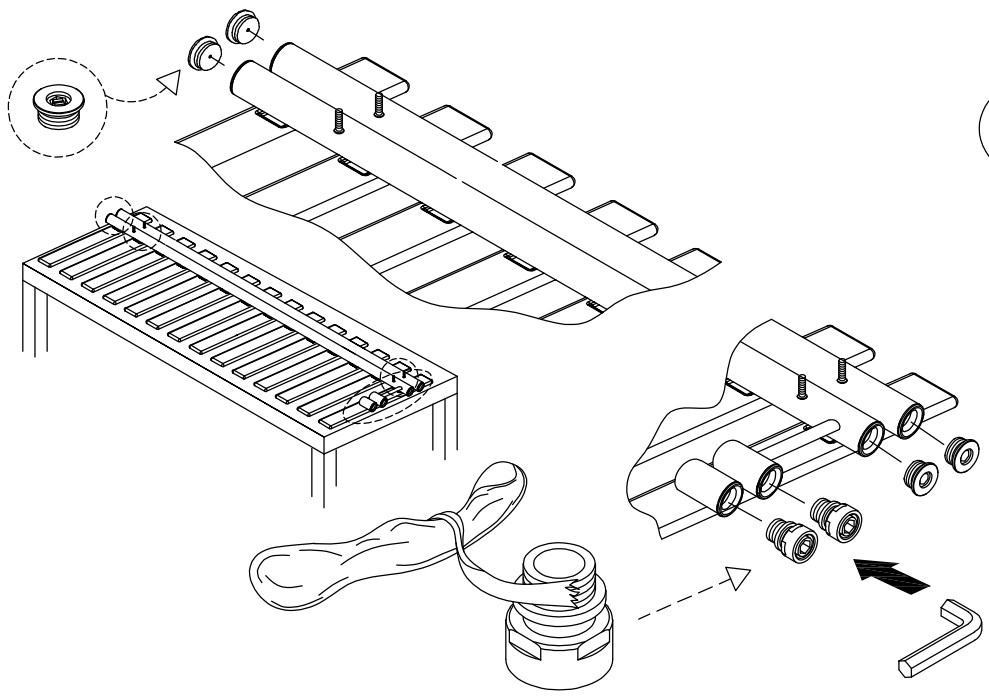

10

Befestigungen zur Anwendung nur an tragfähigem Mauerwerk/Beton.
Fissaggi da utilizzare solo su pareti con muratura forata.
Brackets to only use on pierced masonry.
Fixations à utiliser seulement sur murs en mur percé.
Fijadores para poner sólo en paredes de albañilería perforada.
Fixaje de utilizat numai pe zidul cu pereții prevăzuti cu găuri.



Ihr Online-Fachhändler für:

- Kostenlose und individuelle Beratung
- Hochwertige Produkte
- Kostenloser und schneller Versand
- TOP Bewertungen
- Exzelerter Kundenservice
- Über 20 Jahre Erfahrung



E-Mail: info@unidomo.de | Tel.: 04621 - 30 60 89 0 | www.unidomo.de

OK

H	X	Y
849±2	95	659
1189±2	95	999
1529±2	95	1339
1784±2	95	1594

L	L'
500±2	100
600±2	150
700±2	200

Diagram 12 (A): Shows the correct installation of the radiator on a wall. Dimensions include $H_1 + X + Y + h$, 50 , L' , and 50 . A detail shows the formula $LF = LV + 10$.

Diagram 12 (B): Shows the correct installation of the radiator on a wall. Dimensions include $H_1 + X + Y + h$, 50 , L' , and 50 .

Diagram 13: Shows the correct installation of the radiator on a wall. Dimensions include 50 , a , b , c , and d .

Diagram 14: Shows the correct installation of the radiator on a wall. Dimensions include 50 , a , b , c , and d .

Diagram 15: Shows the correct installation of the radiator on a wall. Dimensions include 50 , a , b , c , and d .

Diagram 16: Shows the correct installation of the radiator on a wall. Dimensions include 50 , a , b , c , and d .

Diagram 17: Shows the correct installation of the radiator on a wall. Dimensions include 50 , a , b , c , and d .

Diagram 18: Shows the correct installation of the radiator on a wall. Dimensions include 50 , a , b , c , and d .

Diagram 19: Shows the correct installation of the radiator on a wall. Dimensions include 50 , a , b , c , and d .

Diagram 20: Shows the correct installation of the radiator on a wall. Dimensions include 50 , a , b , c , and d .

Diagram 20: Shows the correct installation of the radiator on a wall. Dimensions include 50 , a , b , c , and d .

Diagram 21: Shows the correct installation of the radiator on a wall. Dimensions include 50 , a , b , c , and d .

Diagram 22: Shows the correct installation of the radiator on a wall. Dimensions include 50 , a , b , c , and d .

Diagram 23: Shows the correct installation of the radiator on a wall. Dimensions include 50 , a , b , c , and d .

Diagram 24: Shows the correct installation of the radiator on a wall. Dimensions include 50 , a , b , c , and d .

Diagram 25: Shows the correct installation of the radiator on a wall. Dimensions include 50 , a , b , c , and d .

Diagram 26: Shows the correct installation of the radiator on a wall. Dimensions include 50 , a , b , c , and d .