


Istruzioni per l'uso della siringa di controllo nelle prese SUPERSEAL

I

serie 100

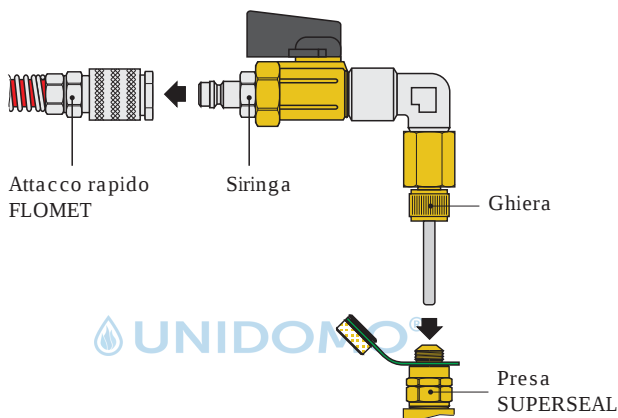

Istruzioni d'installazione e uso

- 1) Collegare le siringhe sugli attacchi del misuratore FLOMET
- 2) Indossare occhiali protettivi quando si utilizzano le prese.
- 3) Rimuovere il tappino lentamente, assicurarsi che non vi siano perdite.
- 4) Togliere eventuali impurità pulendo il foro d'entrata.
- 5) Applicare eventualmente del grasso al silicone sull'ago, specialmente se utilizzato per la prima volta, in modo da agevolare l'inserimento.
- 6) Inserire lentamente la sonda.
- 7) Avvitare sulla presa di pressione SUPERSEAL la ghiera per alcuni giri. Una volta terminate le letture e le tarature necessarie, estrarre la sonda con cautela per eventuali perdite, rimettere il tappino.

Nota: Se la sonda viene lasciata a lungo inserita nella valvola e poi viene estratta, la tenuta della valvola perderà fino a quando il dispositivo di tenuta riguadagnerà la sua "memoria" originale. Ciò si evidenzia a pressioni e temperature basse.



Web: www.unidomo.de

Telefon: 04621- 30 60 89 0

Mail: info@unidomo.com

Öffnungszeiten: Mo.-Fr. 8:00-17:00 Uhr

VIESSMANN



 **Vaillant**

WOLF

 **JUNKERS**  **BOSCH**

 **remeha**

 **DAIKIN**

ROTEX
a member of DAIKIN group



Individuelle Beratung



Kostenloser Versand



Hochwertige Produkte




Komplettpakete



Über 15 Jahre Erfahrung



Markenhersteller

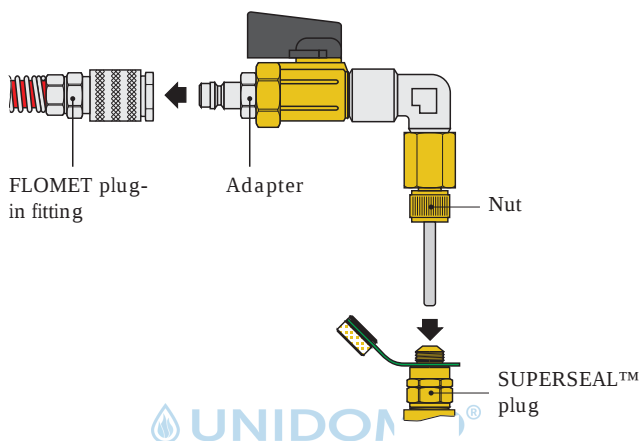

Mounting and using instruction

- 1) Connect the adapter to the fittings of the FLOMET meter.
- 2) Wear protecting glasses when using the plugs.
- 3) Slowly remove the cap, make sure there is no leaking.
- 4) Clean possible impurities on the adapter orifice.
- 5) If needed, apply some silicone grease on the probe, especially if used for the first time, in order to make the introduction easier.
- 6) Slowly insert the probe.
- 7) Screw the probe nut on the SUPERSEAL™ pressure plug to prevent ejection.
Once the necessary readings and balancing are done, take cautiously the probe out, and put the cap back.

Note: if the probe is left inside the valve for a long time and then removed, the valve will leak until the rubber system will recover its original memory. This situation occurs at low pressures and low temperatures.