



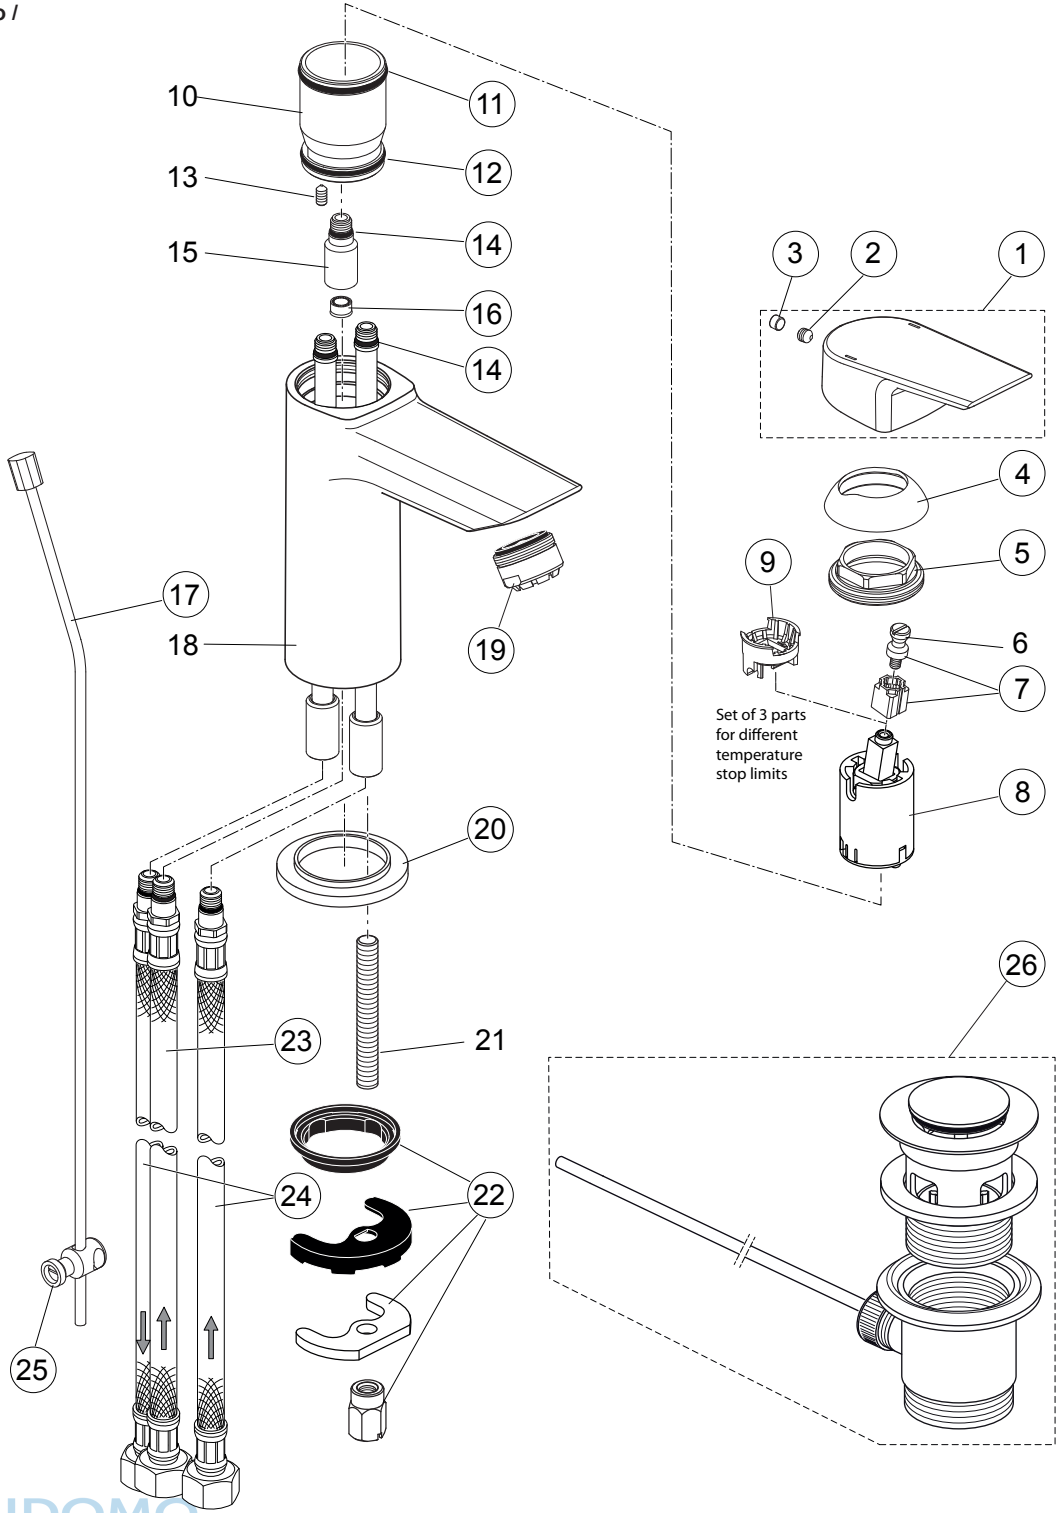


Spare Parts / Ersatzteile / Pièces de recharge / Pezzi di Ricambio / Piezas de requesto /
Parte de reposição / Reserveonderdelen / Reservdelar / Reservedeler / Varaosat /
Vraosat / Varahlutir / Ανταλλακτικά / Yedek Parçalar / Náhradní díly / Náhradné diely /
Nadomestni deli / Резервни части / Запчасти / Części Zapasowe / Piese de schimb /
Rendelhető alkatrészek / Запасні частини / Reservní delovi / Резервни делови /
Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezervju daļu

Pos.	Part No.
1	A 861 018 AA
2	A 860 603 NU
3	A 963 751 NU
4	F 960 975 AA
5	B 961 087 NU
7	A 860 892 NU
8	F 960 855 NU
9	B 961 088 NU
11	A 963 299 NU
12	A 962 825 NU
14	A 860 009 NU
16	A 860 984 NU
17	B 961 119 AA
19	A 960 935 AA
20	B 960 712 AA
22	A 964 520 NU
23	A 963 600 NU
24	A 961 172 NU
25	A 962 991 AA








UNIDOMO

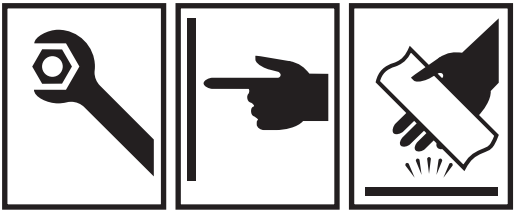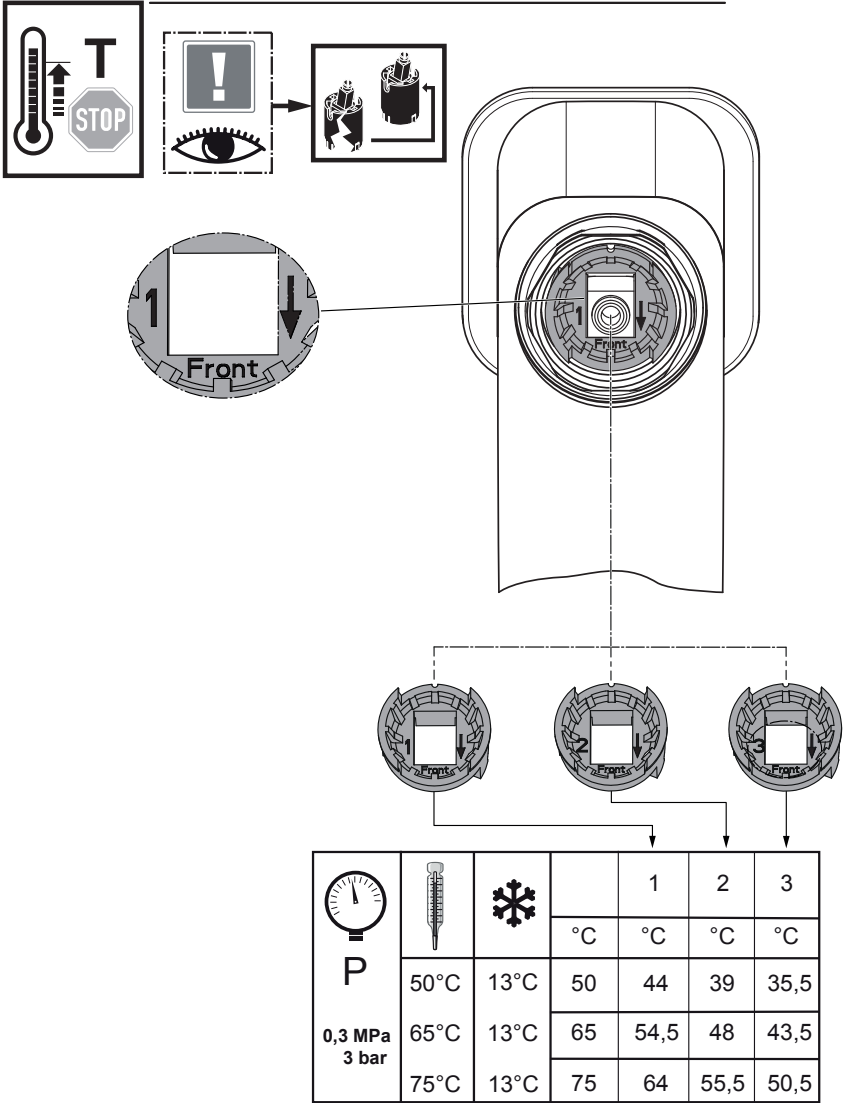

Tesi
A6556 .. A6562 ..

Ideal Standard

0820 / A 868 721
Made in Germany

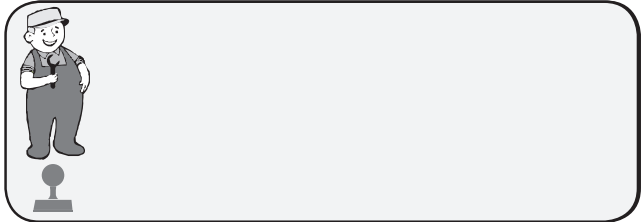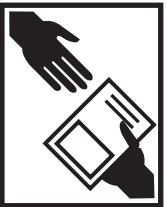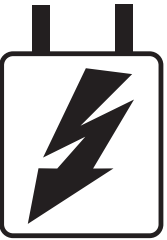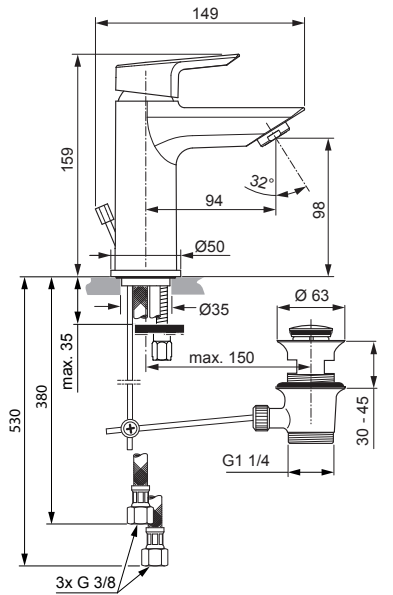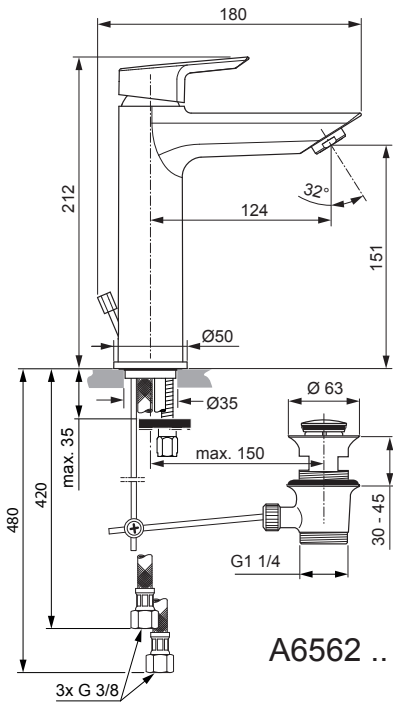

Ideal Standard International NV
Corporate Village - Gent Building
Da Vincilaan 2
1935 Zaventem
Belgium

www.idealstandardinternational.com



Web: www.unidomo.de

Telefon: 04621- 30 60 89 0

Mail: info@unidomo.com

Öffnungszeiten: Mo.-Fr. 8:00-17:00 Uhr

VIESSMANN



 **Vaillant**

WOLF

 **JUNKERS**  **BOSCH**

 **remeha**




 **DAIKIN**

ROTEX
a member of DAIKIN group





-  Individuelle Beratung
-  Kostenloser Versand
-  Hochwertige Produkte

-  Komplettpakete
-  Über 15 Jahre Erfahrung
-  Markenhersteller

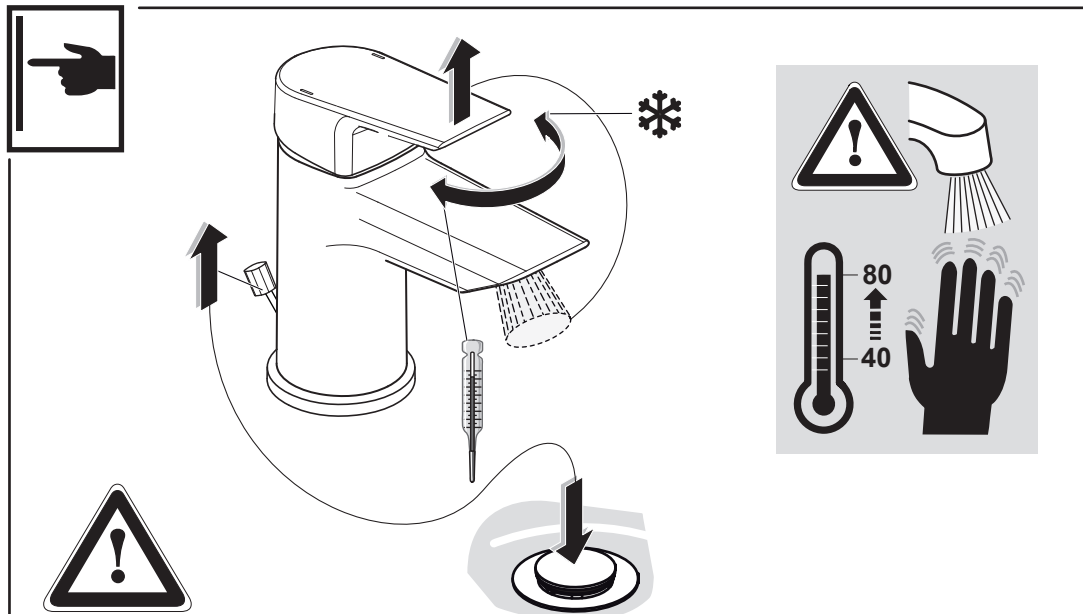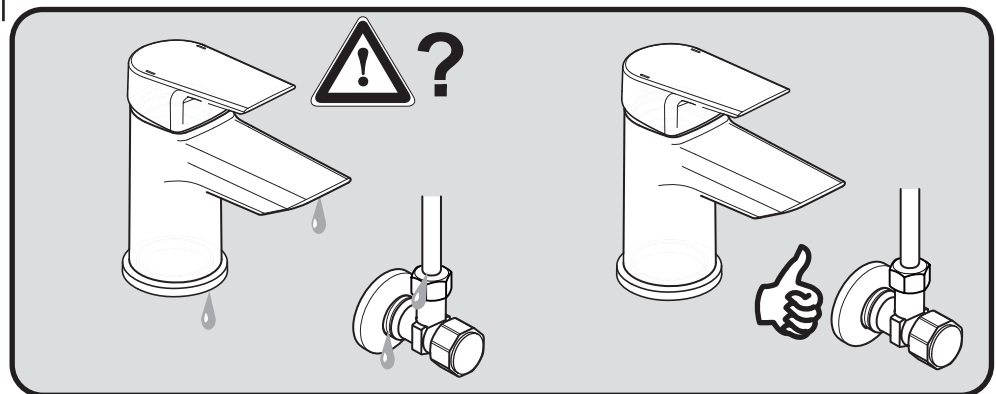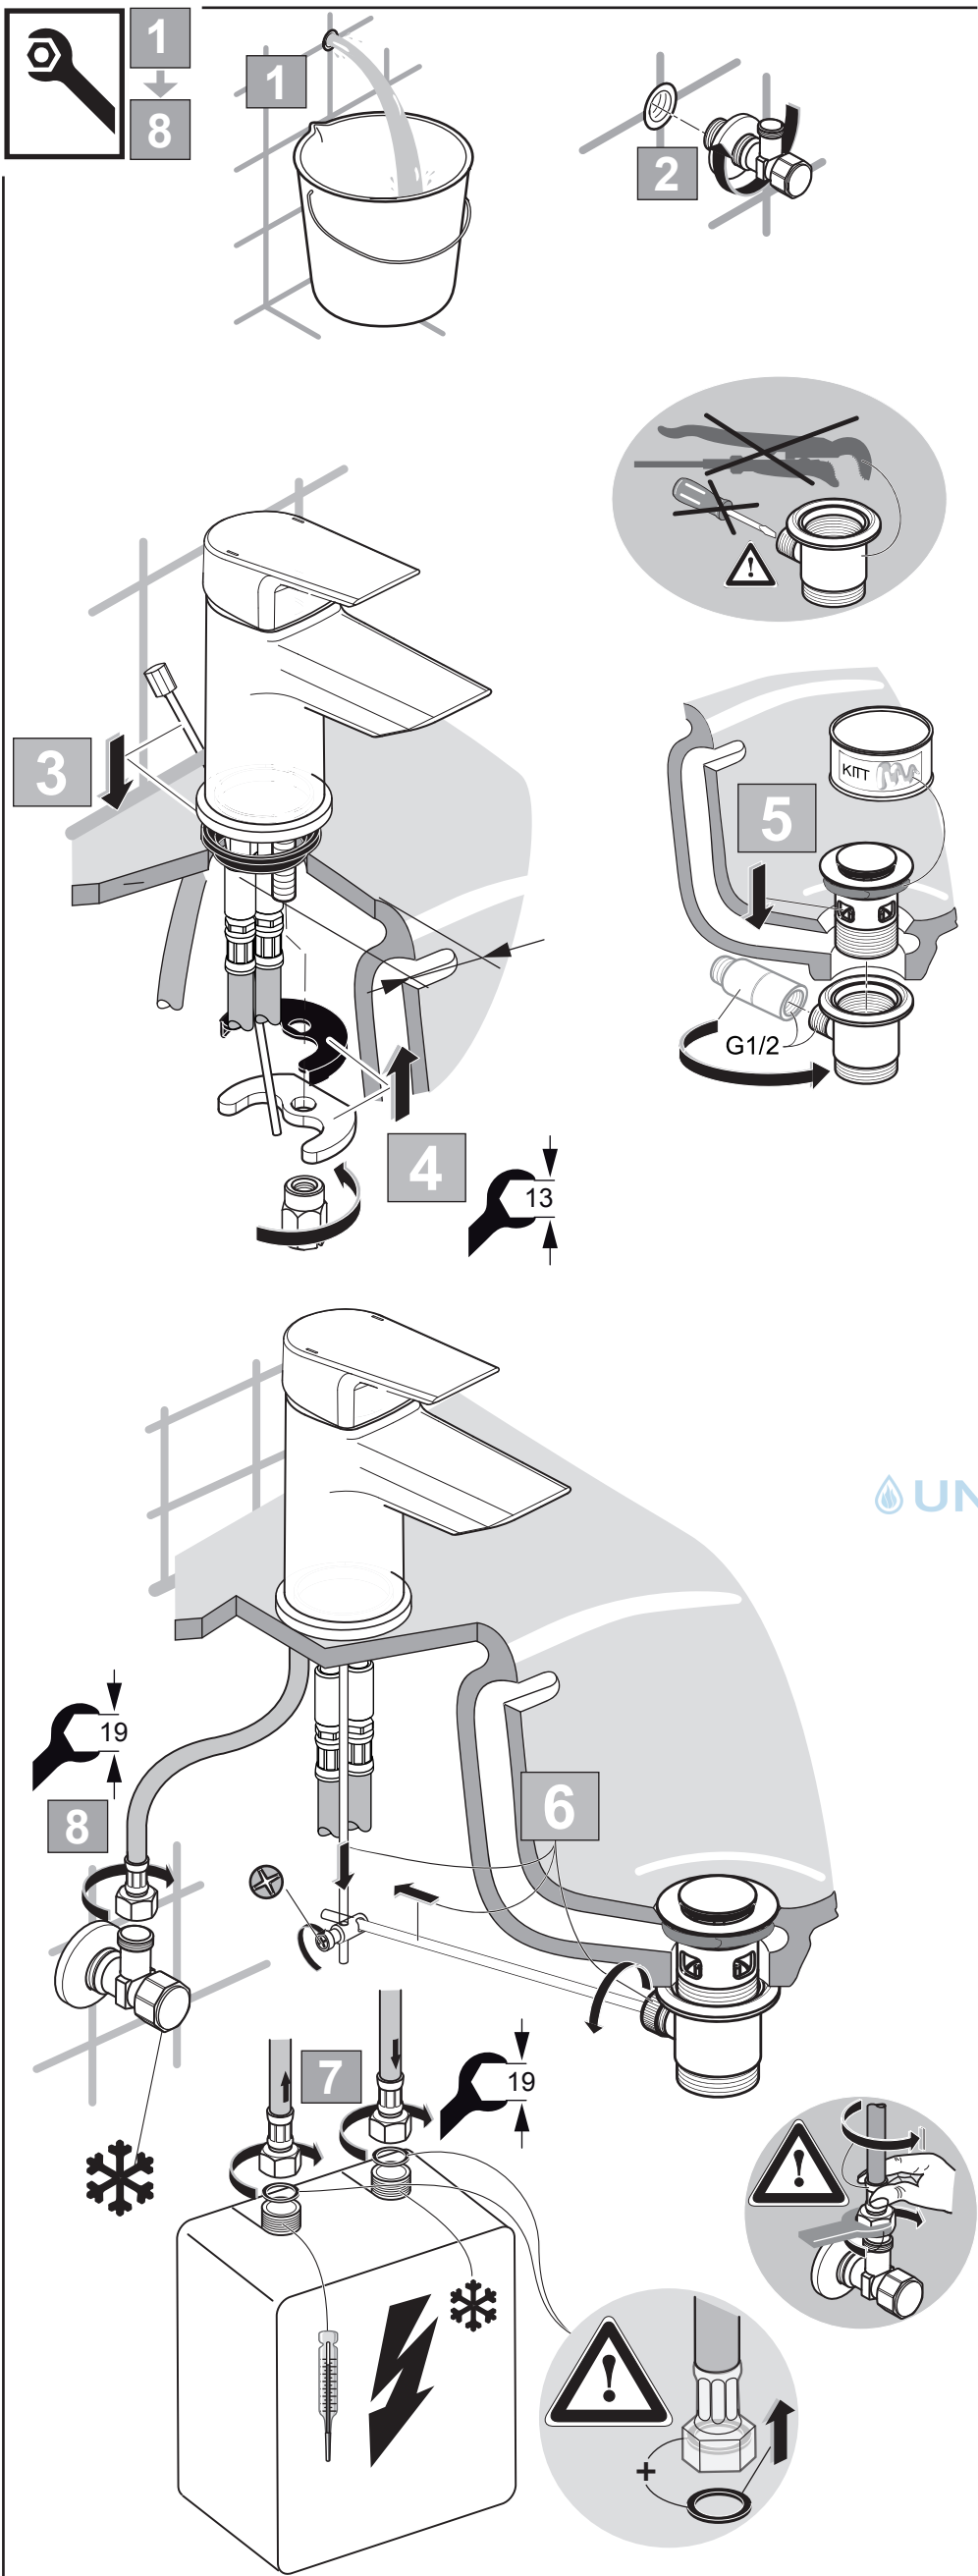

Es ist systembedingt, daß während der Aufheizzeit Wasser durch Ausdehnung am Auslauf abtropft.
Dieser freie Austritt verhindert einen Druckanstieg im Speicher.
Es darf deshalb niemals der Auslauf verschlossen werden. Der Einbau eines Luftsprudlers
oder Schlauches mit Strahlregler ist nicht zulässig. Der im Batteriekörper eingebaute
Durchflußbegrenzer macht die Armatur unabhängig vom vorhandenen Wasserdruck.
Einregulieren der Wassermenge ist nicht erforderlich. Der Durchflußbegrenzer darf nicht entfernt werden!

As the water heats up, it will expand & possibly discharge through the outlet.
This water discharge is normal to prevent pressure damage to the hot water vessel.
DO NOT close this outlet. Aerator or hose with flow-straighter should not be used either.
The built in flow limiter regulates the supply water pressure, therefore it is not necessary to use
other regulating devices to control the flow. DO NOT remove the flow limiter!

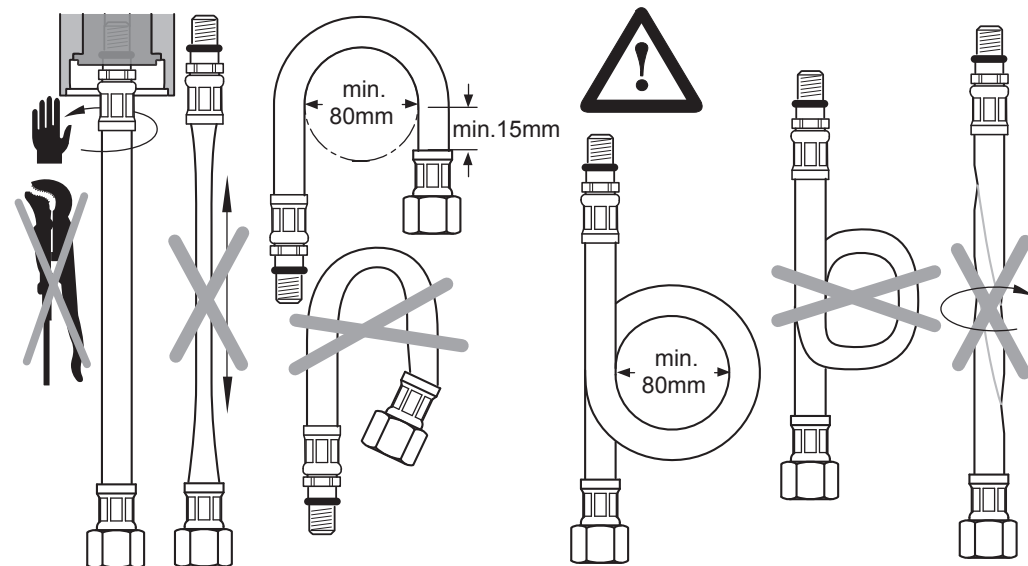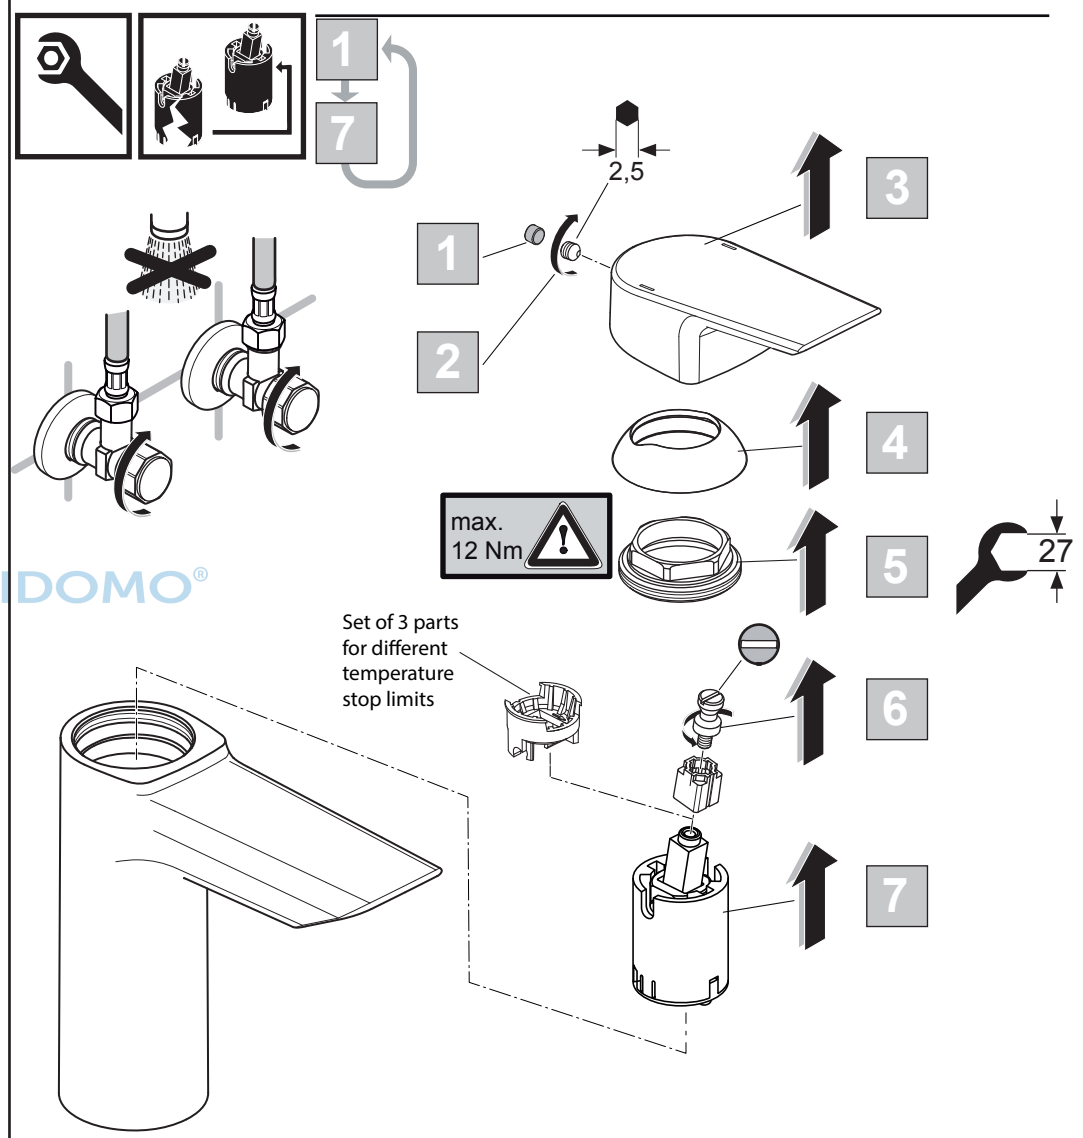

	P	bar		MAX. 10		5		Q (3 bar)
	T	°C		MAX. 80		65 40		I/min
								6