




cliQlock Basismodul | Basic module


de Montageanleitung en Mounting Instructions




Abmessungen | Dimensions

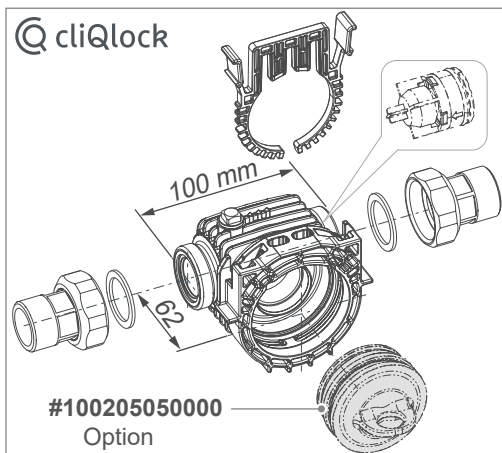


DN 20 ($\frac{3}{4}$ ")
#101000070000

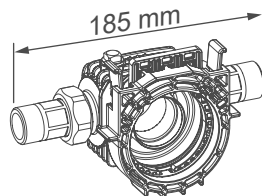


DN 25 (1")
#101000080000

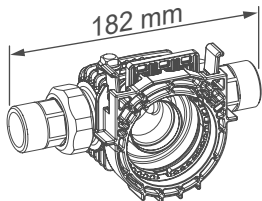


DN 32 (1 $\frac{1}{4}$ ")
#101000090000

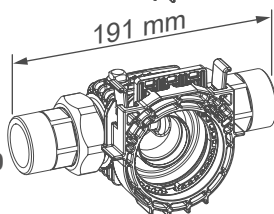


Einbaumöglichkeiten | Installation options ▶ nur Fachkraft | qualified specialists only

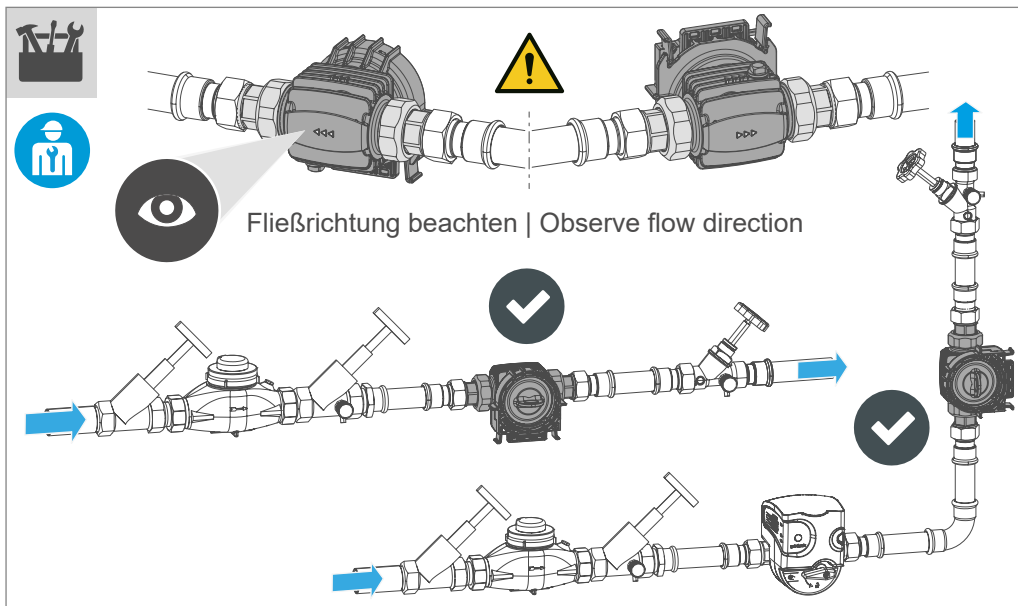


Anschlussverschraubung in Rohrleitung installieren | Installing the screw connection in the pipe

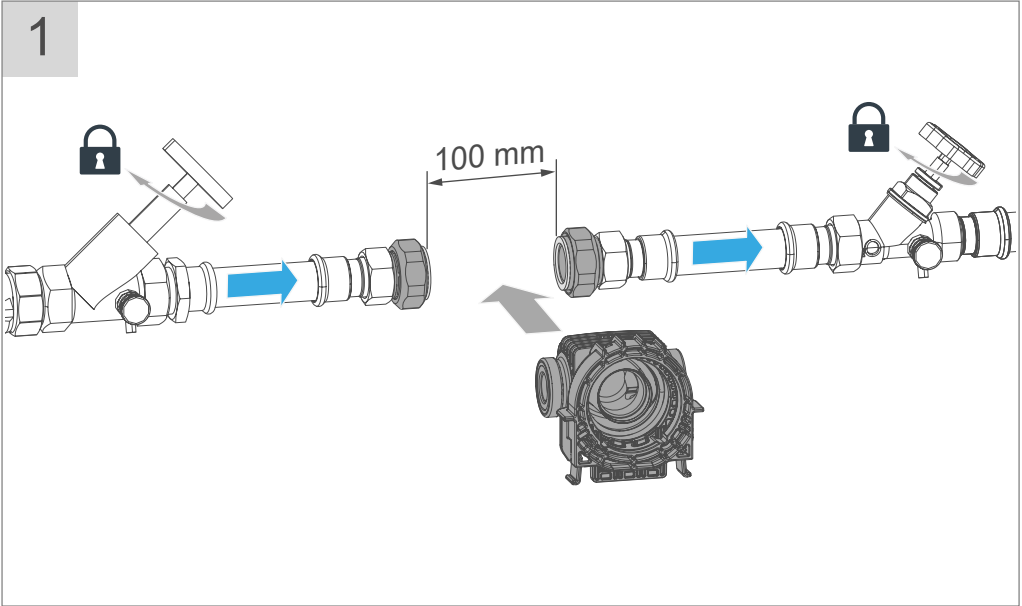


Basismodul befestigen | Fastening the basic module

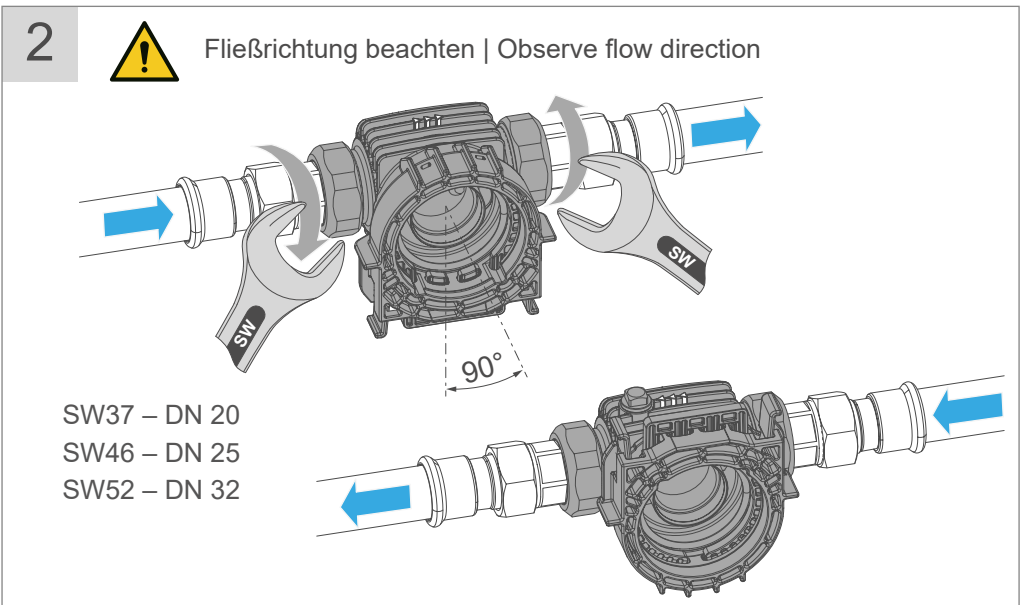


Verschlusskappe anbringen | Attaching the cap

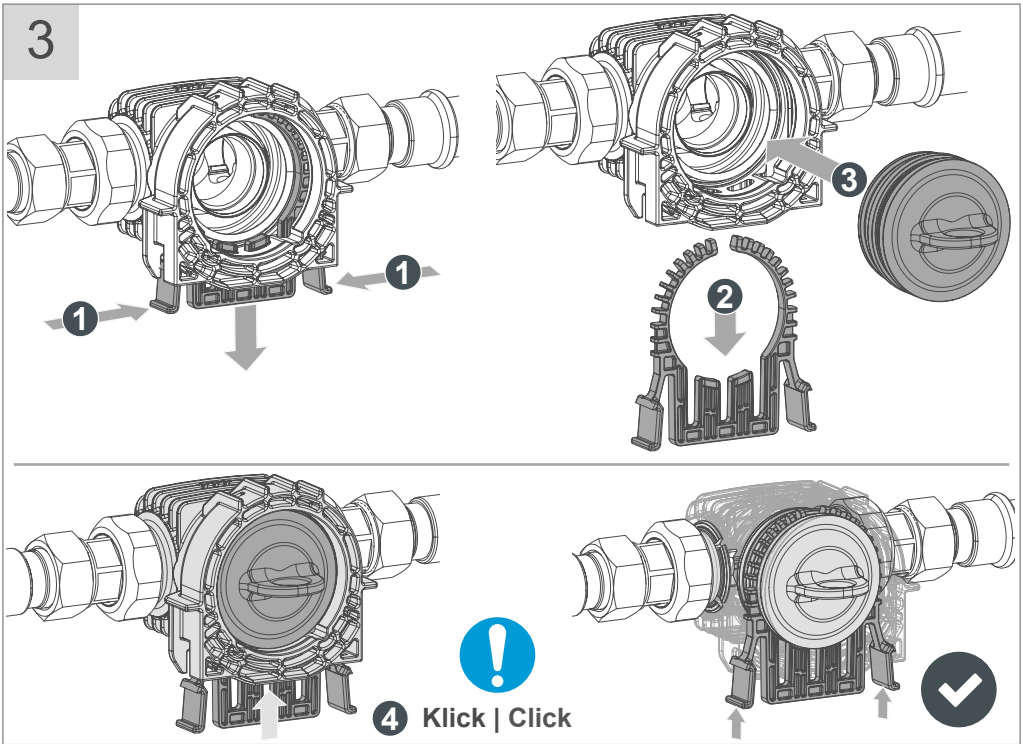

Dichtheit prüfen | Checking for leaks

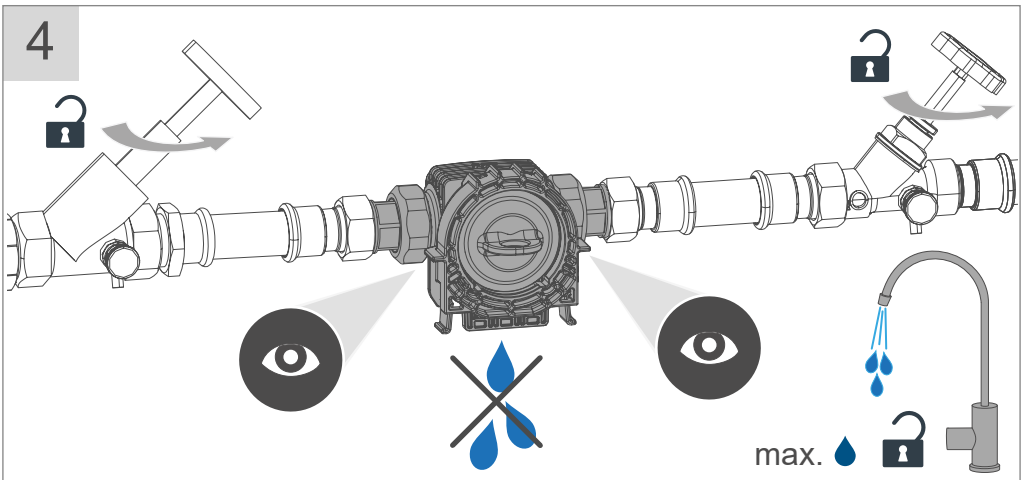

Basismodul für Enthärtungsanlage und Filter montieren | Mounting the basic module for the water softener and the filter

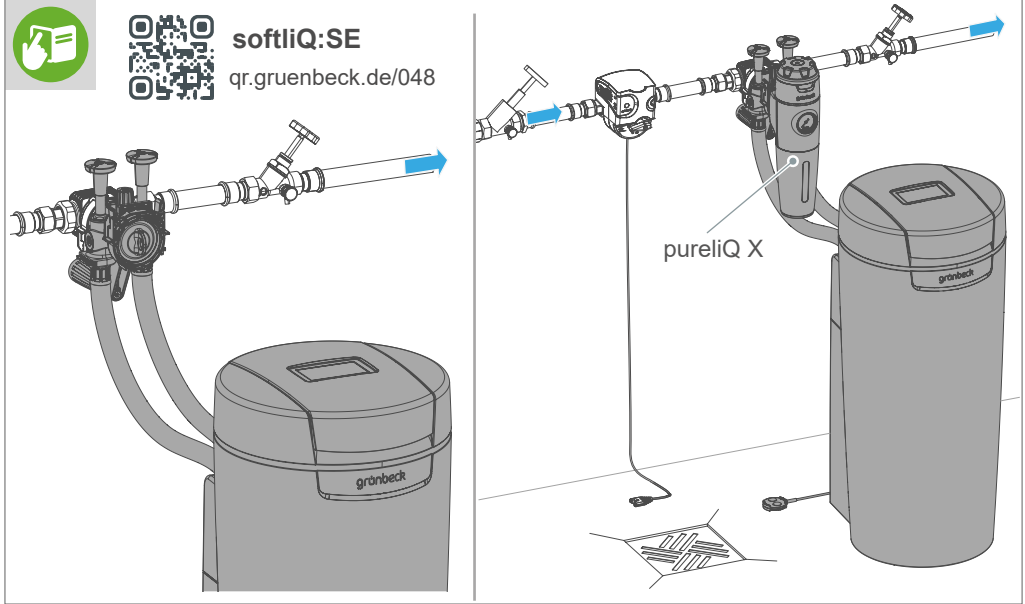

Filter montieren | Installing the filter **pureliQ X**

