

Badheizkörper

MIDO Q

2018.02

Montageanleitung

Assembly instructions

Instructions de montage

Istruzioni di montaggio

Instrucciones de montaje

Instrucțiuni pentru montare

BEMM
Qualitäts Heizkörper

Service:

BEMM GmbH







Postfach 10 01 44

D-31101 Hildesheim



Fon +49(0) 51 21 / 93 00 - 0

Fax +49(0) 51 21 / 93 00 84




eMail info@bemm.de

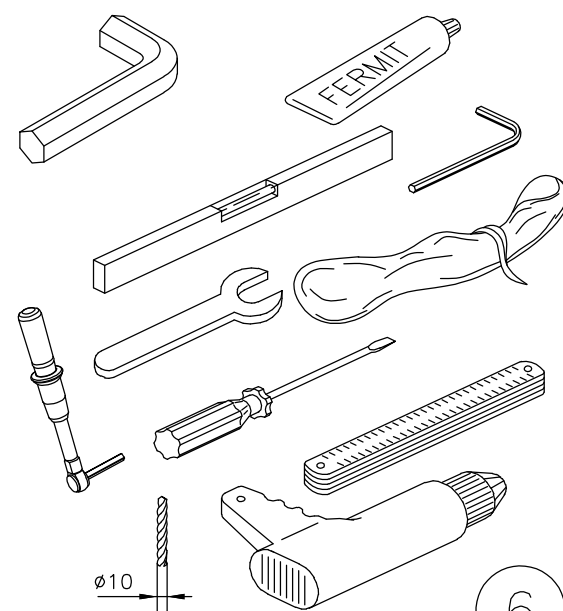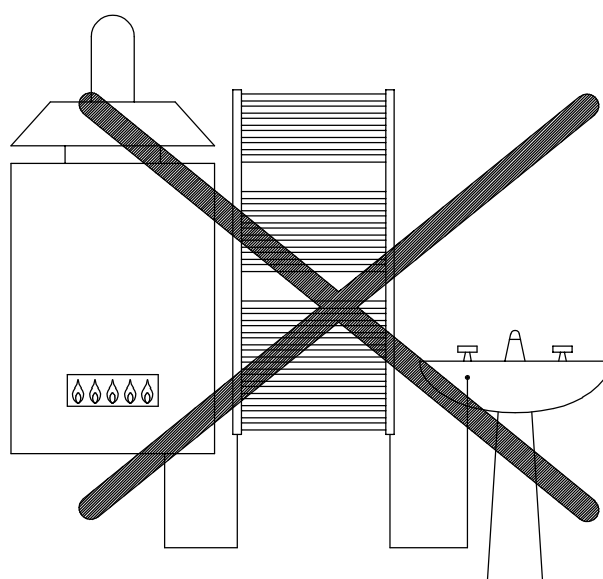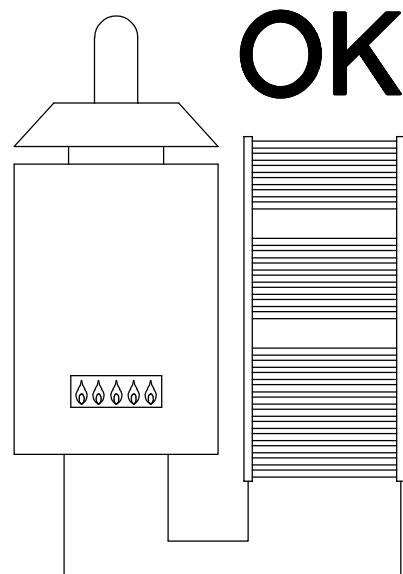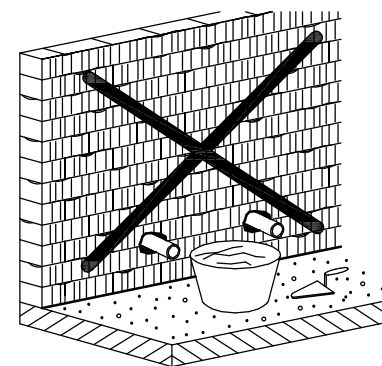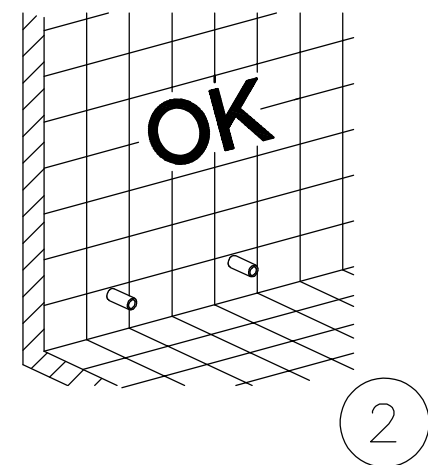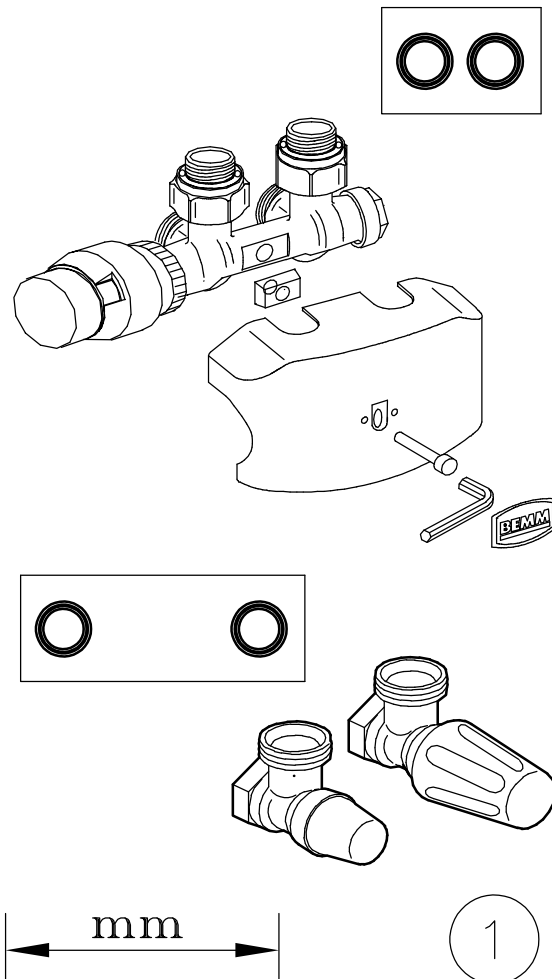

A

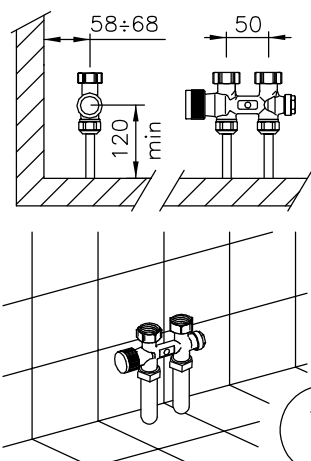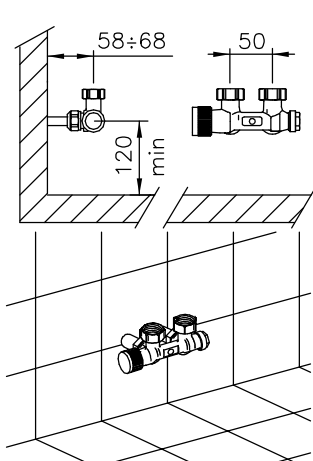

B

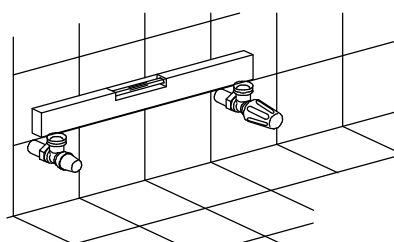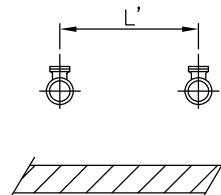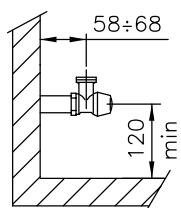

4x

4x

4x

4x

4x

4x

4x

4x

4x

4x

4x

4x

4x

4x

4x

4x

4x

4x

Befestigungen zur Verwendung auf Vollziegel/Hochlochziegel.
Fissaggi da utilizzare solo su pareti in muratura piena/forata.
Brackets to be used only on walls made of solid bricks/perforated bricks.
Fixations à utiliser uniquement sur les murs en maçonnerie pleine/perforée.
Fijaciones a utilizar únicamente en paredes de Ladrillo macizo/perforado.
Fixaje pentru utilizare doar pe pereți în zidărie plină/perforată.

4x

4x

4x

4x

4x

4x

4x


4x

4x

4x

4x

4x

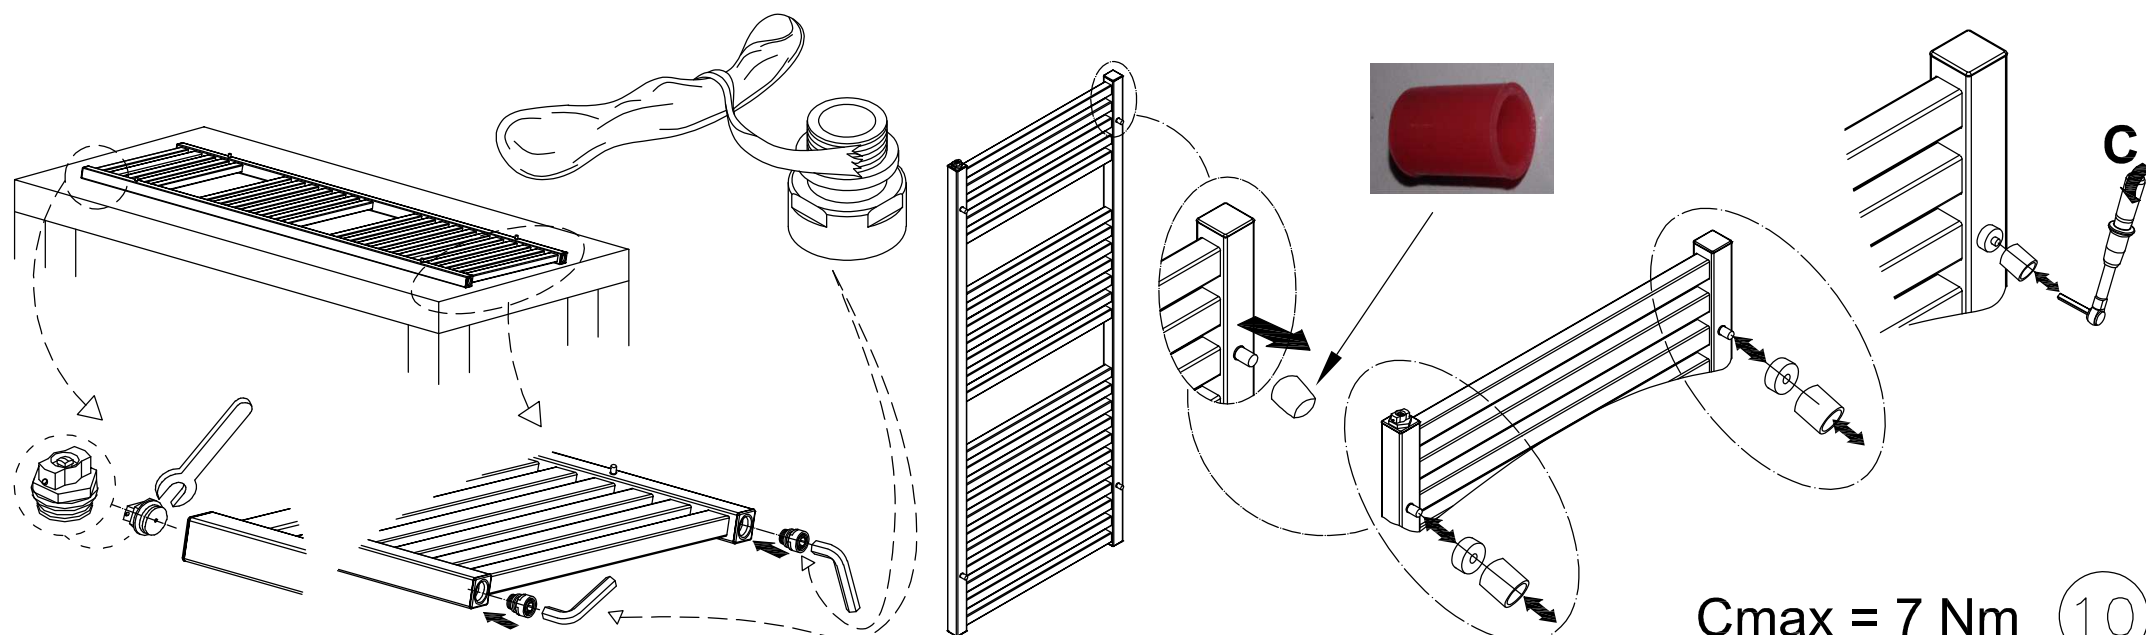

Cmax = 7 Nm

10



Ihr Online-Fachhändler für:

- Kostenlose und individuelle Beratung
- Hochwertige Produkte
- Kostenloser und schneller Versand
- TOP Bewertungen
- Exzelerter Kundenservice
- Über 20 Jahre Erfahrung



E-Mail: info@unidomo.de | Tel.: 04621 - 30 60 89 0 | www.unidomo.de

H	X	L	L'
872	559	400	370
		500	470
		600	570
		750	720
1216	903	400	370
		500	470
		600	570
		750	720
1517	1204	400	370
		500	470
		600	570
		750	720
1818	1505	400	370
		500	470
		600	570