


**Montageanleitung
Assembling Instruction**

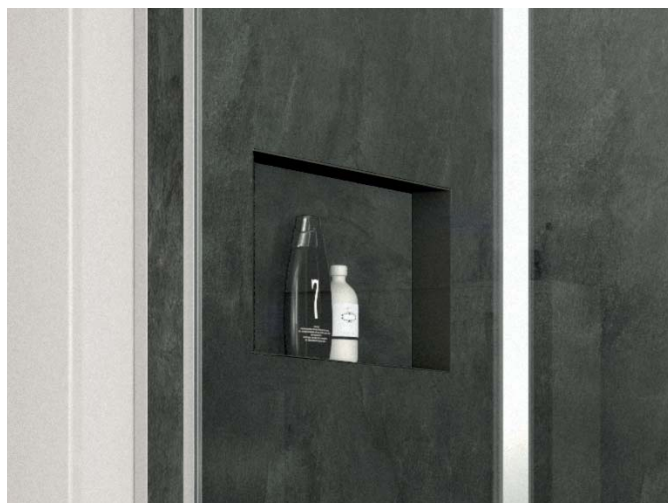

Shower for life



Web: www.unidomo.de

Telefon: 04621- 30 60 89 0

Mail: info@unidomo.com

Öffnungszeiten: Mo.-Fr. 8:00-17:00 Uhr

VIESSMANN



 **Vaillant**

WOLF

 **JUNKERS**  **BOSCH**

 **remeha**

 **DAIKIN**

ROTEX
a member of DAIKIN group



Individuelle Beratung



Kostenloser Versand



Hochwertige Produkte



Komplettpakete




Über 15 Jahre Erfahrung




Markenhersteller

VINATA STYLE RIGHT

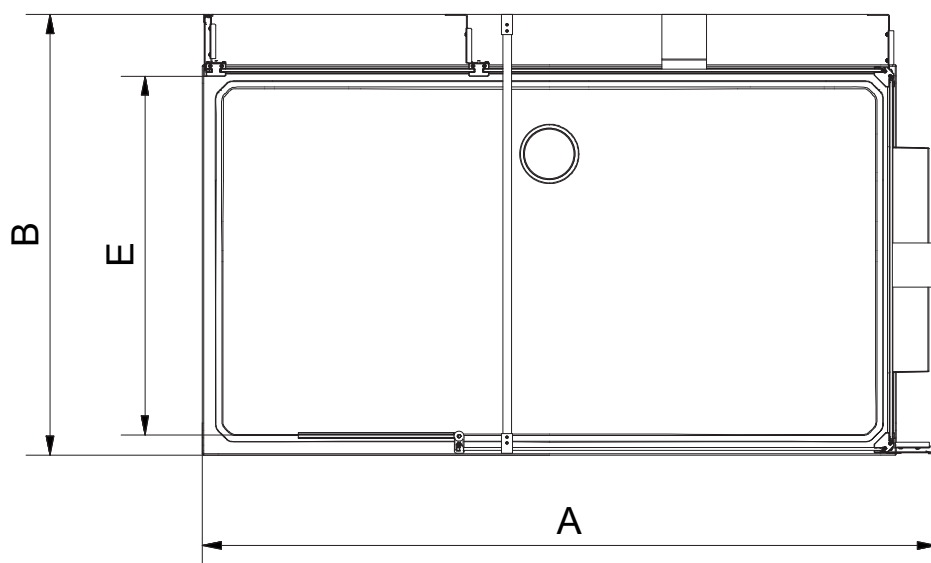

VINATA STYLE LEFT

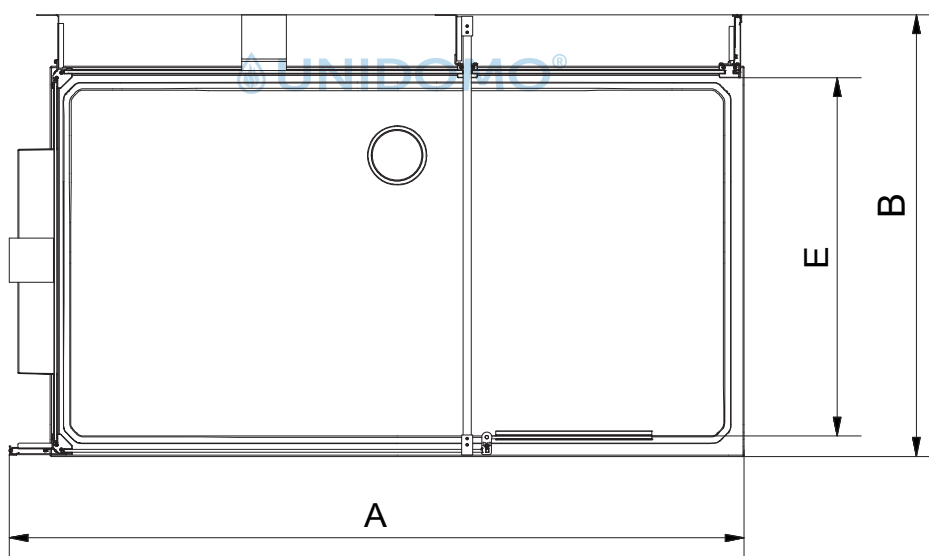

Dimension [mm]	A [mm]	B [mm]	E [mm]
777x1160x2000	1235÷1249	817÷890	705
777x1360x2000	1435÷1449	817÷890	705
777x1560x2000	1635÷1649	817÷890	705
777x1660x2000	1735÷1749	817÷890	705
877x1160x2000	1235÷1249	917÷990	805
877x1360x2000	1435÷1449	917÷990	805
877x1560x2000	1635÷1649	917÷990	805
877x1660x2000	1735÷1749	917÷990	805


Accessories

1

Tray width	Id.	Pc
Under and 1360 mm	VS00001	1x
Over 1360 mm	VS00002	1x

1. 1-1

Siphon drain 1x
8100034

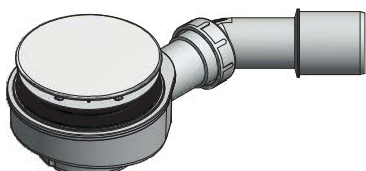


2. 1-2

Fittings for mixer 1x
MA7363



3. 1-3


PSE block 2x
PSE block with tape 2x
MA9459

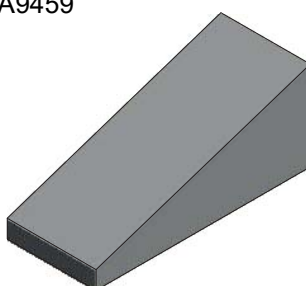


4. Anchors to the wall

P5283 1x for shower tray width 1160mm
P5284 1x for shower tray width over 1360mm


UNIDOMO®



1-4a
MA8664
1x for P5283
1x for P5284

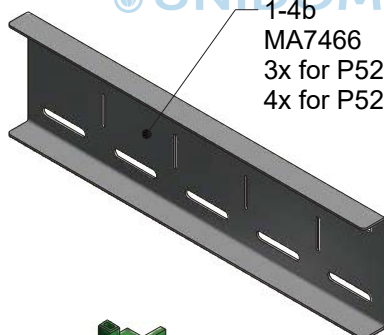

1-4b
MA7466
3x for P5283
4x for P5284

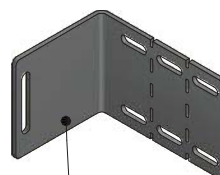

1-4c
MA7130
1x for P5283
2x for P5284




1-4d
MA7131
2x for P5283
2x for P5284



1-4e
MA7132
0x for P5283
1x for P5284



1-4f
MA6971
1x for P5283
3x for P5284

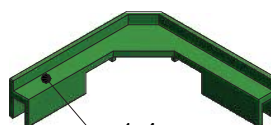

1-4g
MA6970
2x for P5283
2x for P5284

1-4h
MA7508, M4x10
18x for P5283
24x for P5284



1-4i
M0761, M4
12x for P5283
16x for P5284



1-4j
M0768, 4,3
12x for P5283
16x for P5284




1-4k
M0511
2x for P5283
4x for P5284



1-4l
M0811
2x for P5283
4x for P5284


Shower tray

Dimension [mm]	Anthracite	Beige	White	Pc
1160x777	VS21001	VS21021	VS21041	1x
1160x877	VS21002	VS21022	VS21042	1x
1360x777	VS21003	VS21023	VS21043	1x
1360x877	VS21004	VS21024	VS21044	1x
1560x777	VS21005	VS21025	VS21045	1x
1560x877	VS21006	VS21026	VS21046	1x
1660x777	VS21007	VS21027	VS21047	1x
1660x877	VS21008	VS21028	VS21048	1x

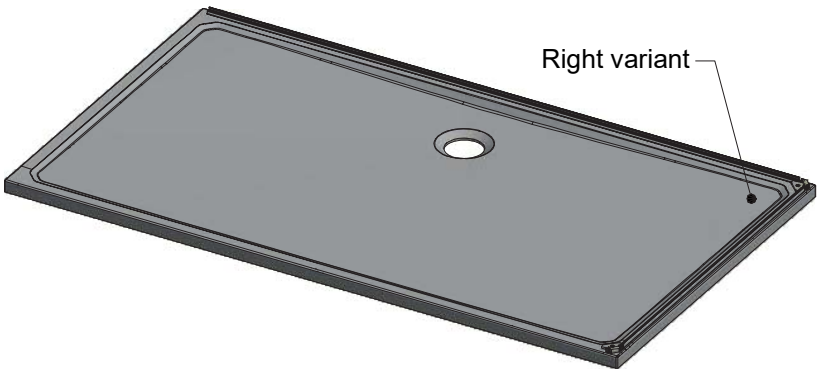

UNIDOMO®


Dimension [mm]	Anthracite	Beige	White	Pc
1160x777	VS20001	VS20021	VS20041	1x
1160x877	VS20002	VS20022	VS20042	1x
1360x777	VS20003	VS20023	VS20043	1x
1360x877	VS20004	VS20024	VS20044	1x
1560x777	VS20005	VS20025	VS20045	1x
1560x877	VS20006	VS20026	VS20046	1x
1660x777	VS20007	VS20027	VS20047	1x
1660x877	VS20008	VS20028	VS20048	1x

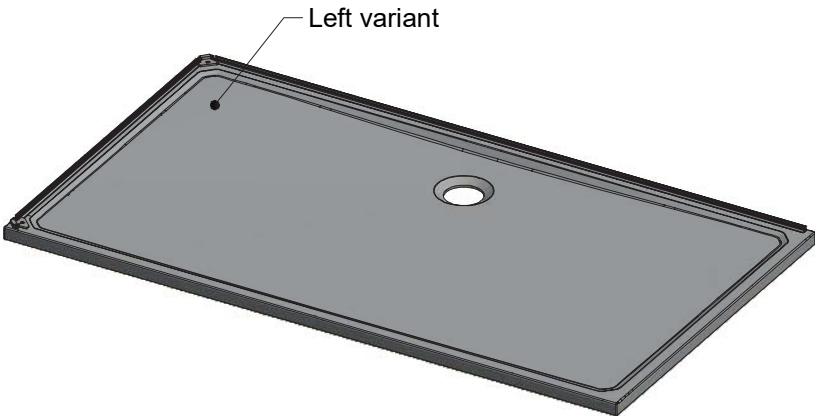

Wall + cover profiles

VS43001


3a

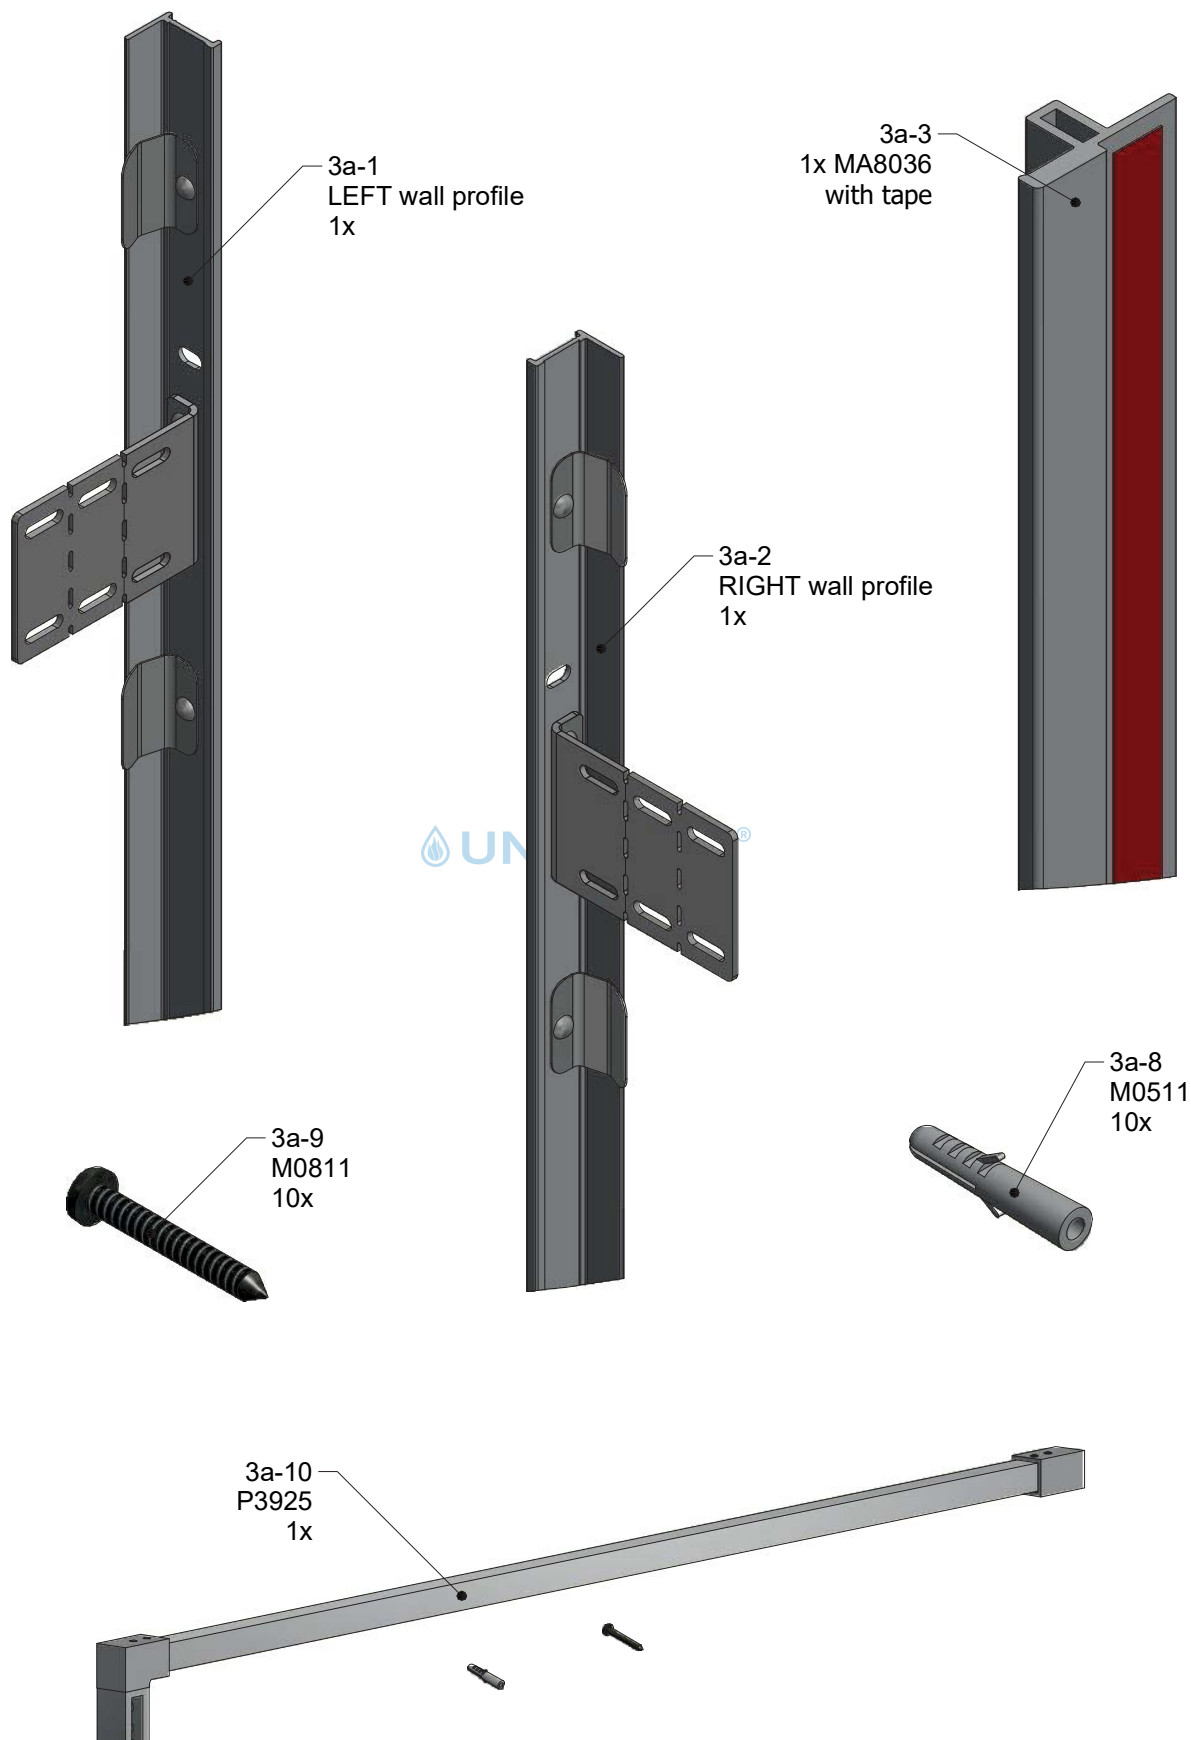

90° back profile set

VI40001

3b

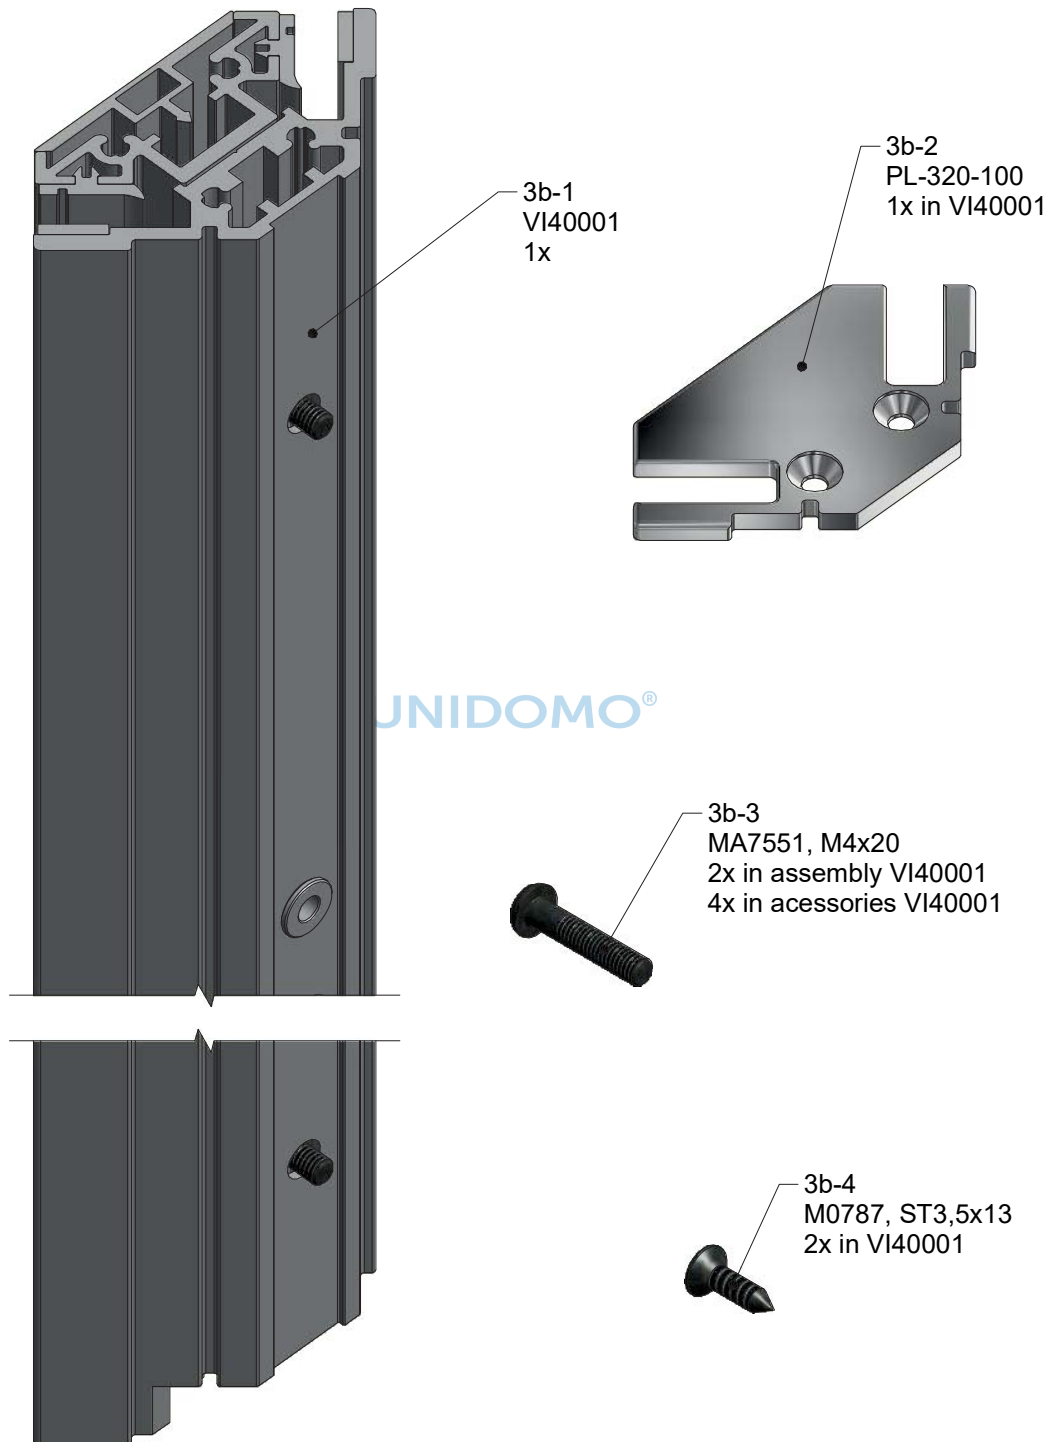

180° back profile set


1x for shower trays width under and 1360 mm

2x for shower trays width over 1360 mm

3c

3d

VI42001

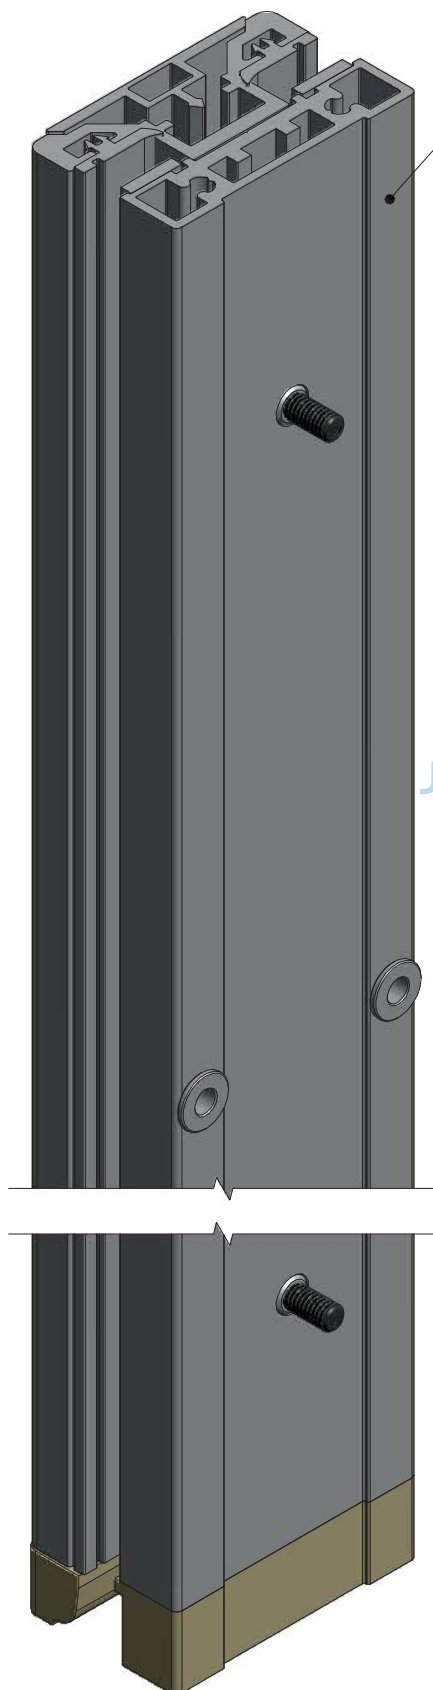

3c-1
VI42001
1x for tray width under and 1360mm
1x for tray width over 1360mm

3d-1
VI42001
0x for tray width under and 1360mm
1x for tray width over 1360mm



3c-2
PL-322-100
1x for tray width under and 1360mm
1x for tray width over 1360mm

3d-2
PL-322-100
0x for tray width under and 1360mm
1x for tray width over 1360mm



3c-3
MA7551, M4x20
6x for tray width under and 1360mm
6x for tray width over 1360mm

3d-3
MA7551, M4x20
0x for tray width under and 1360mm
6x for tray width over 1360mm



3c-4
M0787, ST3,5x13
2x for tray width under and 1360mm
2x for tray width over 1360mm


3d-4
M0787, ST3,5x13
0x for tray width under and 1360mm
2x for tray width over 1360mm

JNIDOMO®

90° front profile set

VI40010

3e

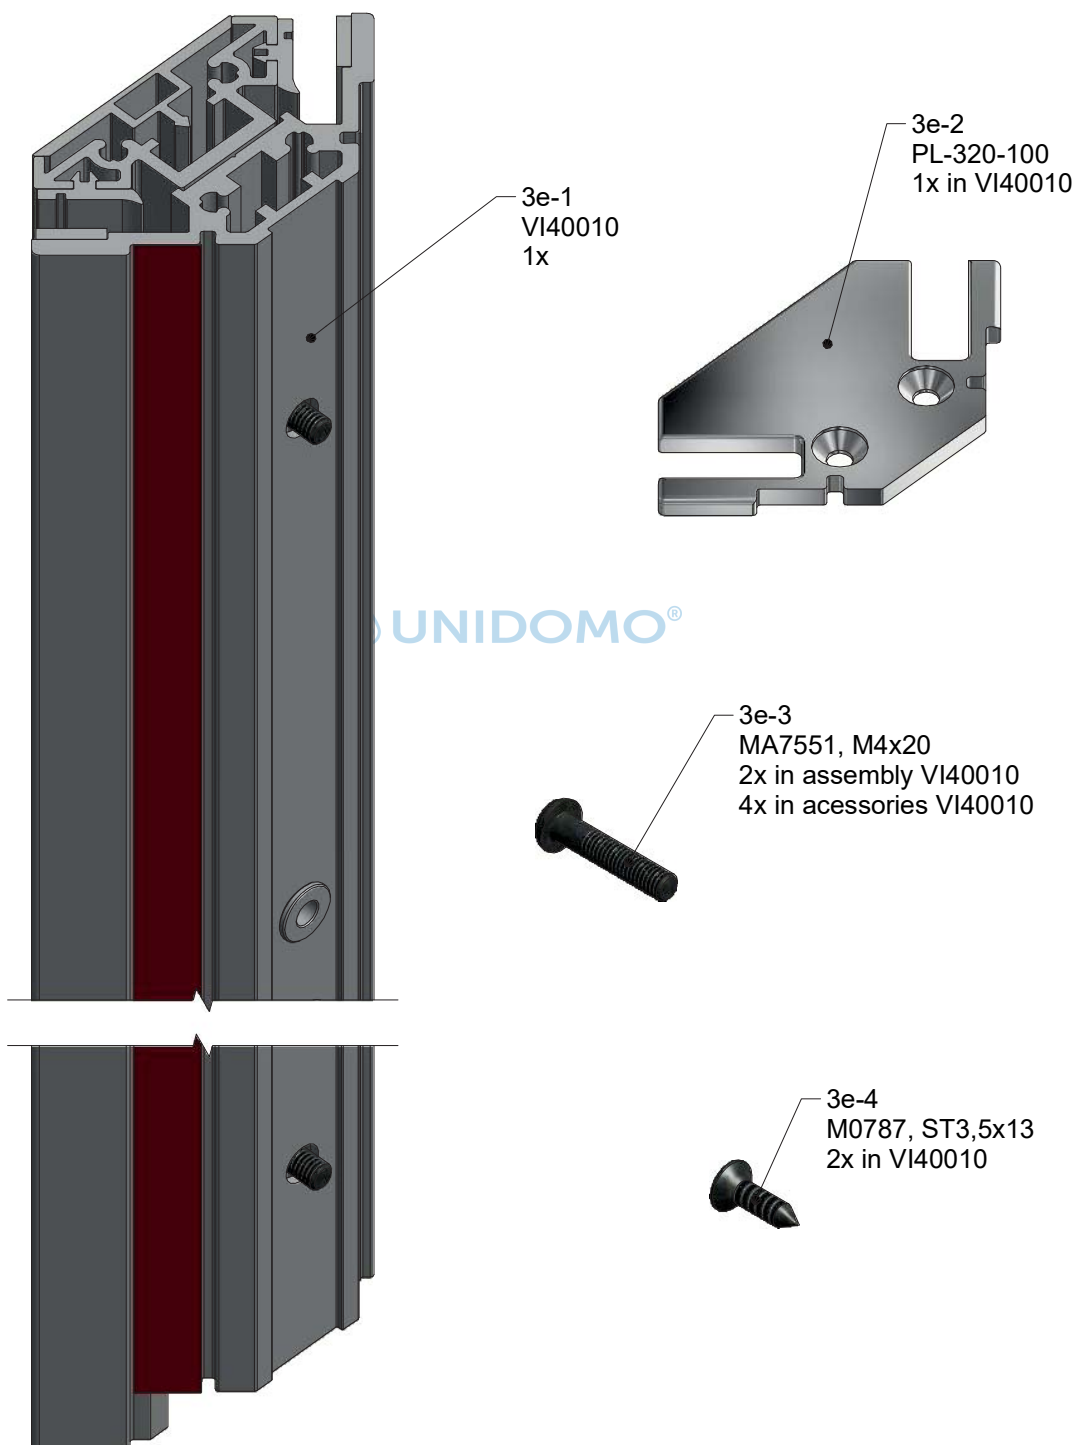

Back desk set

4a

Decor	Tray width 1160mm	Tray width 1360mm	Tray width 1560mm	Tray width 1660mm	Pc
CONCRETE Black	VS51001	VS51002	VS51003	VS51004	1x
CONCRETE Anthracite	VS51021	VS51022	VS51023	VS51024	1x
MARBLE Beige	VS51041	VS51042	VS51043	VS51044	1x
WOOD OAK	VS51061	VS51062	VS51063	VS51064	1x



NIDOMO®

Side desk set (shelf)

4b

Decor	Tray depth 777mm	Tray depth 877mm	Pc
CONCRETE Black	VS52001	VS52002	1x
CONCRETE Anthracite	VS52021	VS52022	1x
MARBLE Beige	VS52041	VS52042	1x
WOOD OAK	VS52061	VS52062	1x



Front glass set

4c


Tray width	Id.	Pc
1160 mm	VS50001	1x
Over and 1360 mm	VS50002	1x



Pivot door

EI TWA 04020 VPE ARGENT POLI V.CL CLEAN

5

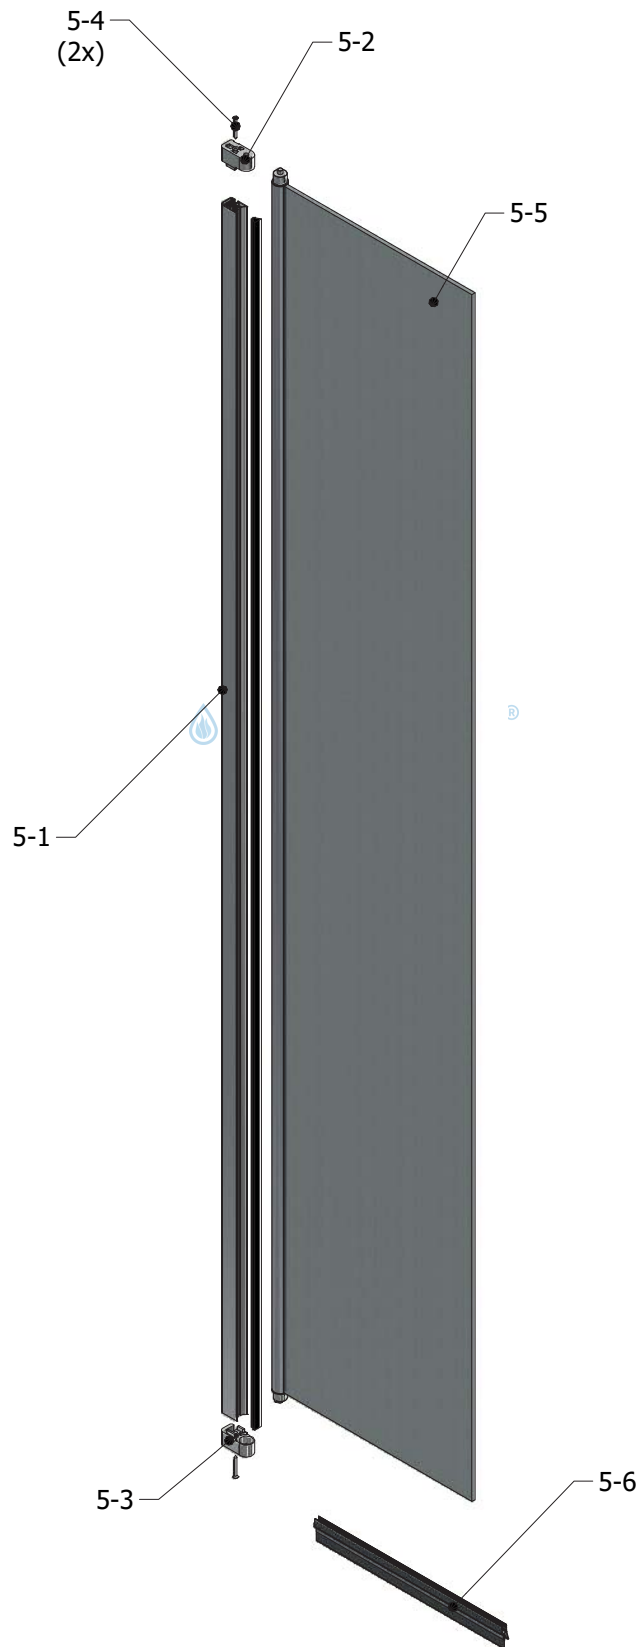


Plastic cover set


6

Decor	Id.	Pc
MARBLE Beige	VS60001	1x
CONCRETE Anthracite	VS60021	1x
CONCRETE Black	VS60041	1x
WOOD OAK	VS60061	1x



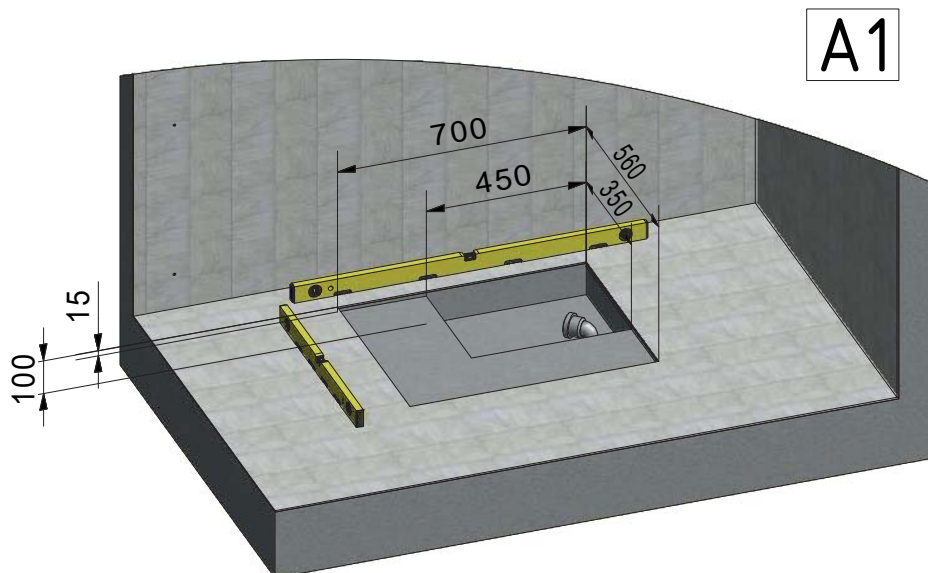




!
 $C = 75 \div 89 \text{ mm}$
!
 $D = 40 \div 113 \text{ mm}$

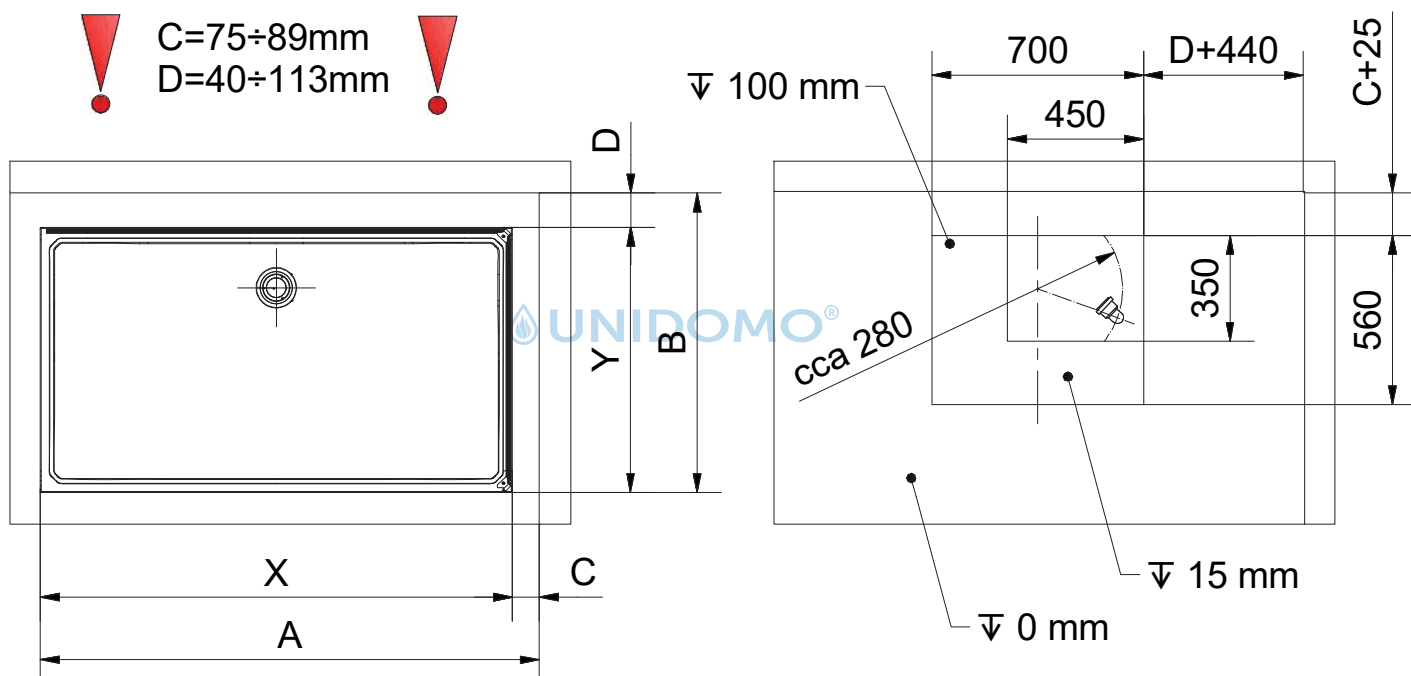

DIMENSION				
TRAY	X [mm]	Y [mm]	A [mm]	B [mm]
1160x777	1160	777	1235÷1249	817÷890
1360x777	1360	777	1435÷1449	817÷890
1560x777	1560	777	1635÷1649	817÷890
1660x777	1660	777	1735÷1749	817÷890
1160x877	1160	877	1235÷1249	917÷990
1360x877	1360	877	1435÷1449	917÷990
1560x877	1560	877	1635÷1649	917÷990
1660x877	1660	877	1735÷1749	917÷990


Parts to be used		
Qty.	Number	BOX
1	2	2
1	1-1	1

! For mounting on supports use the instructions for Plastic cover set first

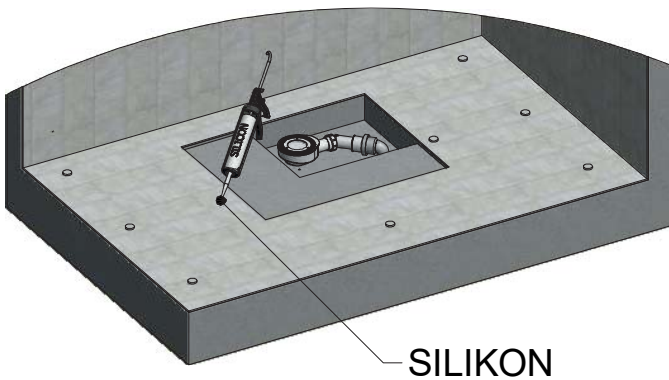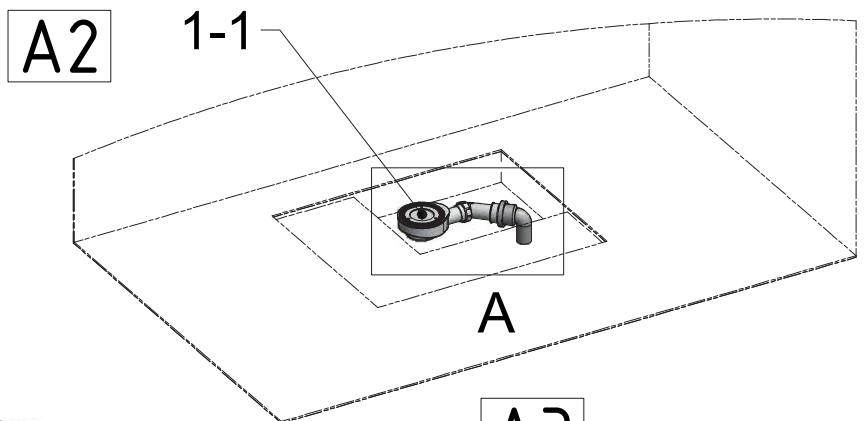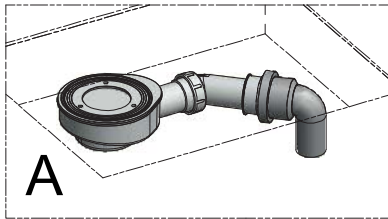

A3


USE SILIKON
OR
RAPID CEMENT ADHESIVE

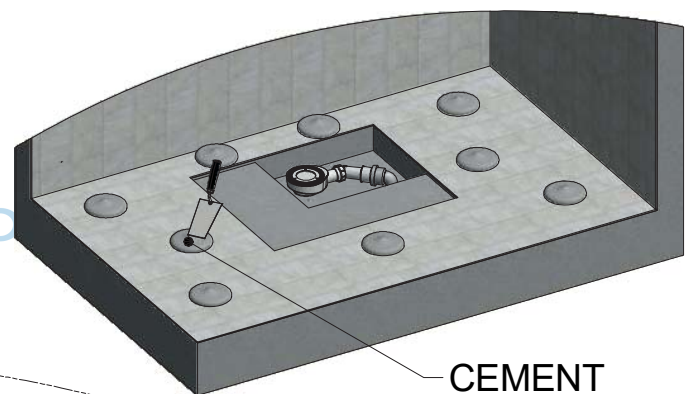



A4

1-1 (Sealing)

2


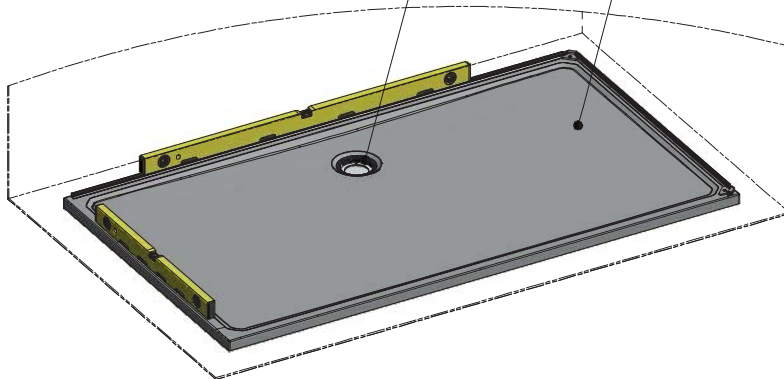


A5

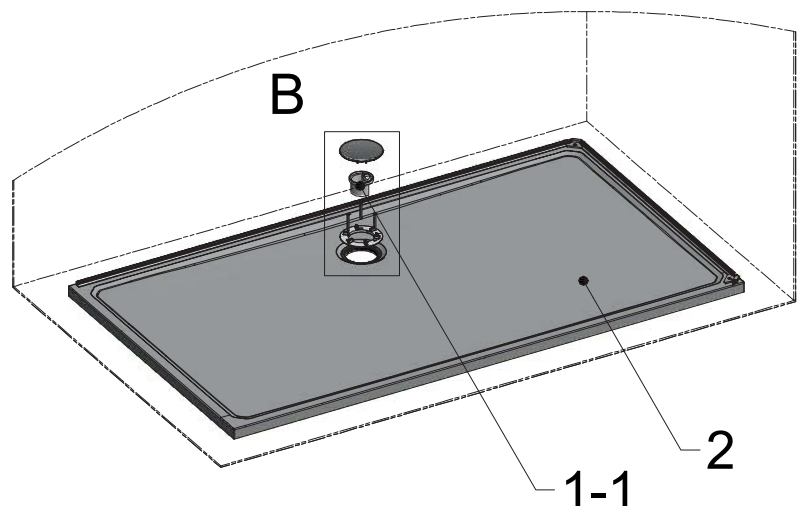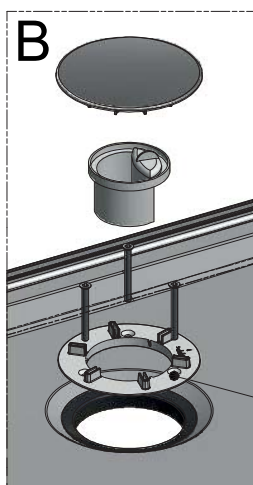


Parts to be used		
Qty.	Number	BOX
1	3a-1	3a
1	3a-2	3a


B1

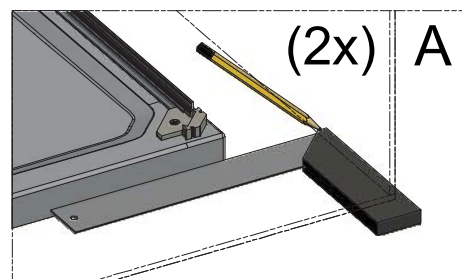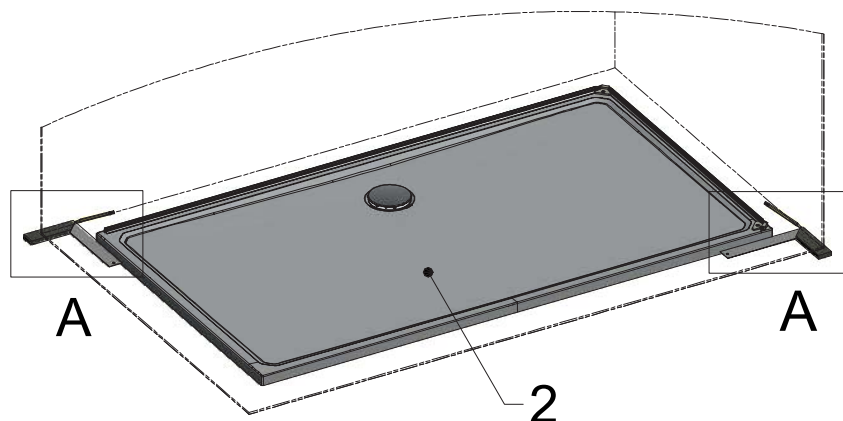


B2

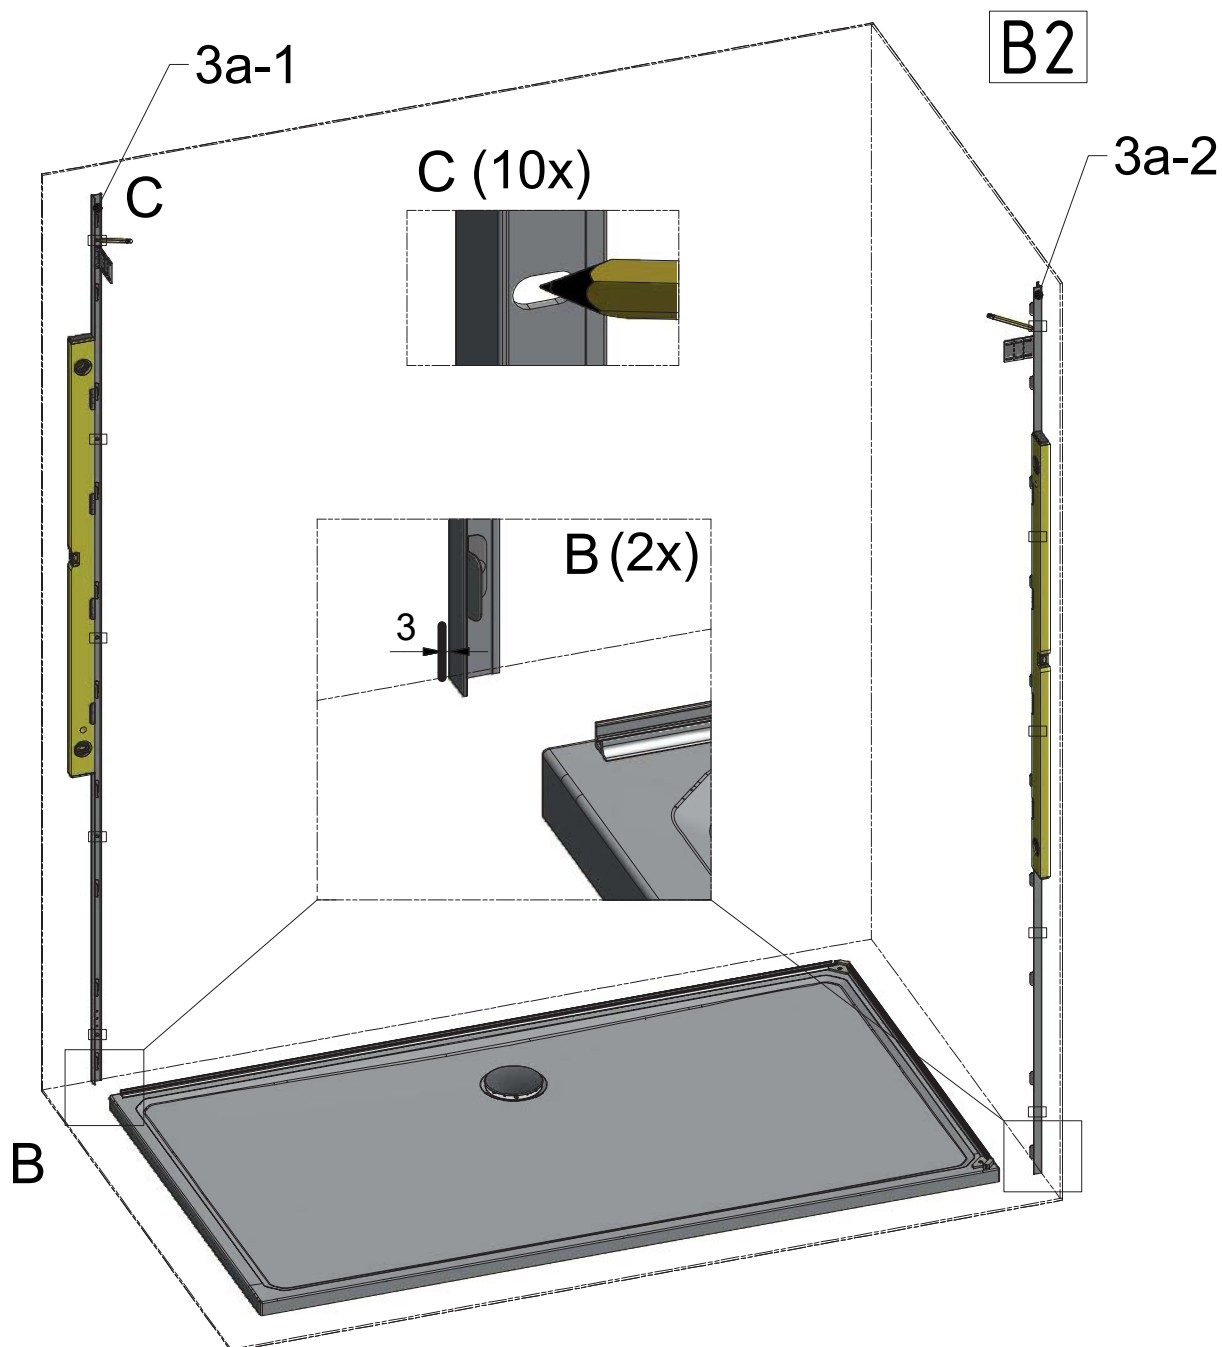

VINATA STYLE RIGHT

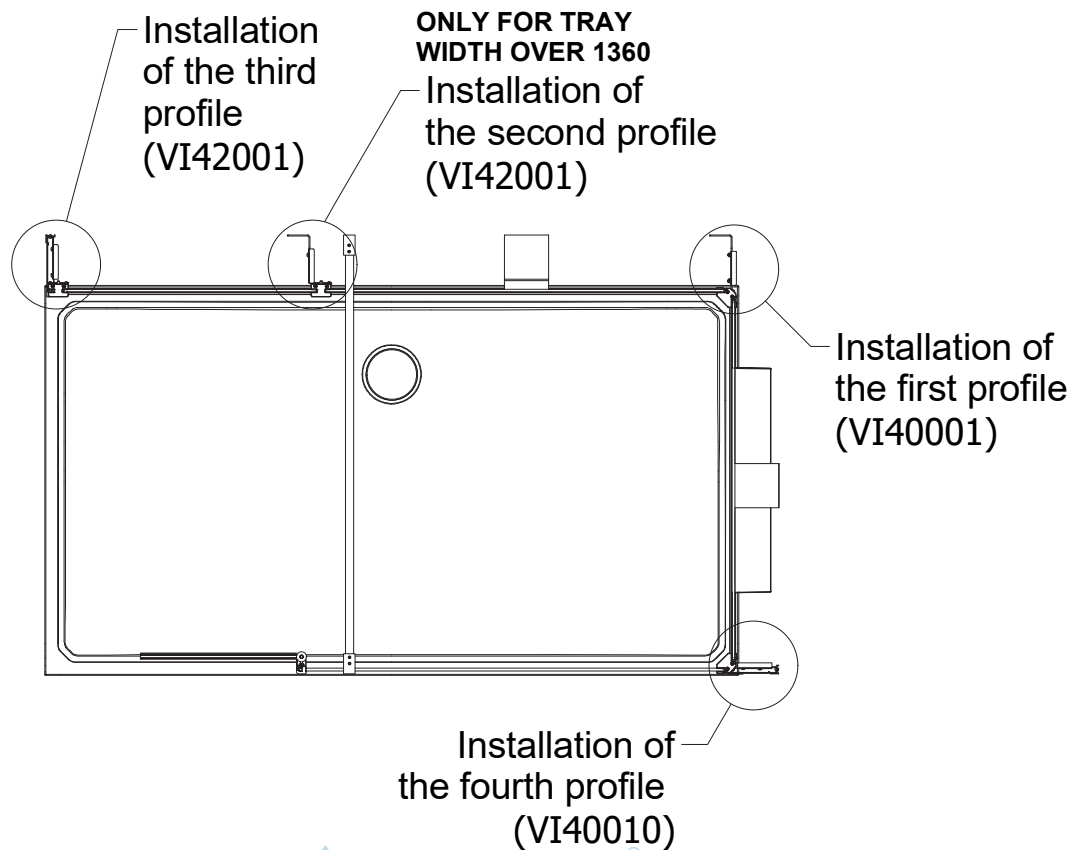


VINATA STYLE LEFT



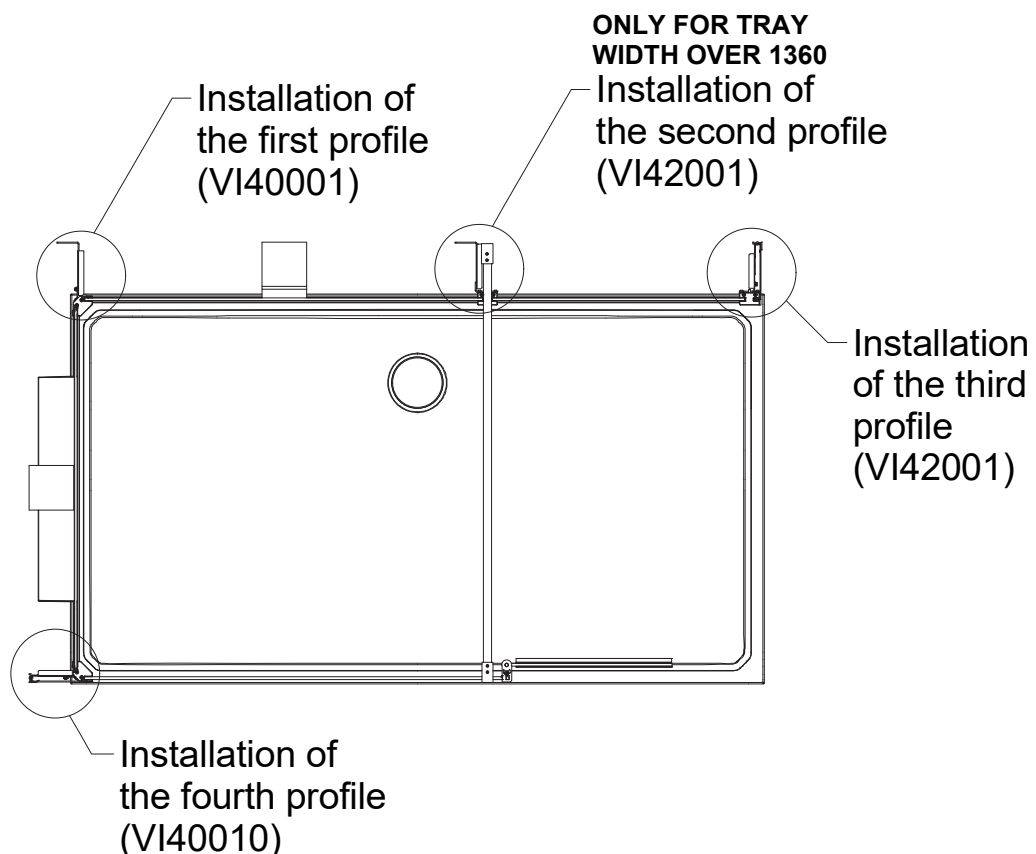


Installation of the first profile



Parts to be used		
Qty.	Number	BOX
1	3b-1	3b
1	1-4d	1
6	1-4h	1
1	1-4b	1
1	1-4c	1
4	1-4j	1
2	1-4i	1

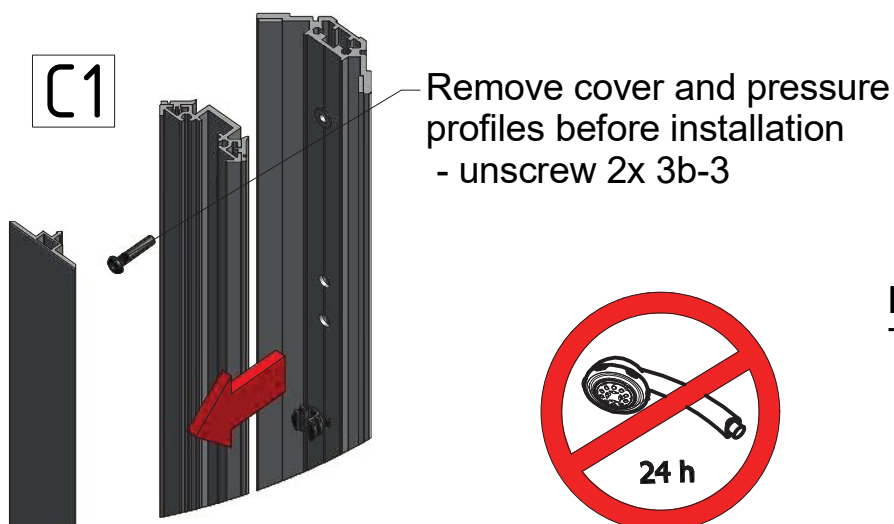

For the left side variant
Turn around 1-4d

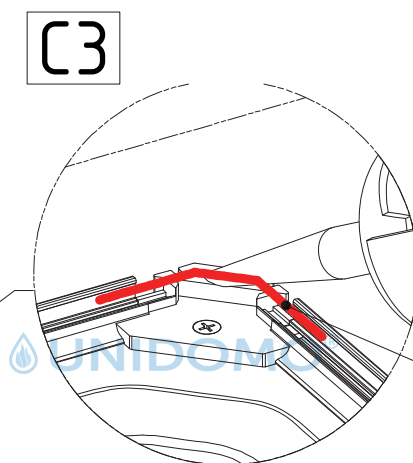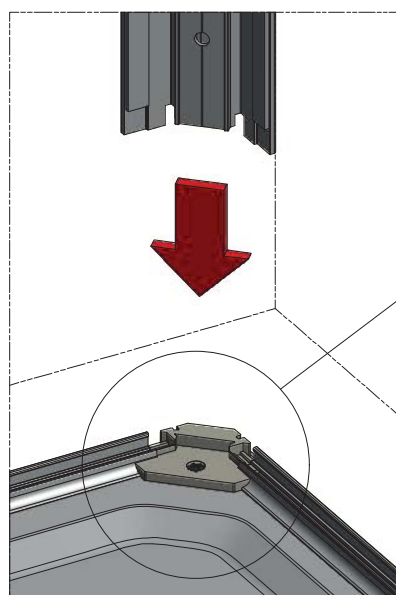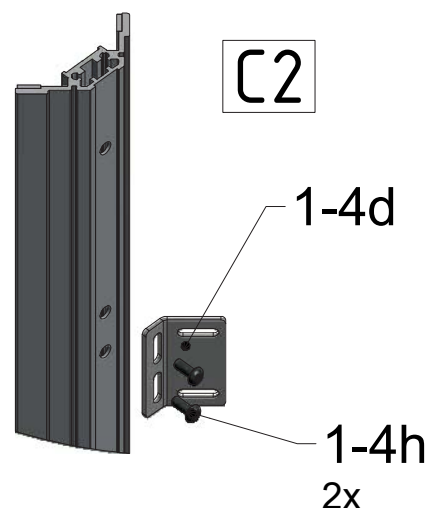


SILICONE !!!
After focusing
and mounting
the wall
anchor

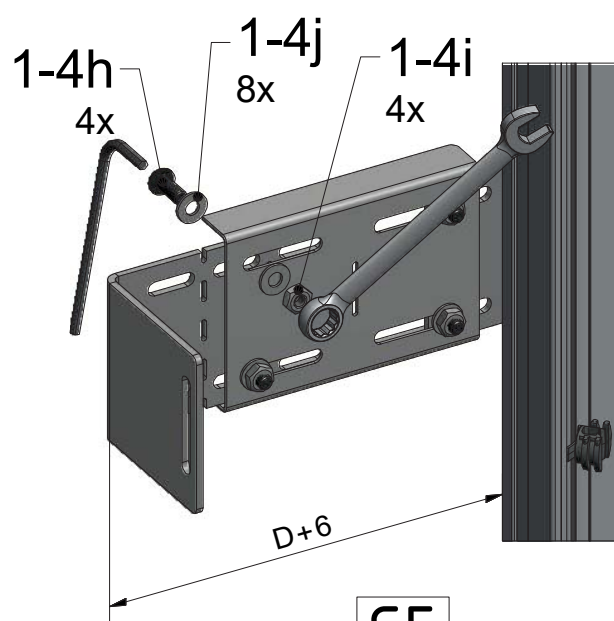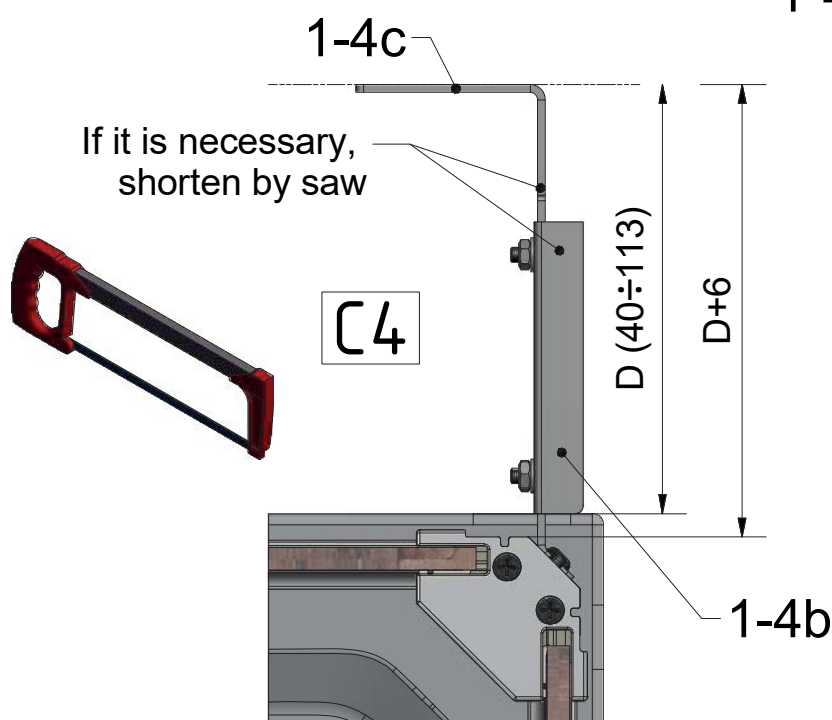

Parts to be used		
Qty.	Number	BOX
2	1-4k	1
2	1-4l	1




Mark two holes

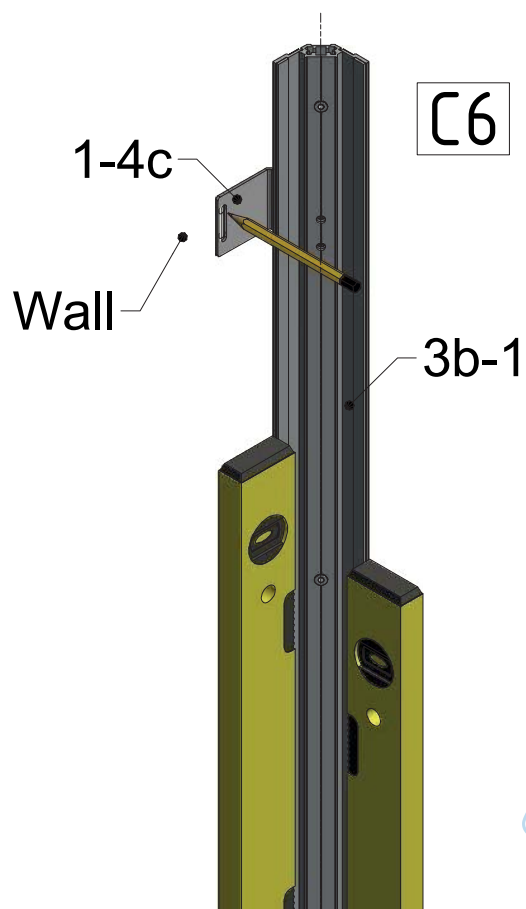


C7

Drill marked holes

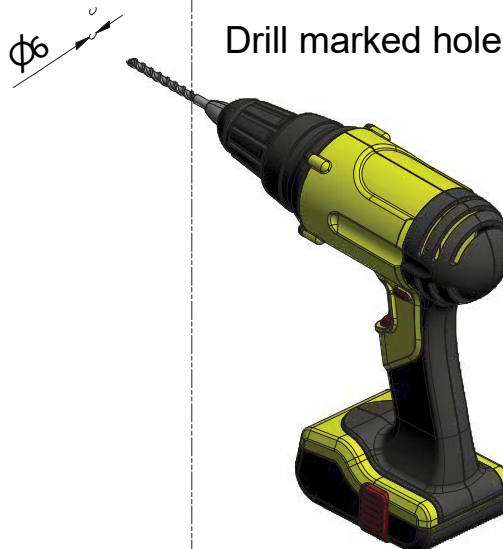

UNIDOMO®


Insert plastic anchors

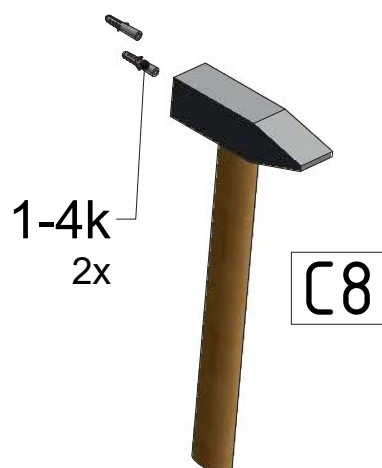

C9


1-4l
2x

Insert screws



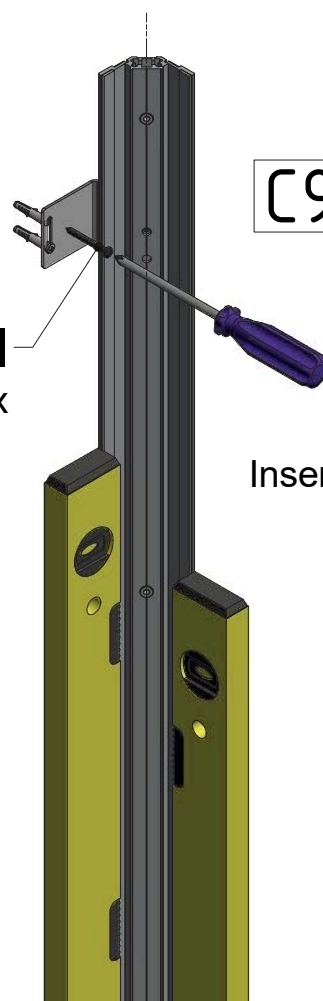


Parts to be used		
Qty.	Number	BOX
1	1-2	1

Installation mixer


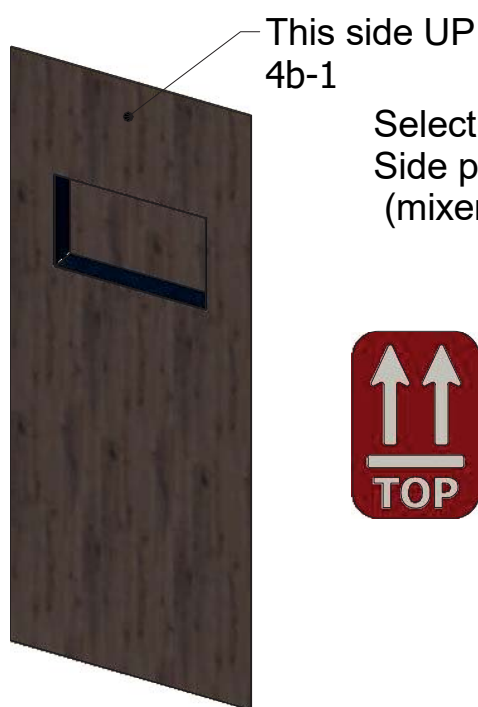


*Height and pitch according to used mixer.

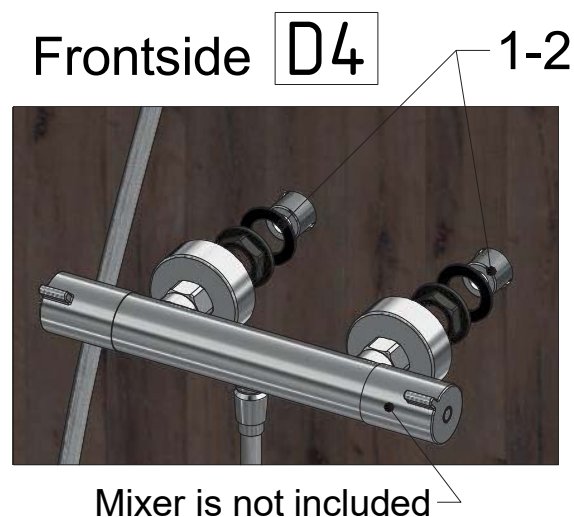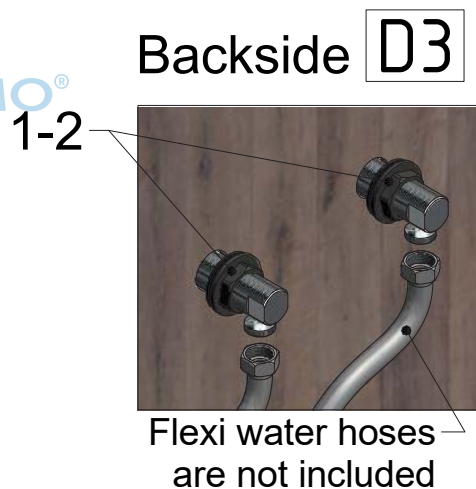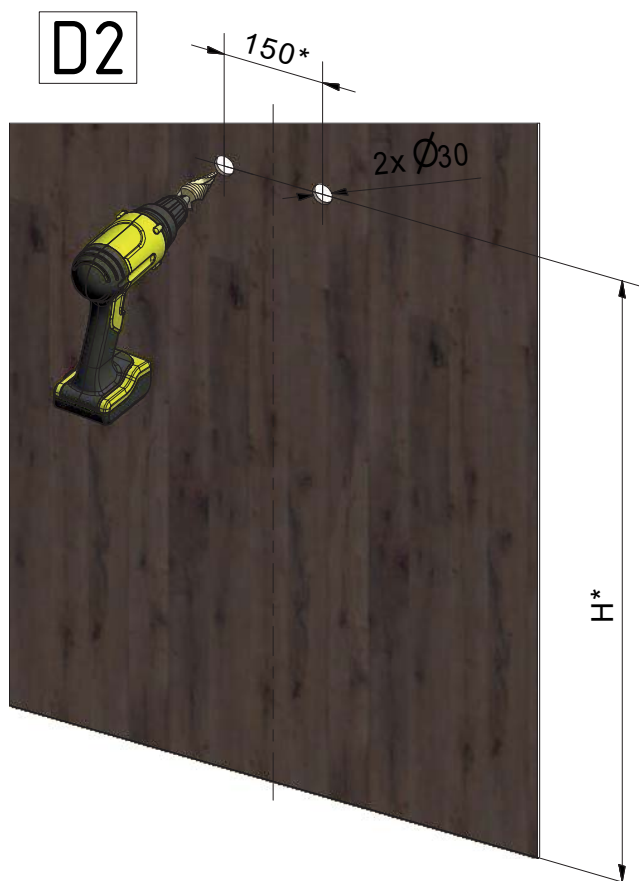

Parts to be used		
Qty.	Number	BOX
1	4a-1	4a
1	4b-1	4b
1	1-4g	1
6	3b-3	3b

SILICONE !!!
Seal by silicone !!!

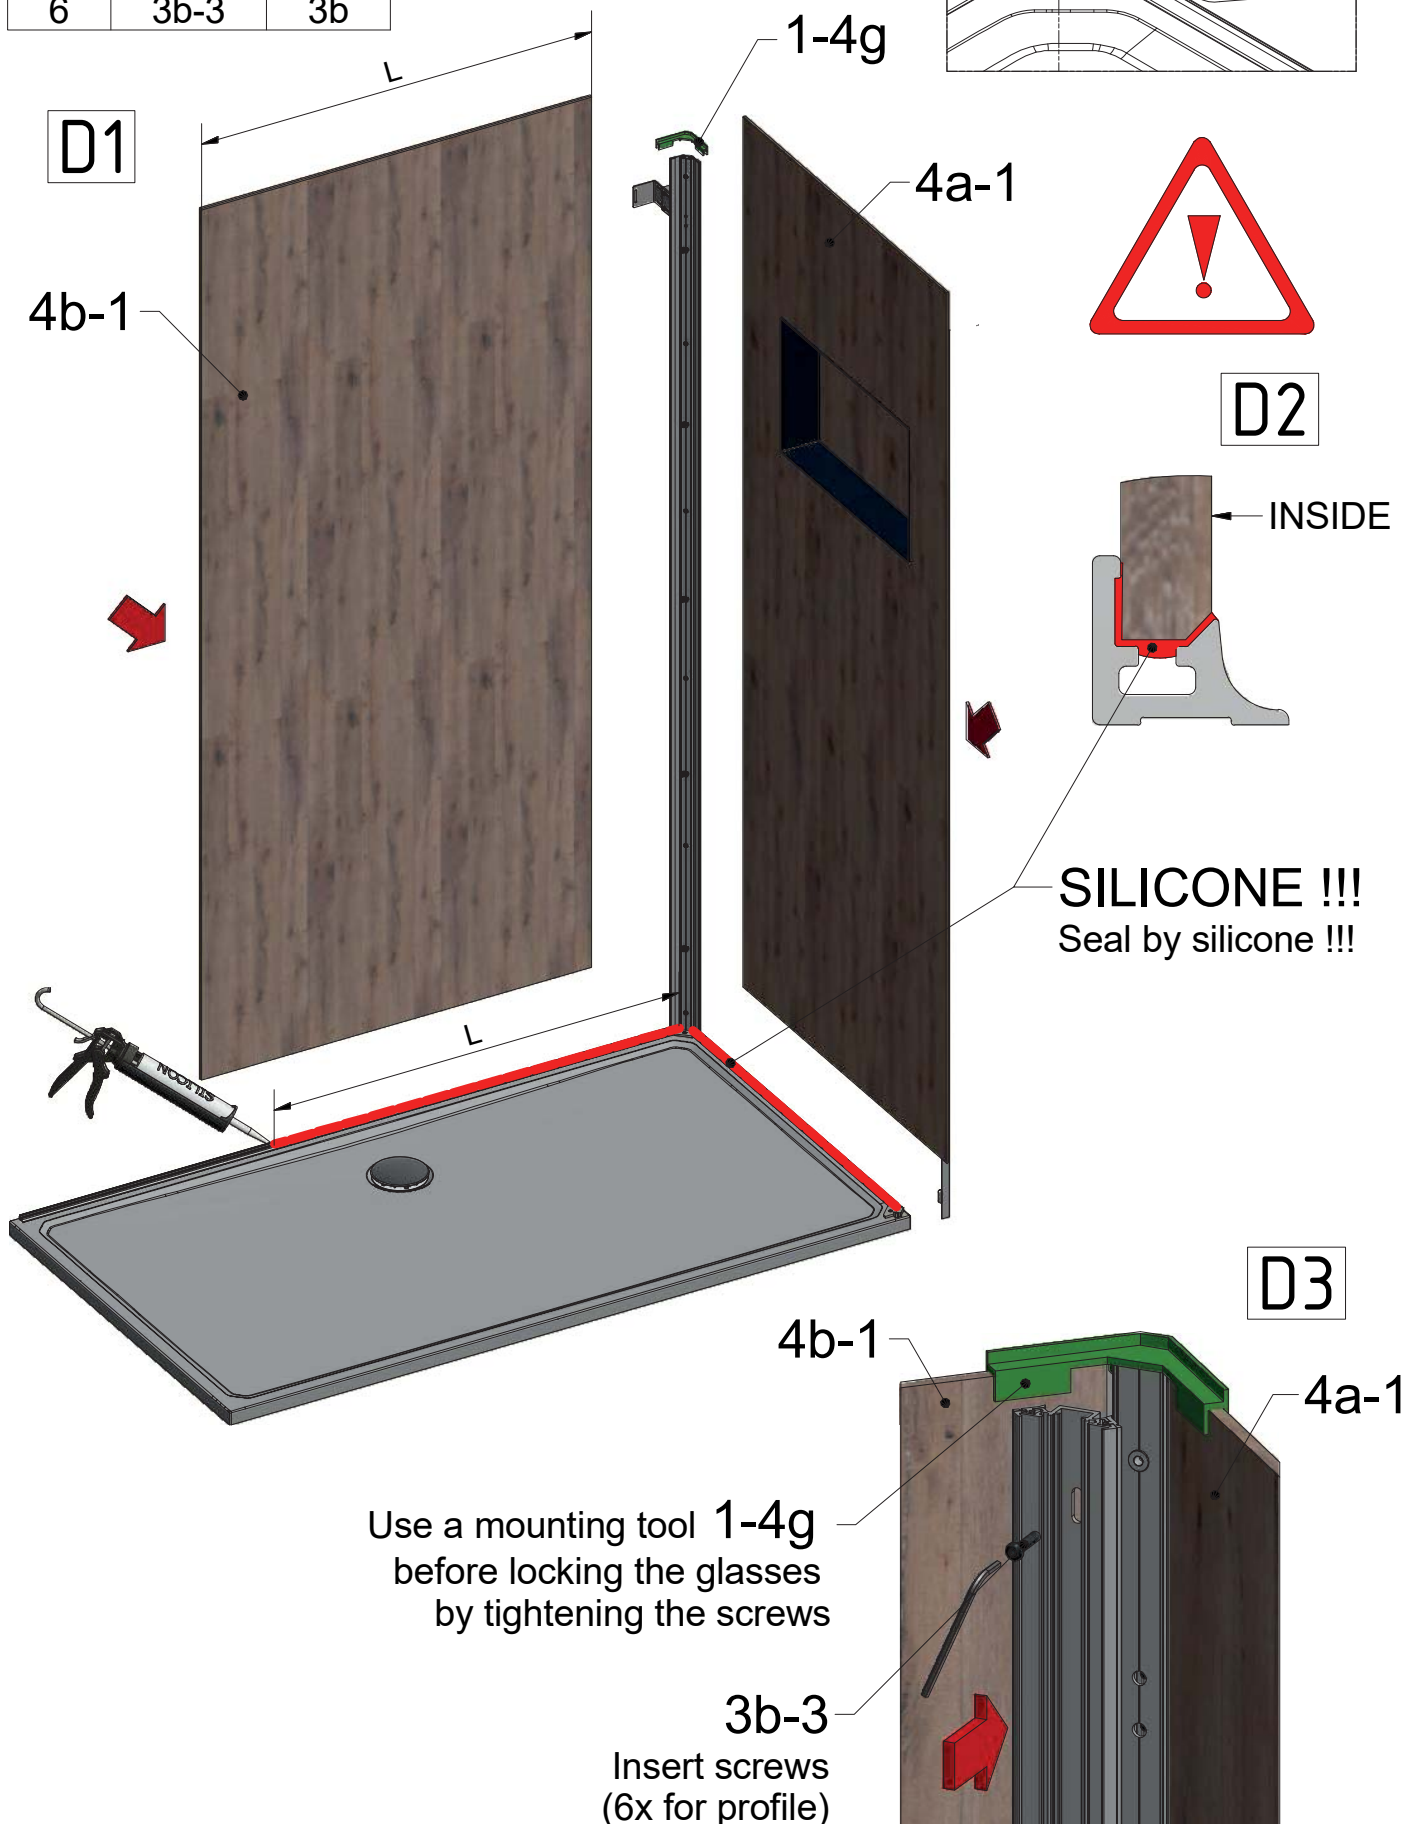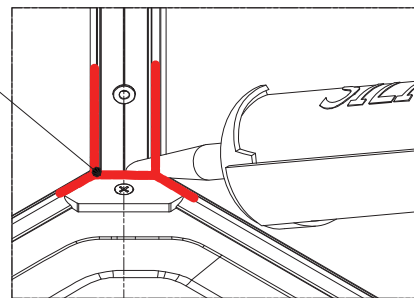


Installation of the second profile


ONLY FOR TRAY WIDTH OVER 1360

Parts to be used		
Qty.	Number	BOX
1	3d-1	3d
1	1-4e	1
2	1-4h	1
1	1-4b	1
1	1-4c	1
4	1-4i	1
4	1-4h	1
8	1-4j	1


E1

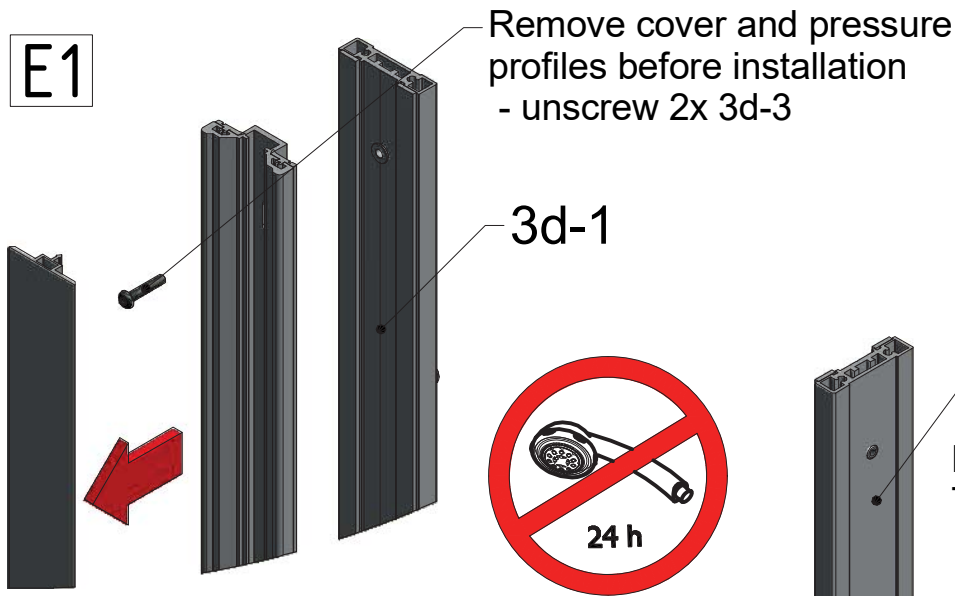


E2

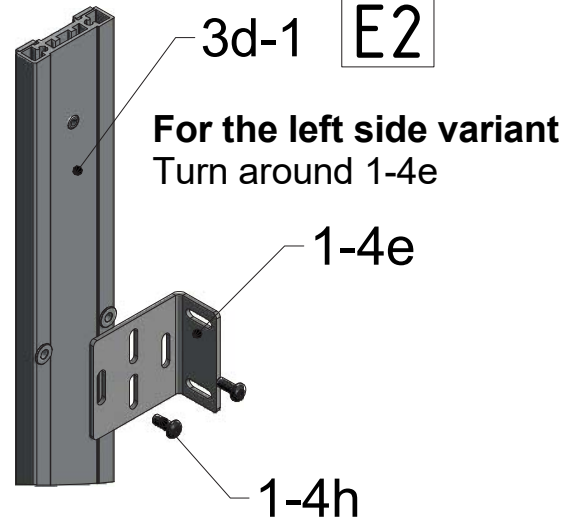


E3

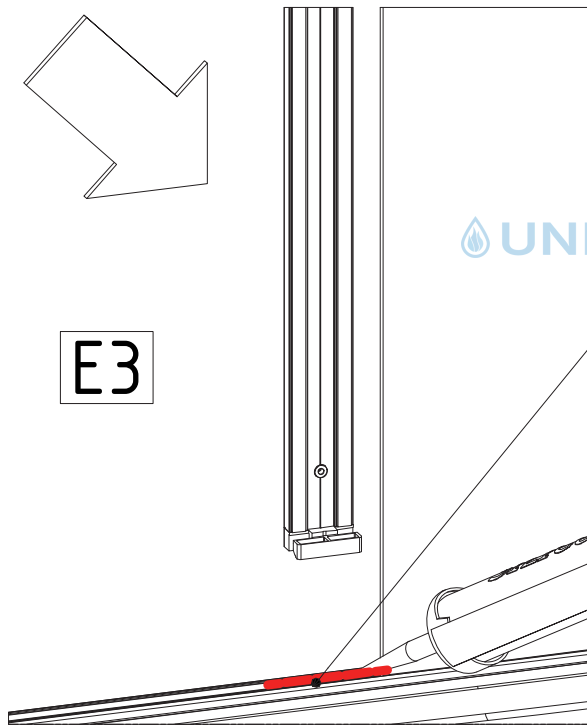

E4


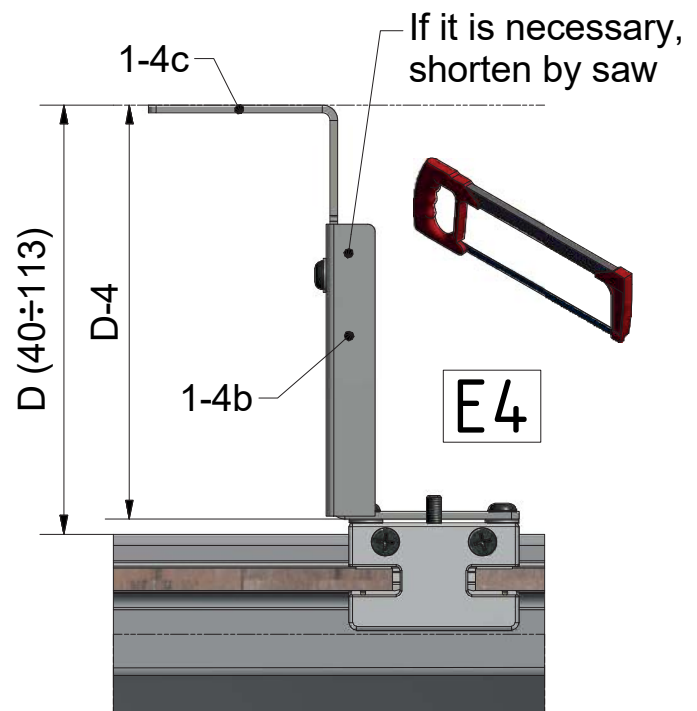


E5

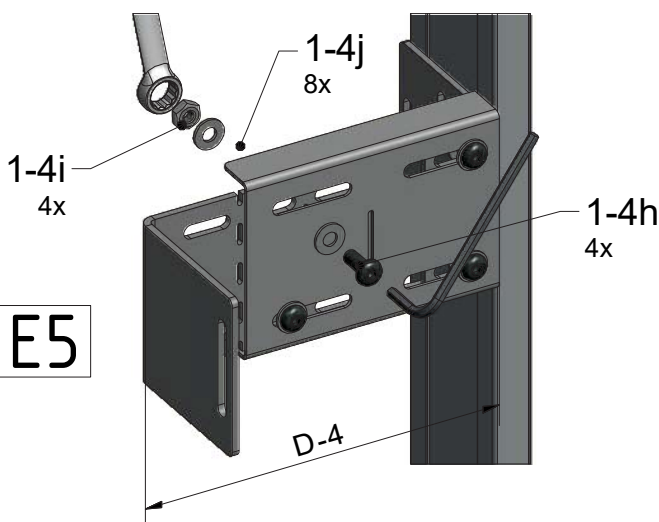


ONLY FOR TRAY WIDTH OVER 1360


Parts to be used		
Qty.	Number	BOX
2	1-4k	1
2	1-4l	1

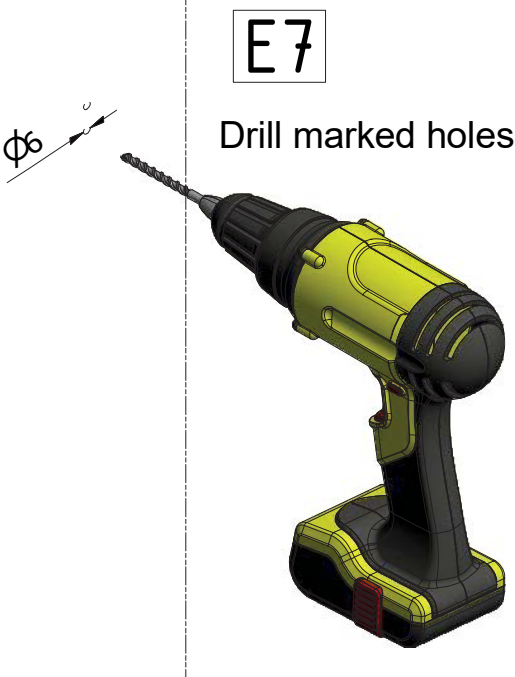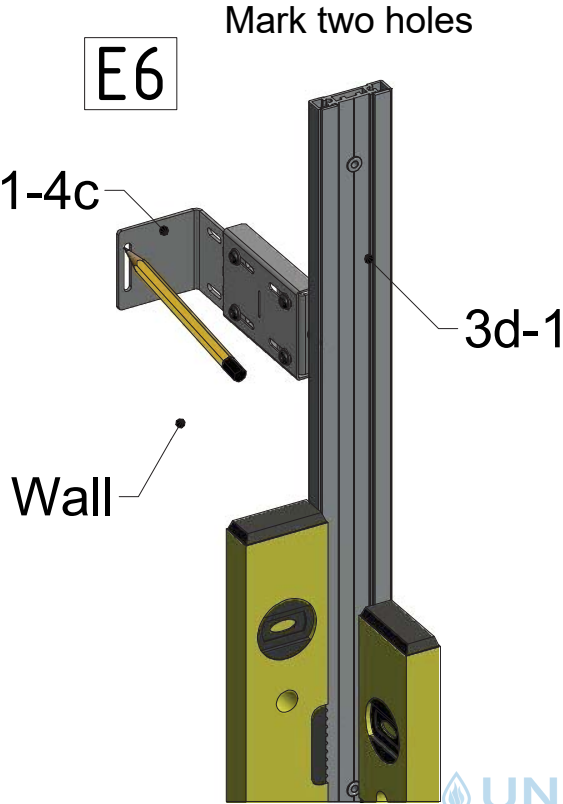

Insert plastic anchors

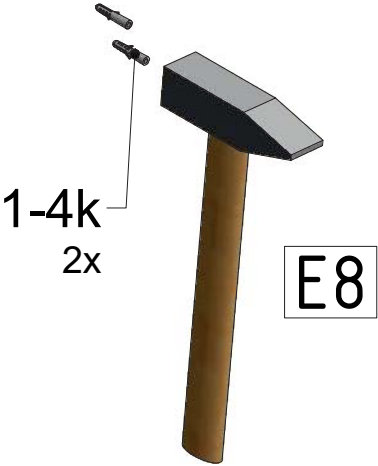


Insert screws

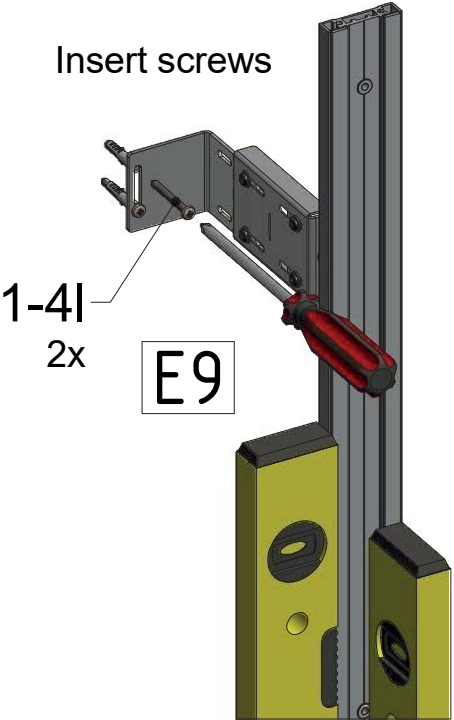

UNIDOMO®

Parts to be used		
Qty.	Number	BOX
1	4b-2	4b
2	1-4f	1

ONLY FOR TRAY WIDTH OVER 1360

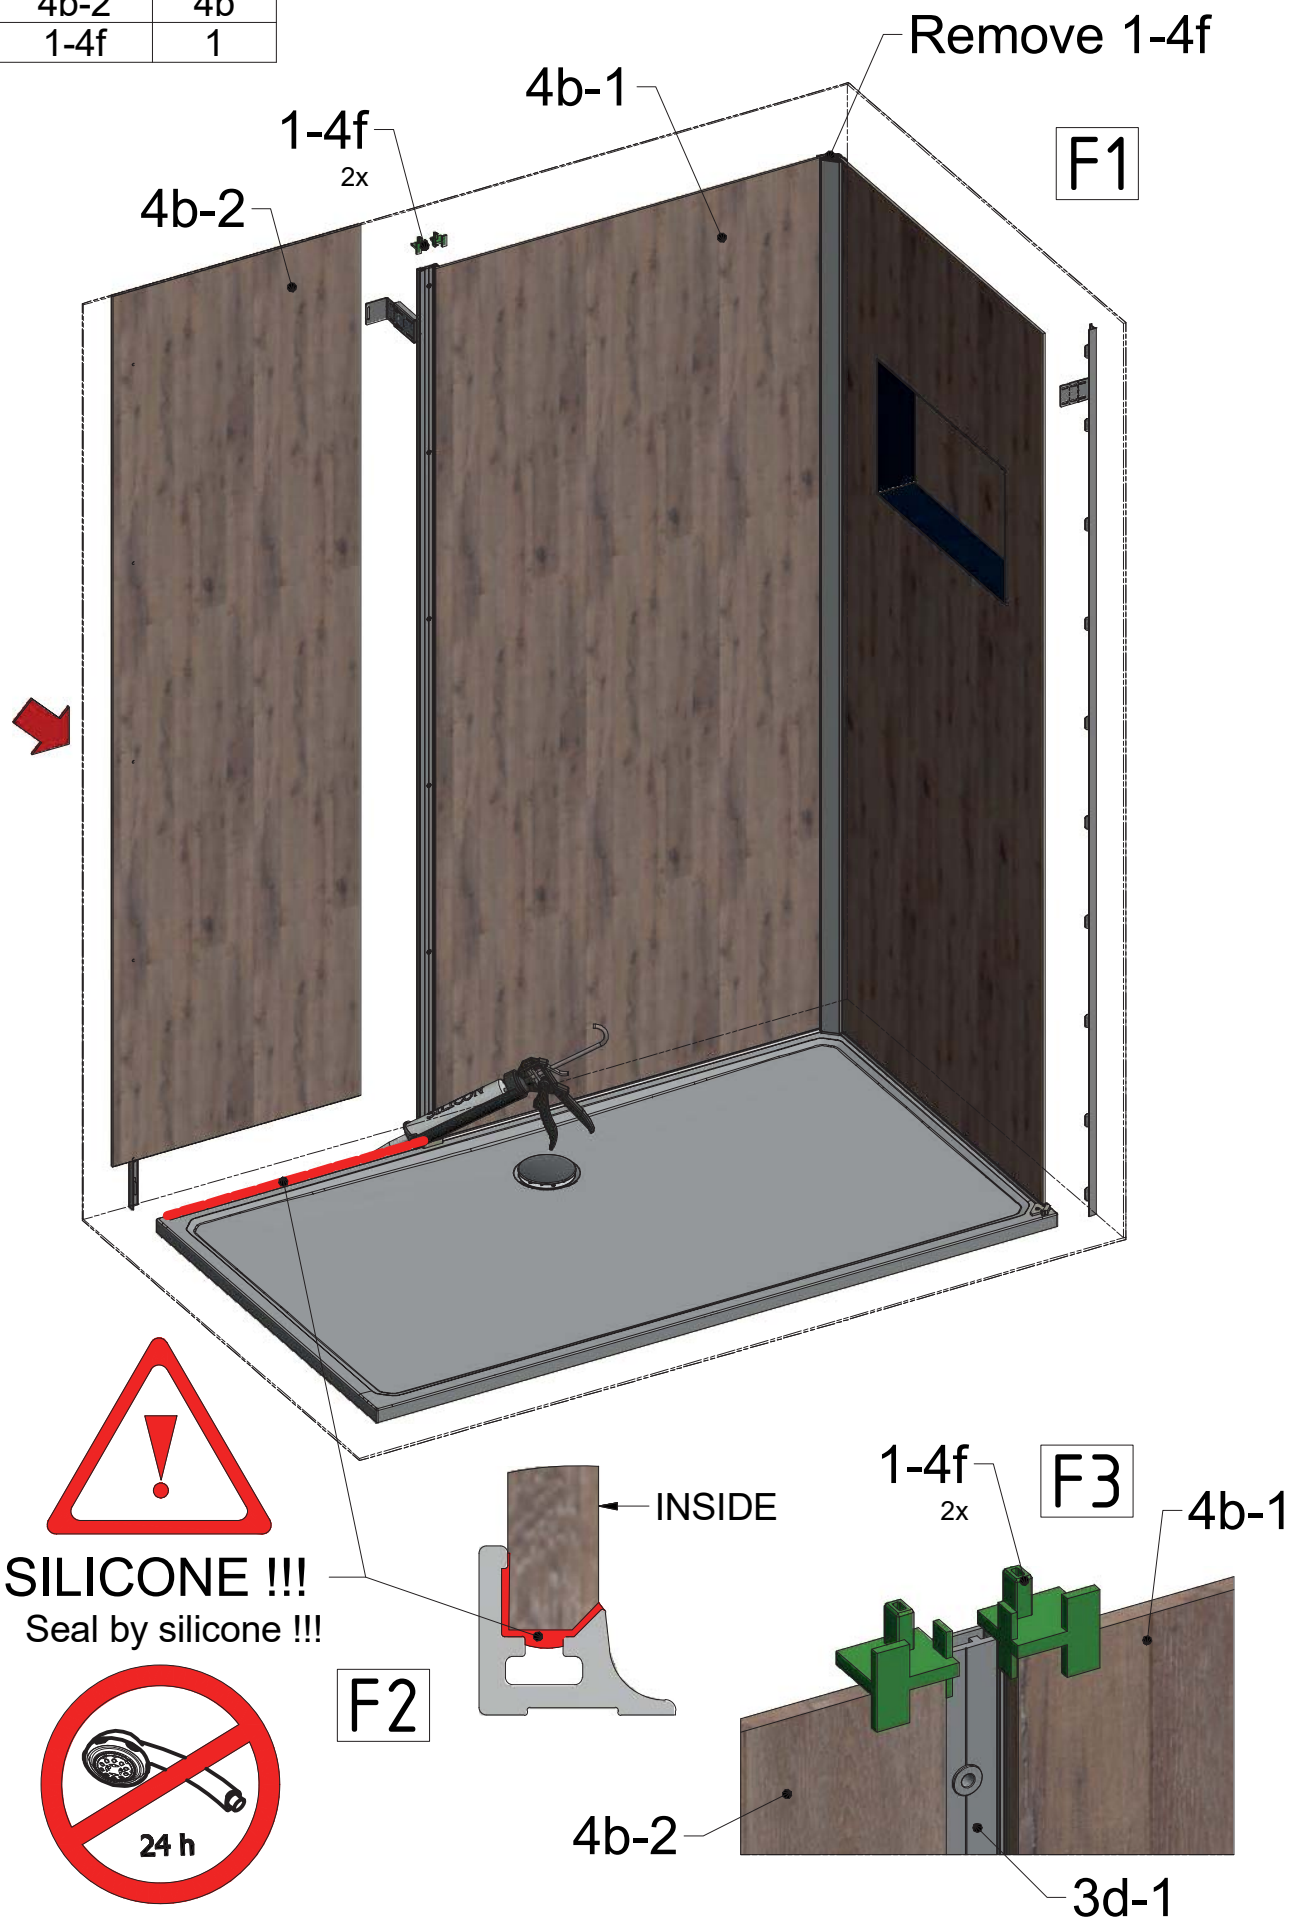


Installation of the third profile

Parts to be used		
Qty.	Number	BOX
1	3c-1	3c
1	1-4a	1
2	1-4h	1
6	3c-3	3c
1	1-4b	1

G1

Remove cover and pressure profiles before installation
- unscrew 2x 3c-3

3c-1

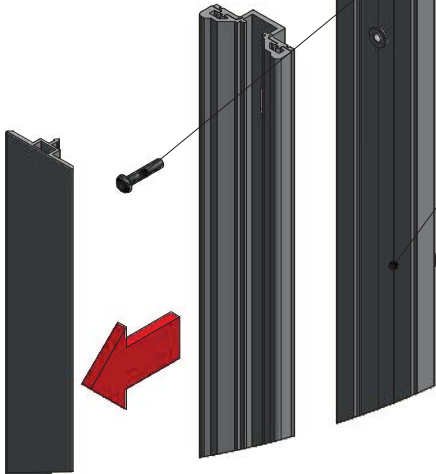


3c-1

For the left side variant
Turn around 1-4e

1-4a

G2


1-4h

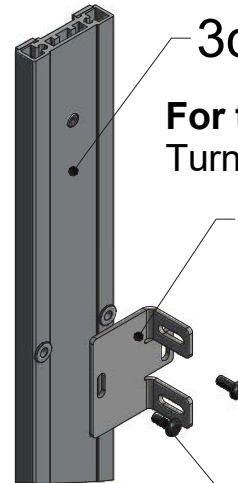

G3

UNIDOMO®

For fix
use 1-4f

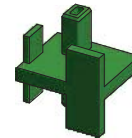

SILICONE !!!
After focusing
and mounting
1-4b



3a-1 (3a-2)


If it is necessary,
shorten by saw

1-4b


G4

D (40÷113)



D-4

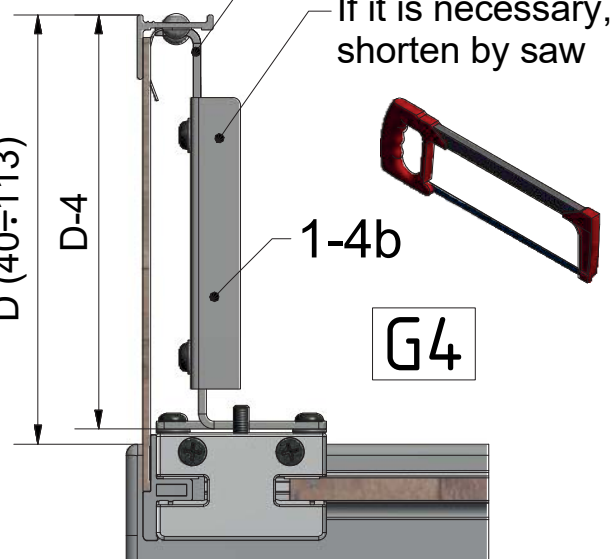

Parts to be used		
Qty.	Number	BOX
4	1-4i	1
4	1-4h	1
8	1-4j	1
1	3a-3	3a
6	3c-3	3c

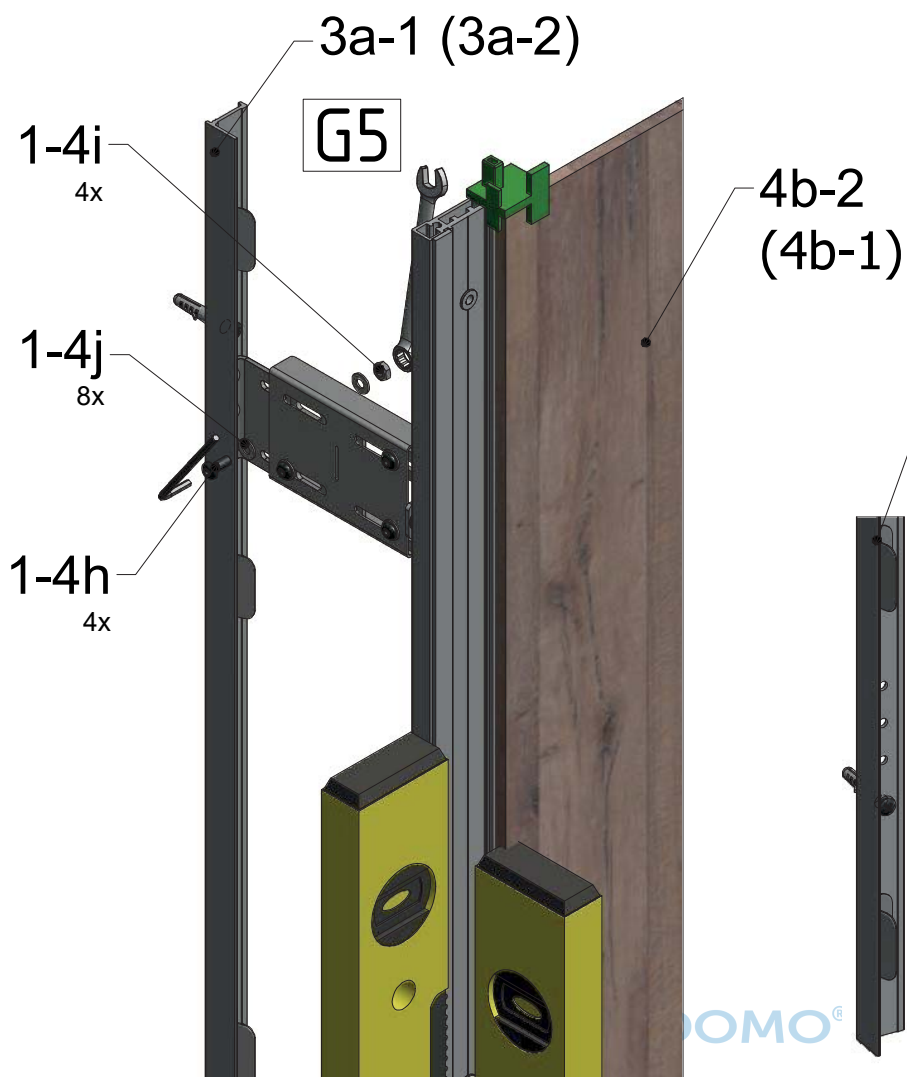


SILICONE !!!
Seal by silicone !!!

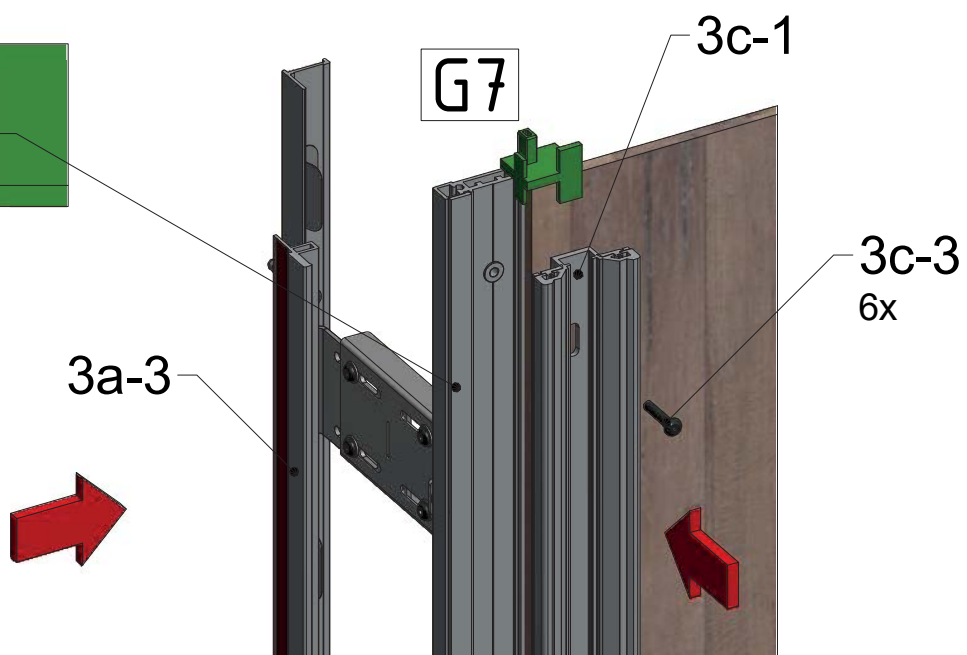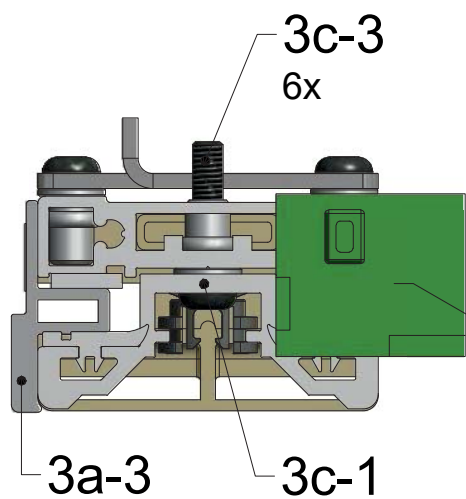

ONLY FOR TRAY WIDTH OVER 1360

Parts to be used		
Qty.	Number	BOX
6	3d-3	3d

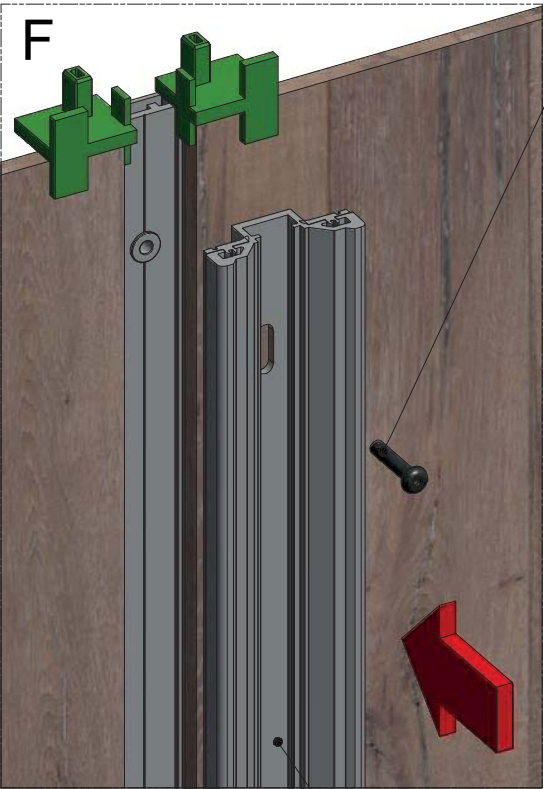


3d-3
6x

H1

3d-1



Remove 1-4f
(3x)

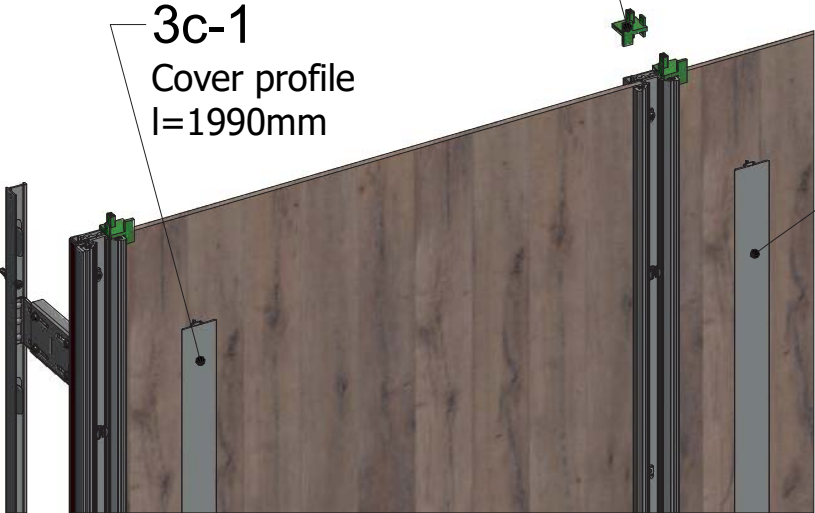

3c-1
Cover profile
l=1990mm






H2

3d-1
Cover profile
l=1990mm


ONLY FOR TRAY
WIDTH OVER 1360

Installation of the fourth profile

Parts to be used		
Qty.	Number	BOX
1	3e-1	3e
1	1-4d	1
2	1-4h	1
1	1-4b	1
4	1-4i	1
8	1-4j	1
4	1-4h	1

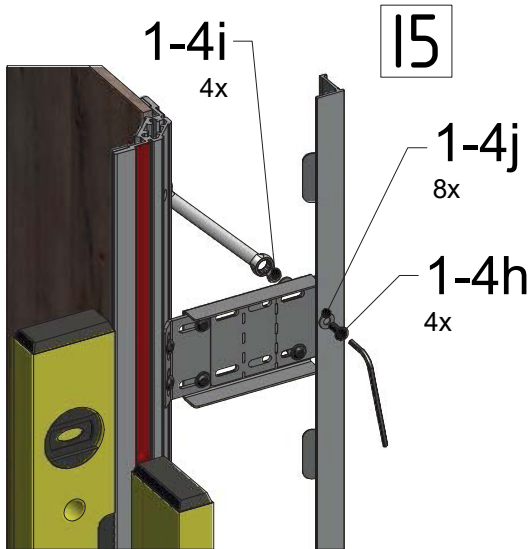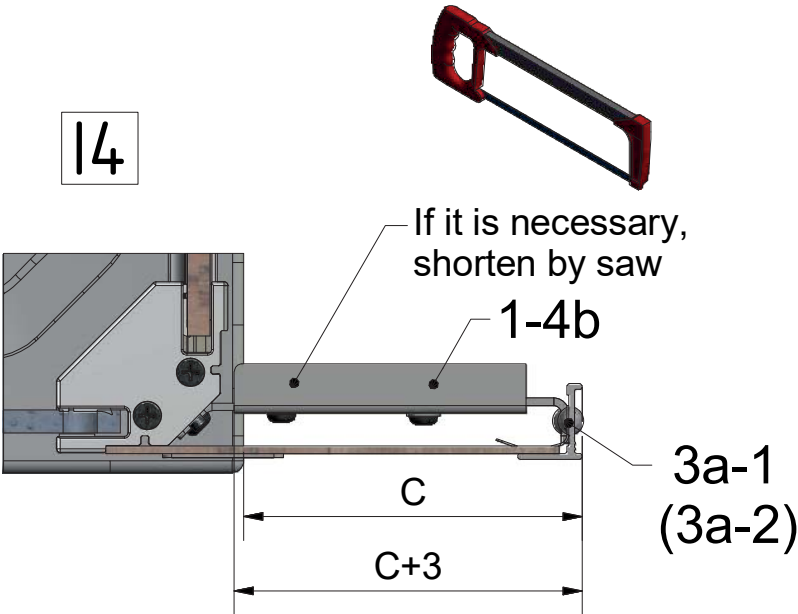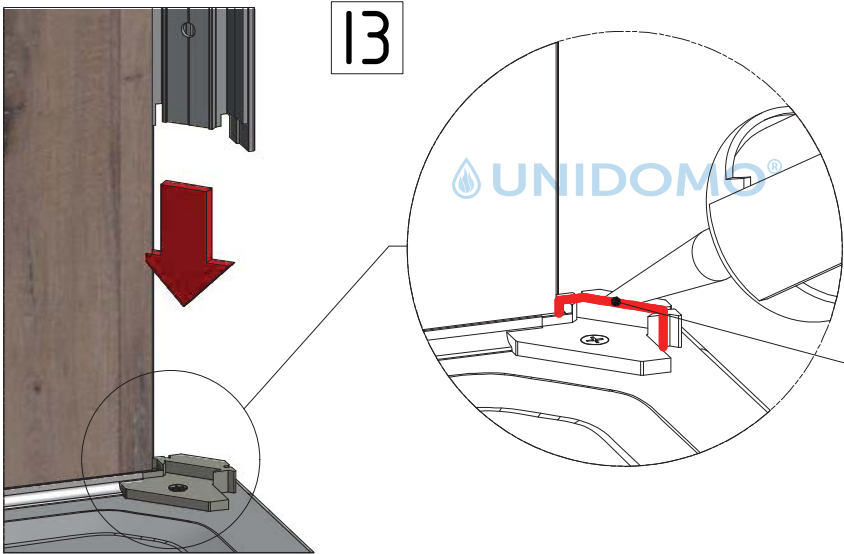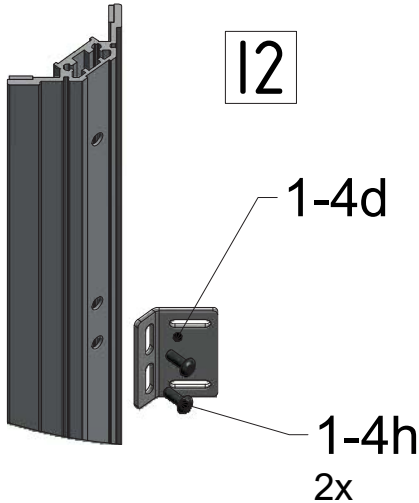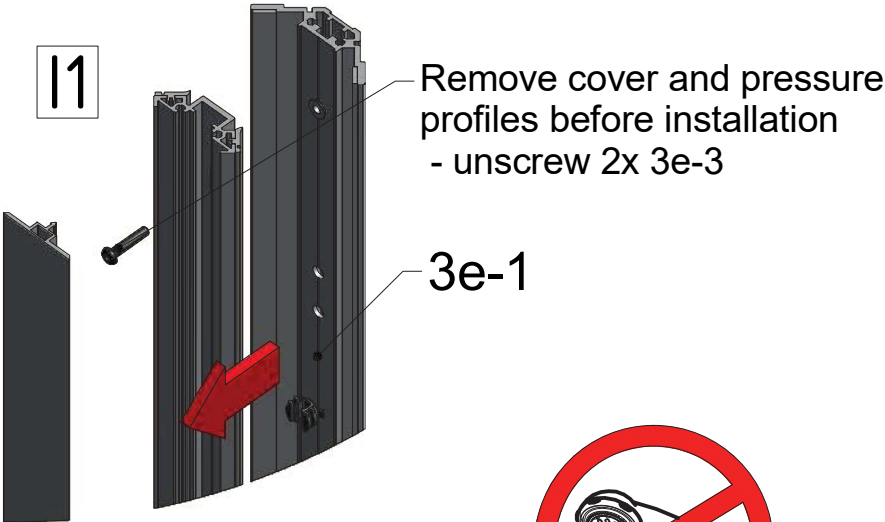



Parts to be used		
Qty.	Number	BOX
1	5-1	5
1	5-2 (5-3)	5
1	5-4	5
1	4c-1	4
1	1-4g	1

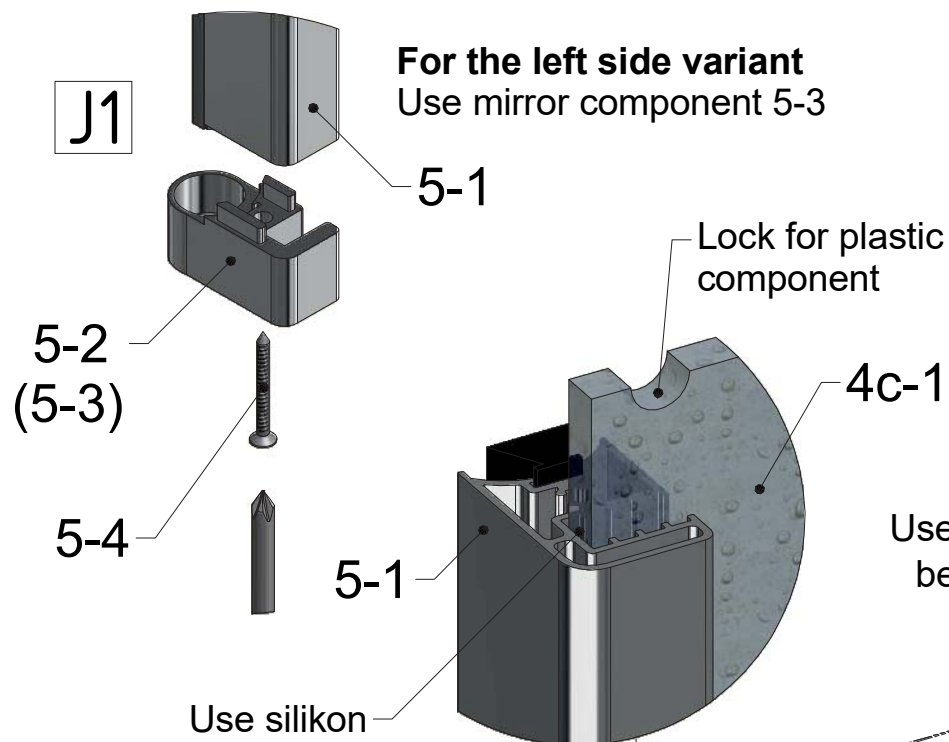



J3

Use a mounting tool 1-4g before locking the glasses by tightening the screws

EasyToClean glass protection (Interior side)

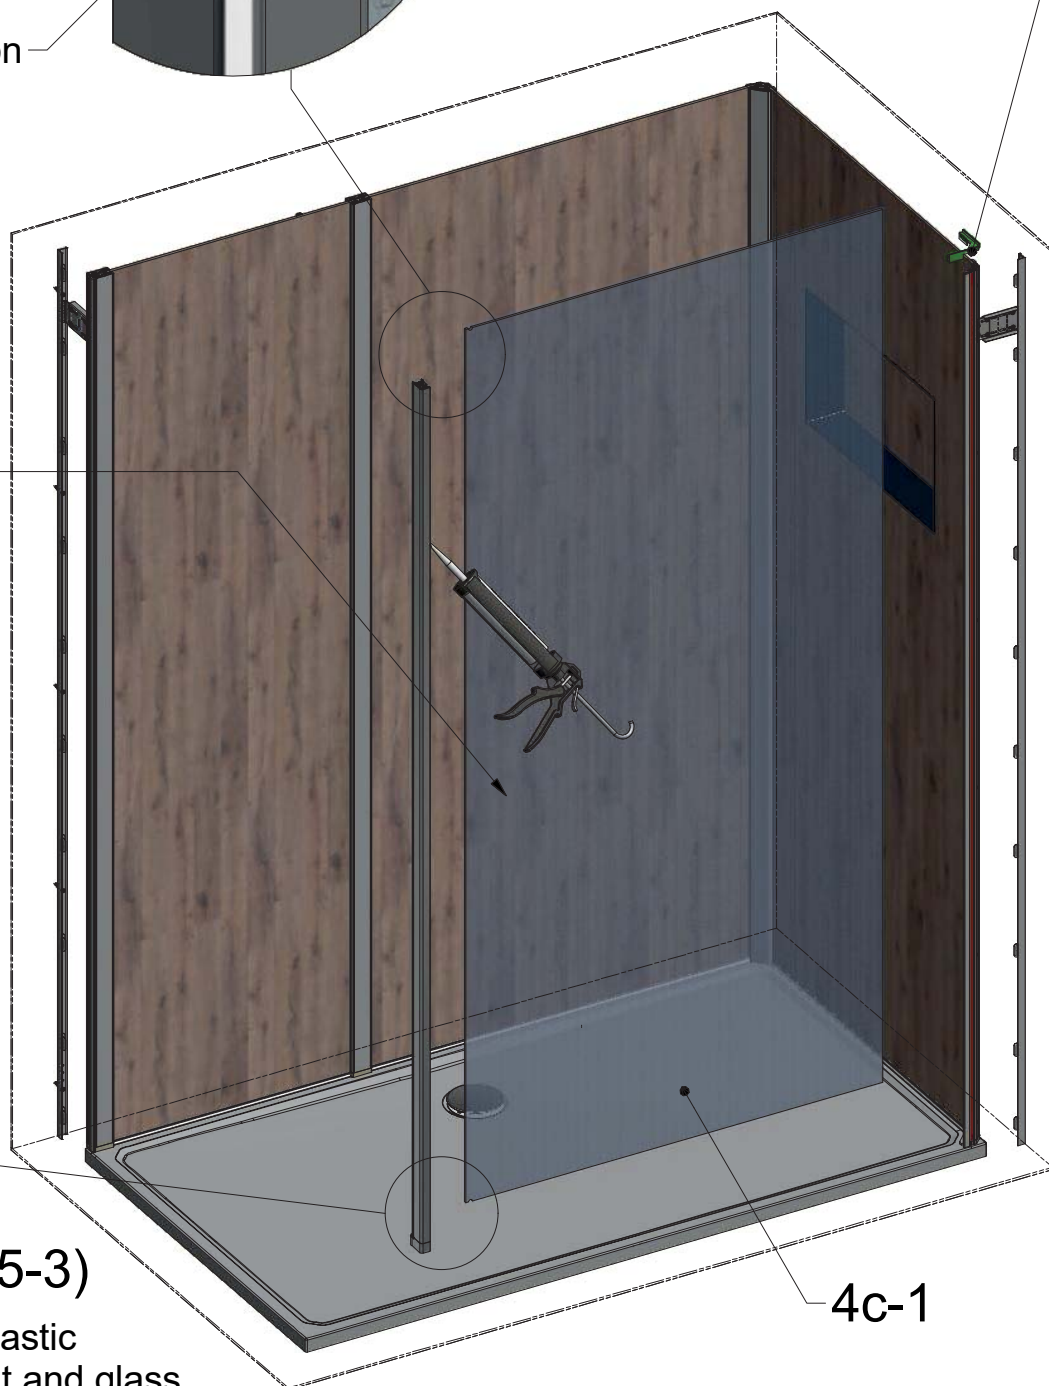
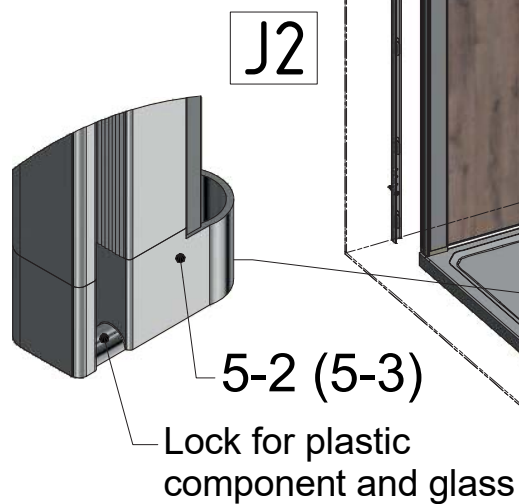


Parts to be used		
Qty.	Number	BOX
6	3e-3	3e

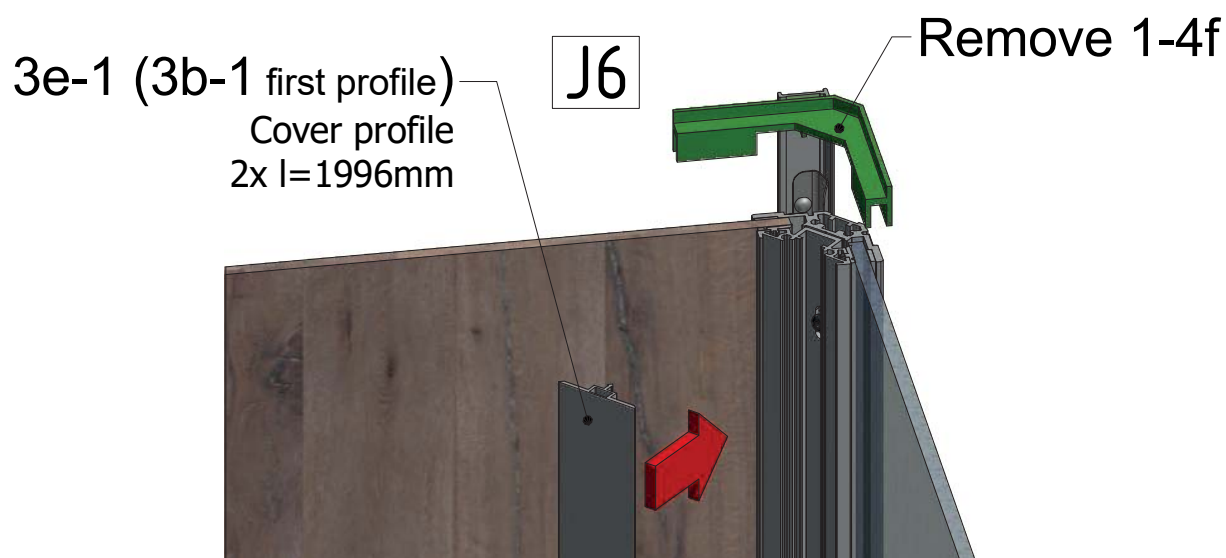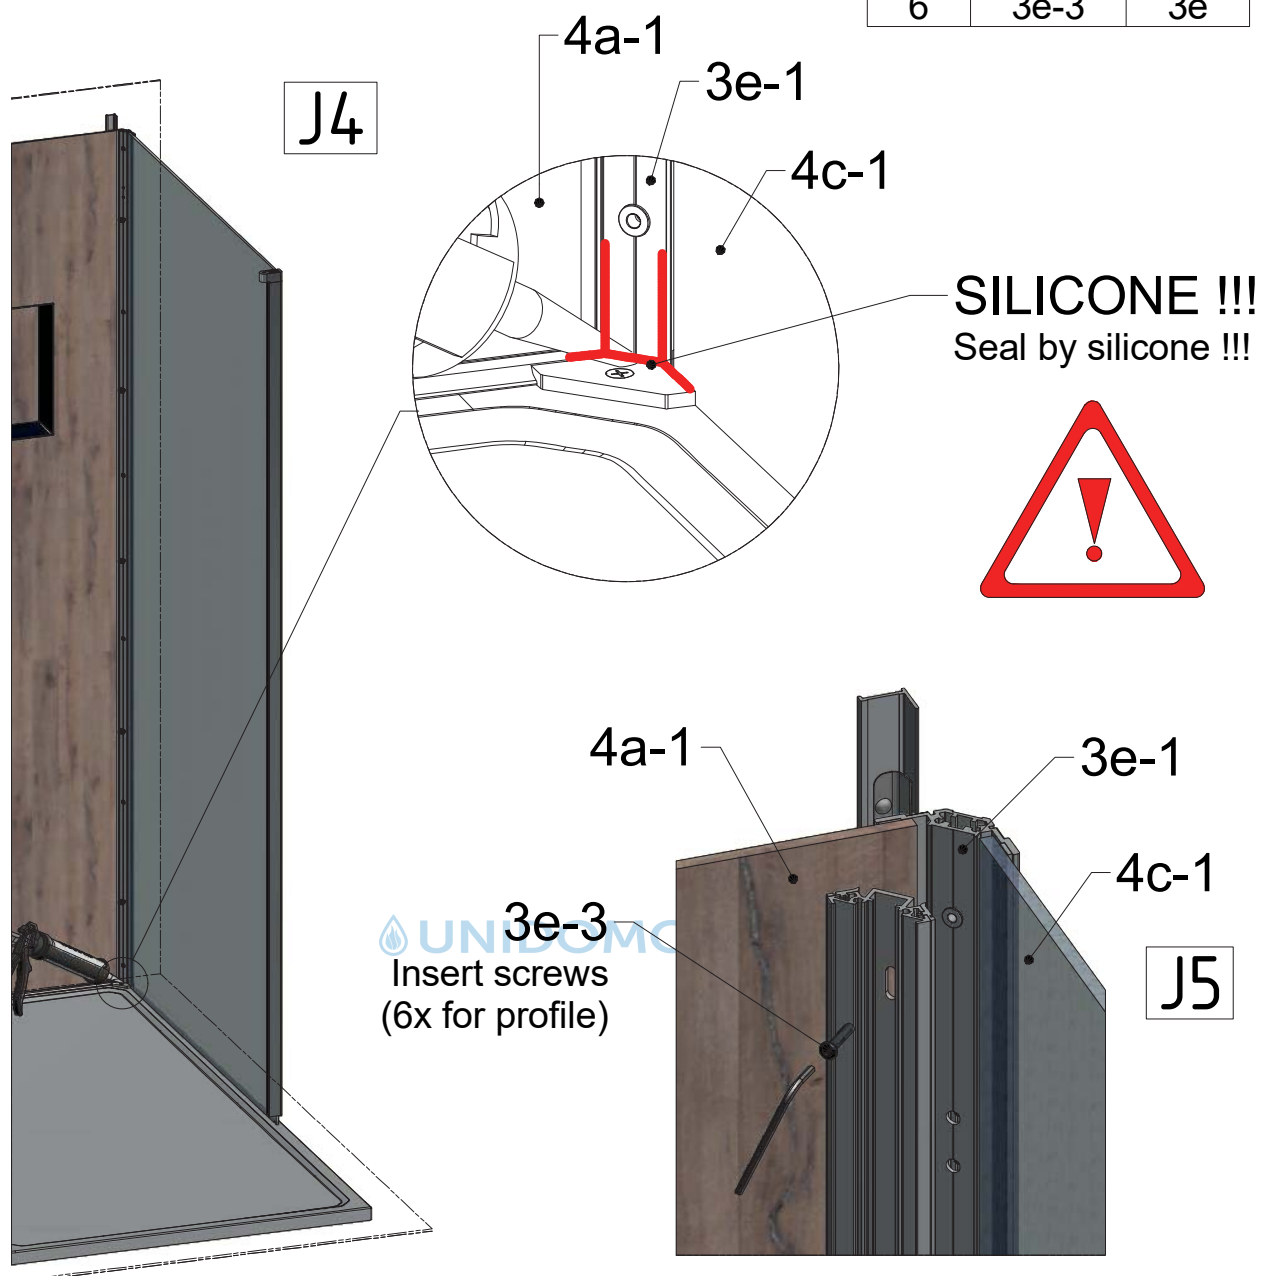

Parts to be used		
Qty.	Number	BOX
1	5-3 (5-2)	5
1	5-4	5
1	5-5	5
1	5-6	5
1	5-7	5


J7

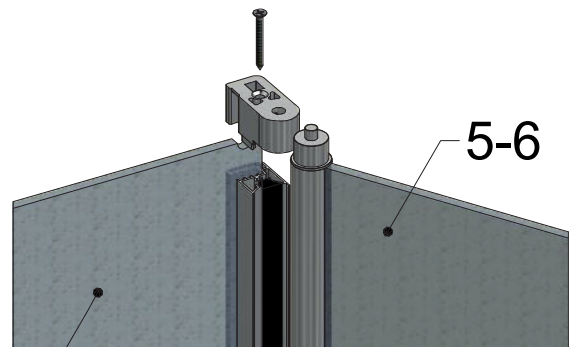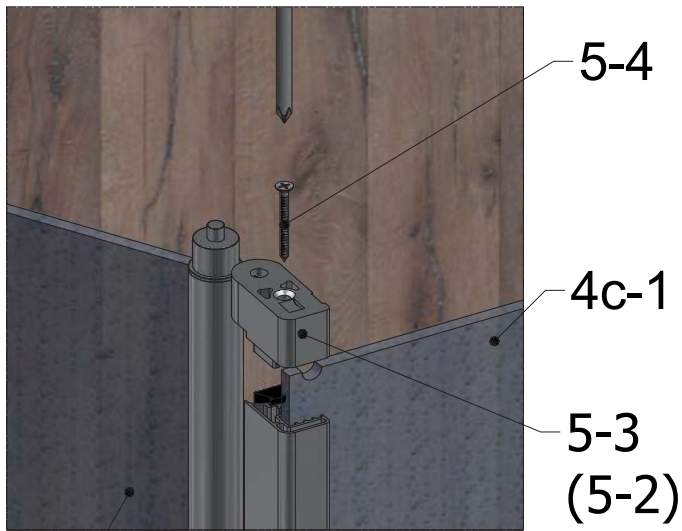


5-6

For the left side variant
Use mirror component 5-2


4c-1

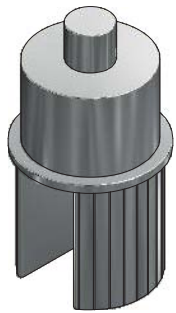


Plastic component
without cam always up

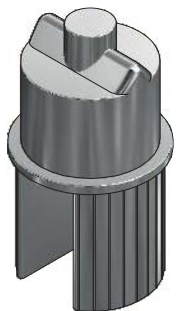


Plastic component
with cam always down

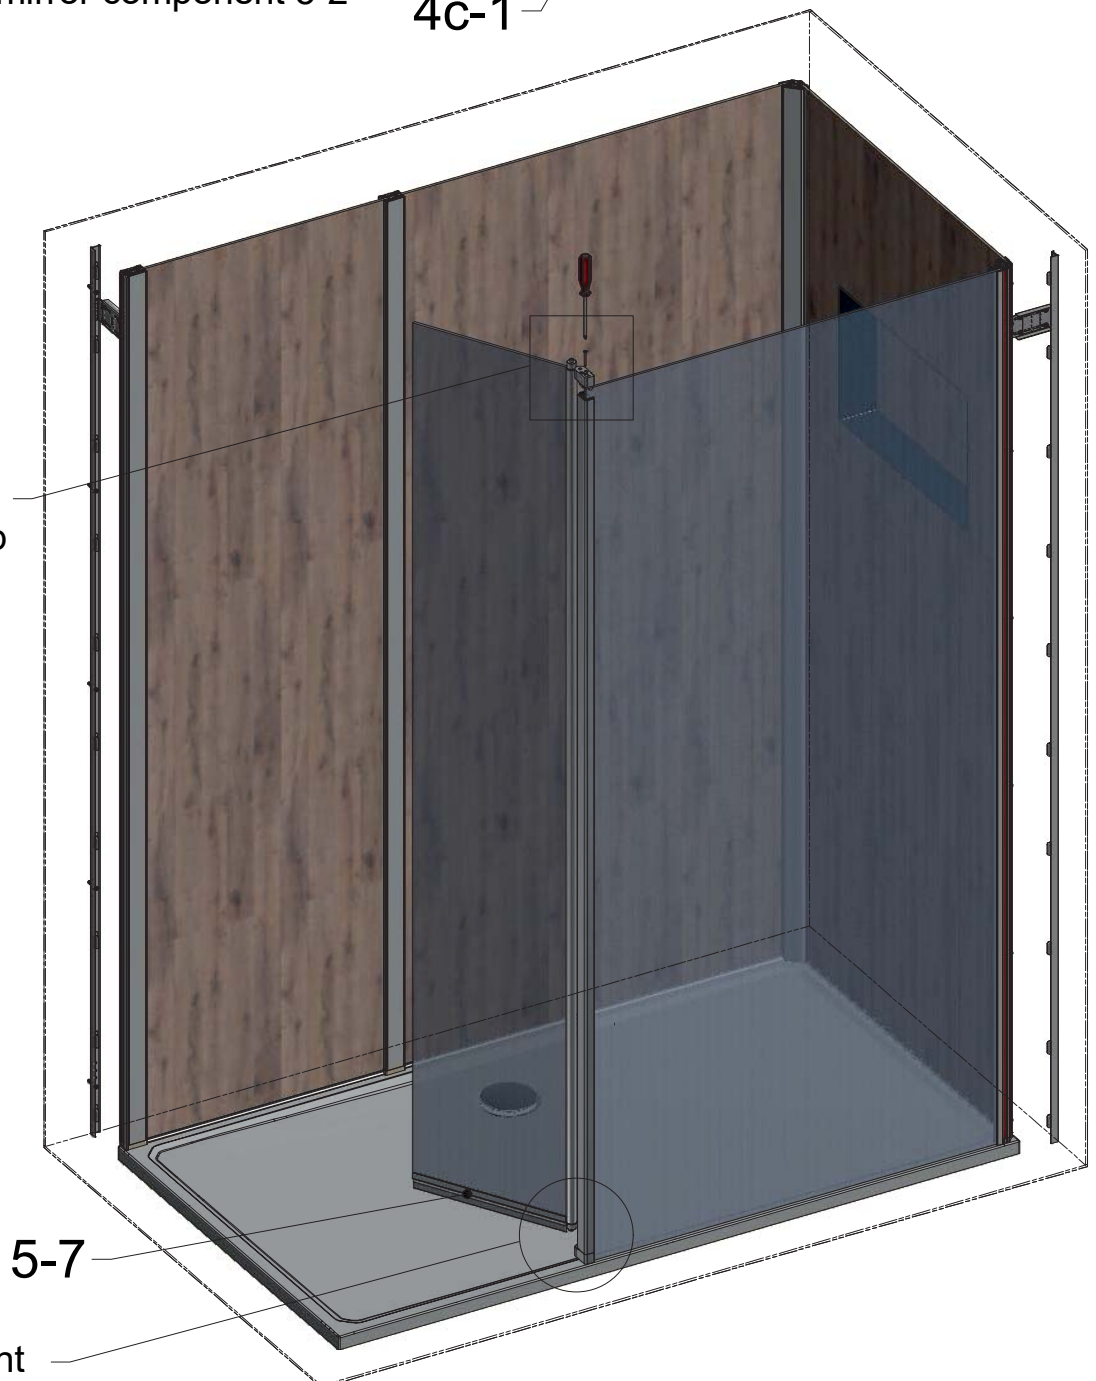

Parts to be used		
Qty.	Number	BOX
1	3e-10	3e

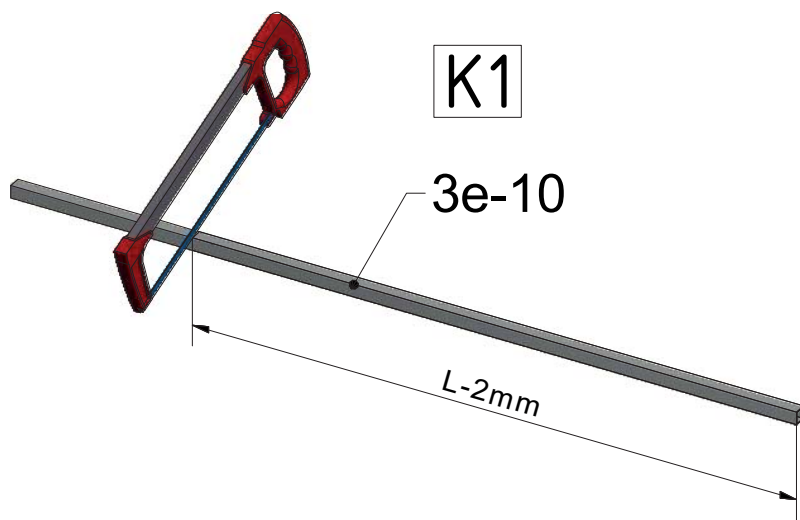



K3

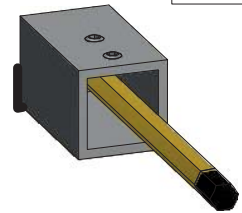


K4




K5

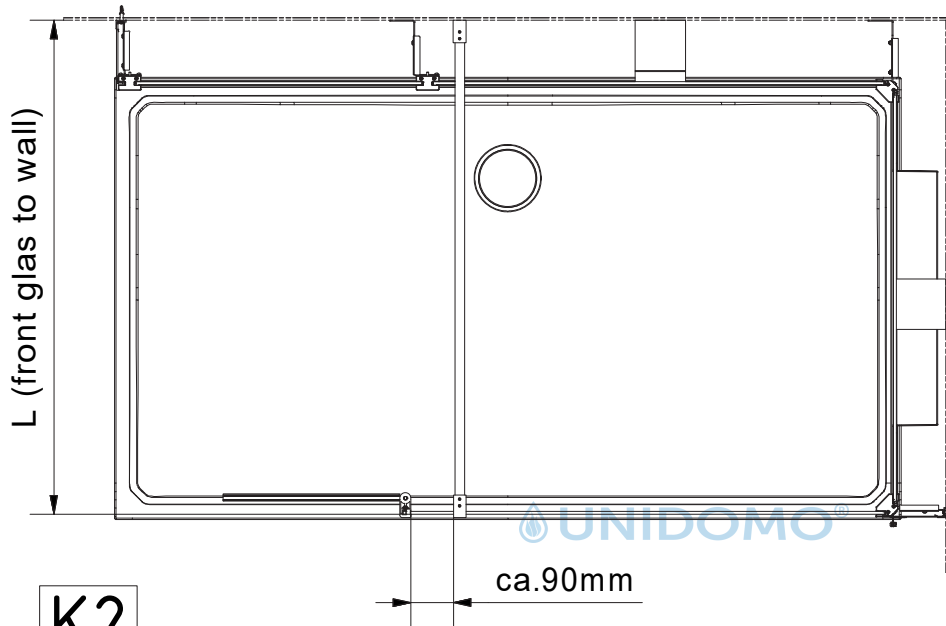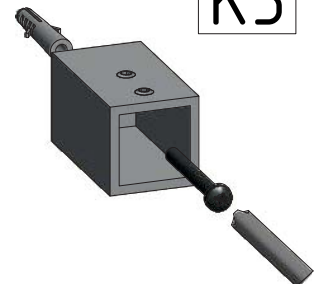



K2

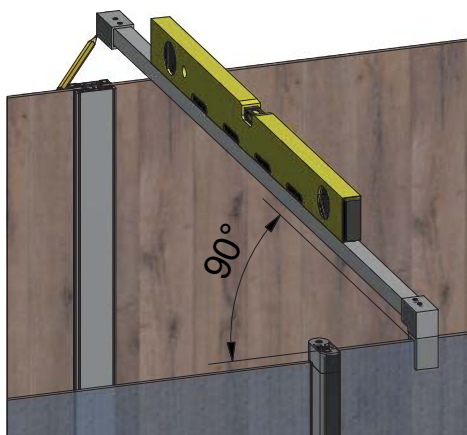

K6





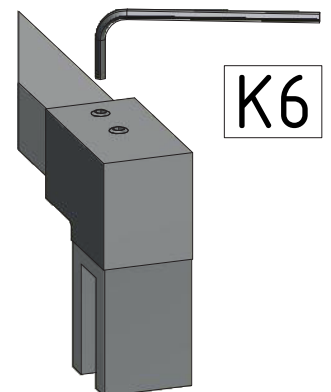


K7

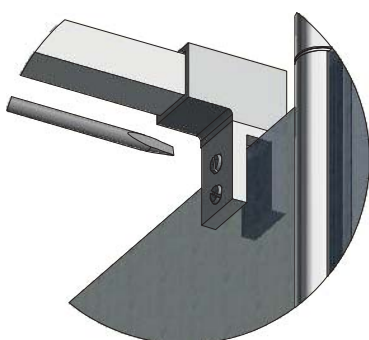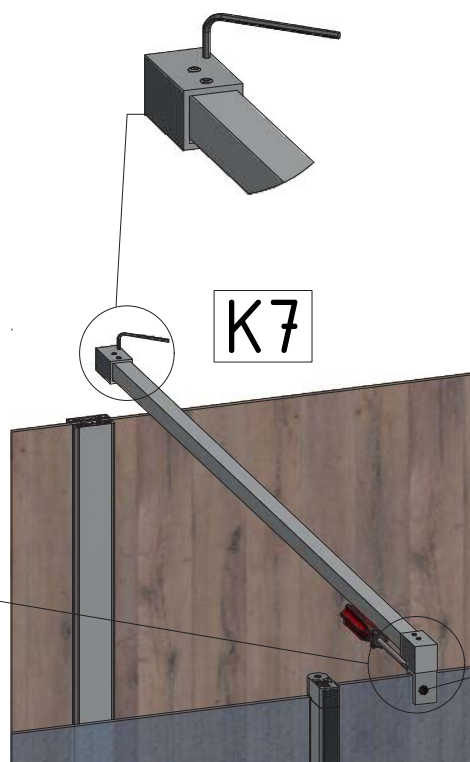


Desk-wall reinforcement

Parts to be used		
Qty.	Number	BOX
2+2	1-3	1

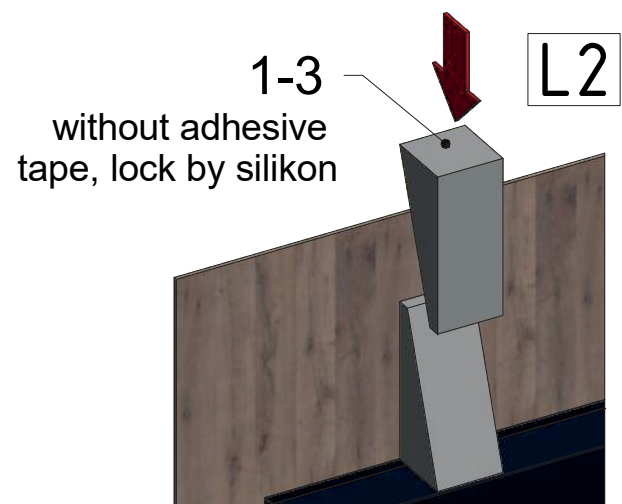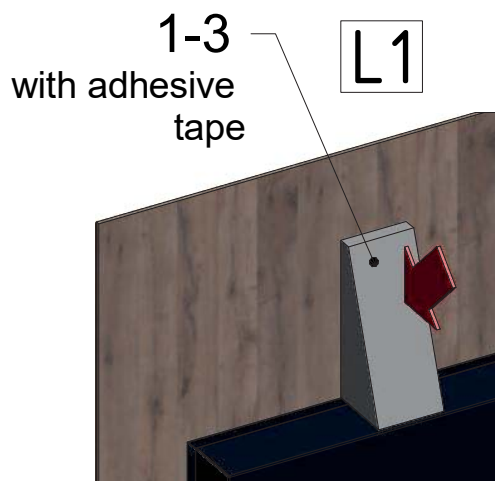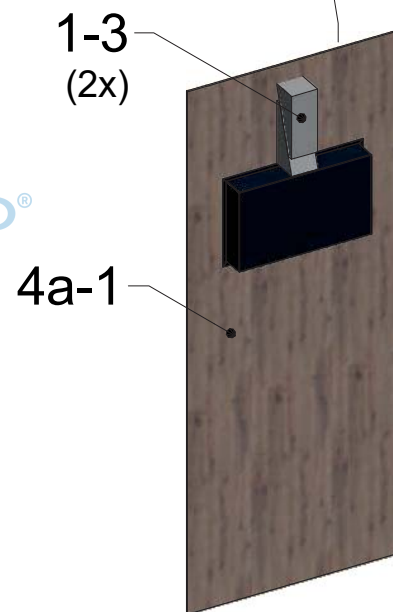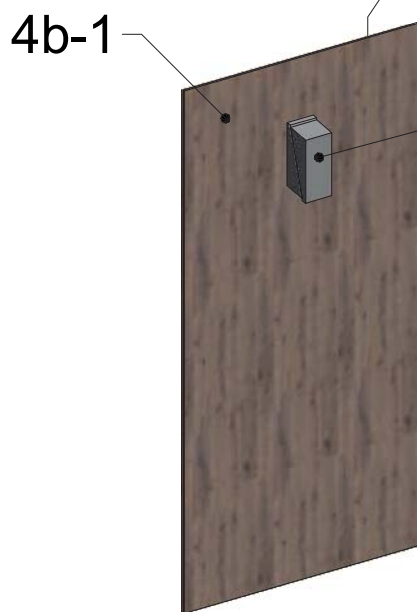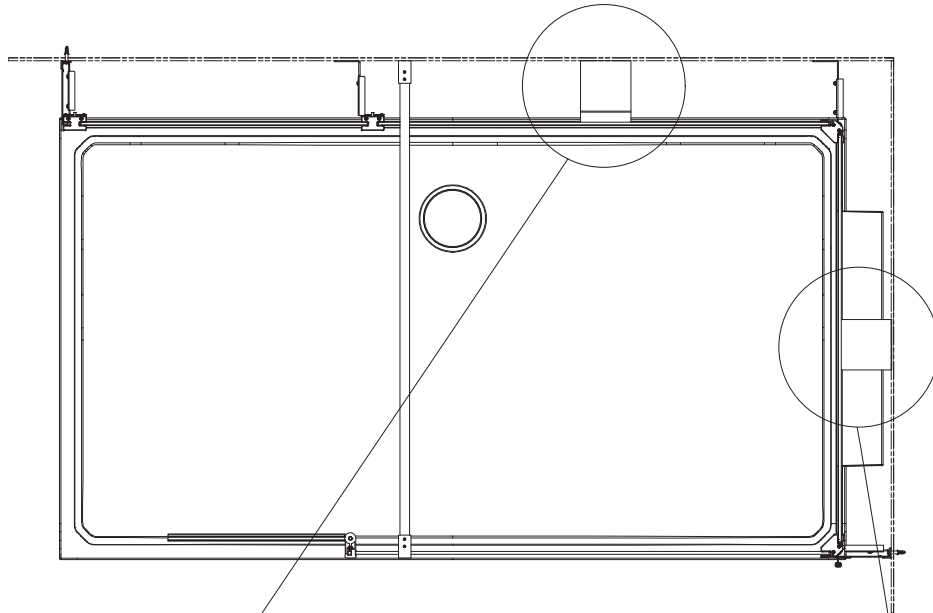

For the right side variant


For the left side variant

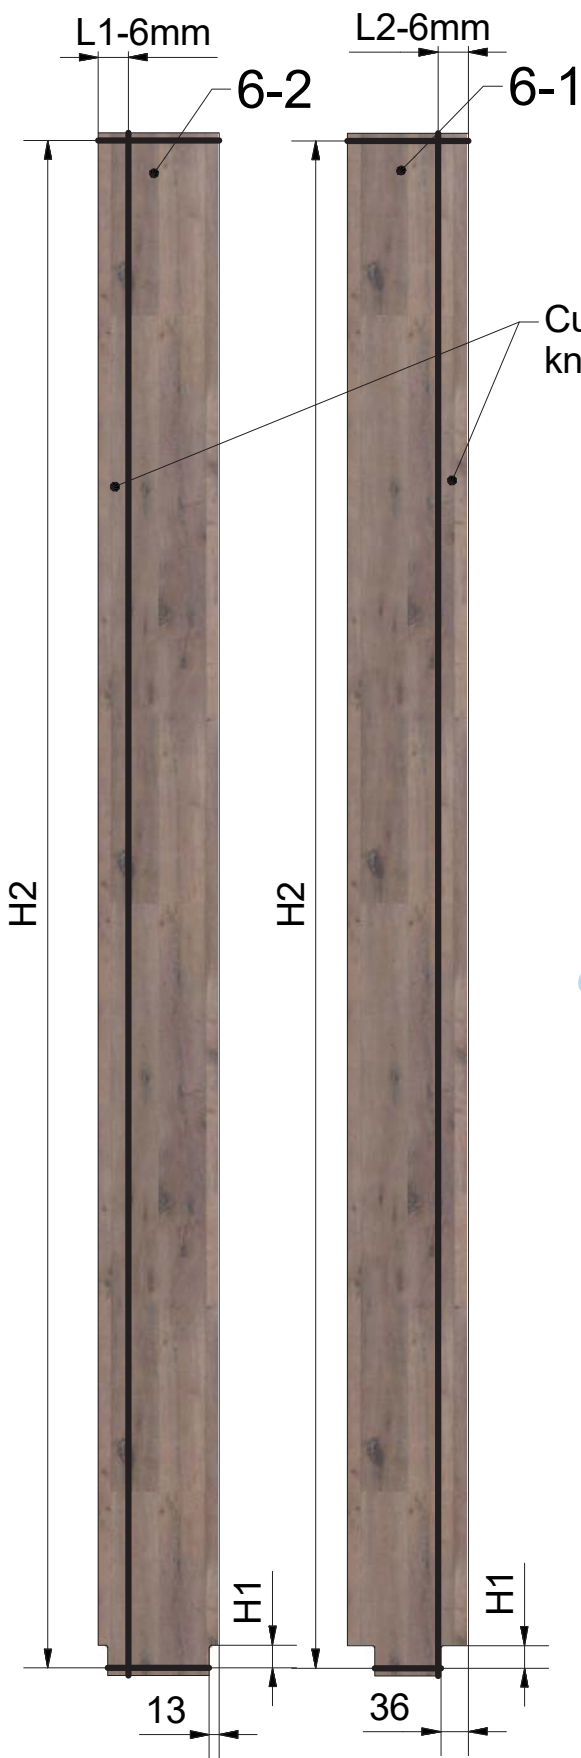




M1

Cut by knife

Remove the sticker cover before installation

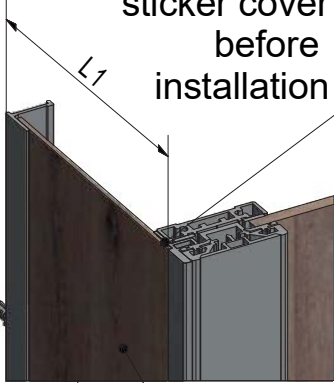


Cut by knife

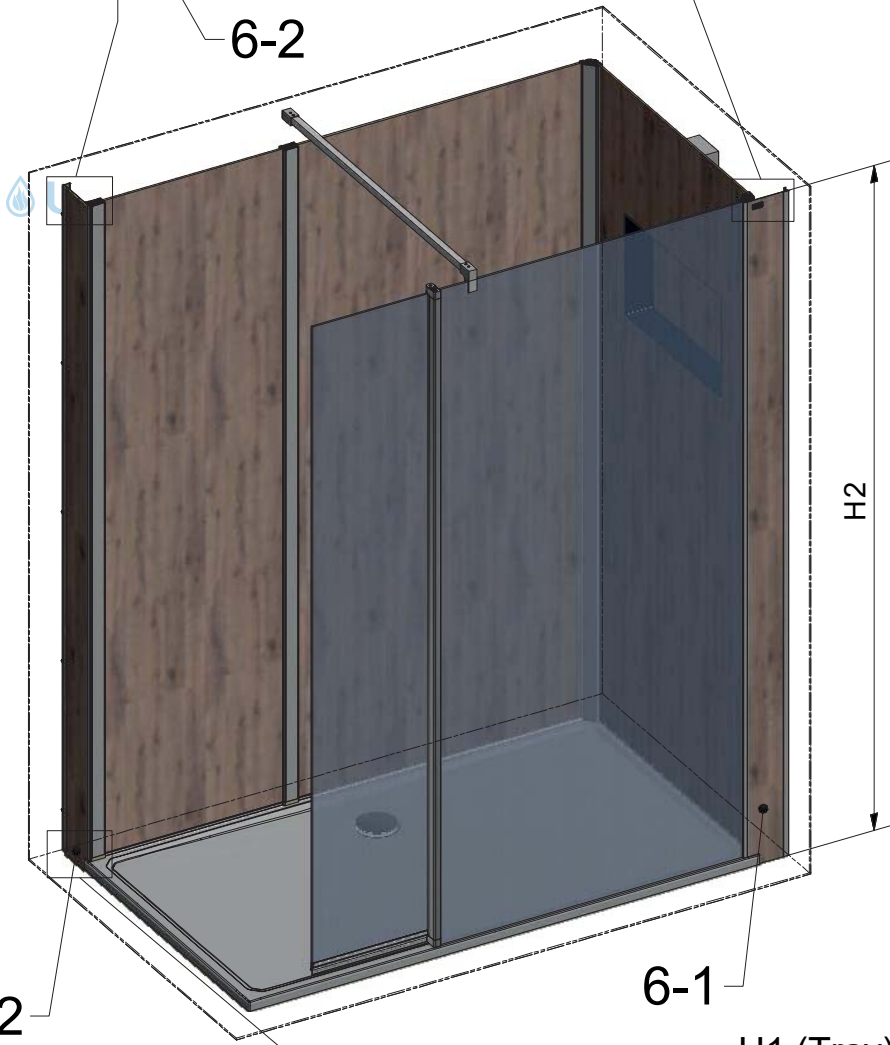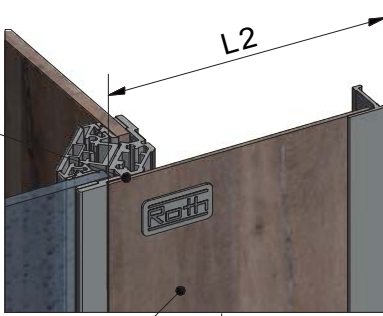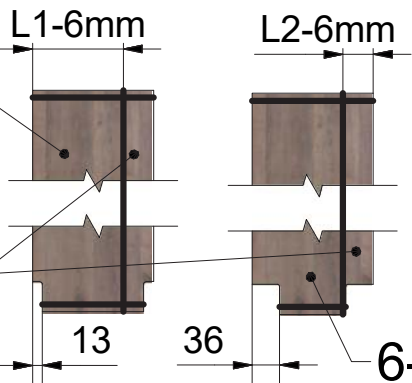

Parts to be used		
Qty.	Number	BOX
1	6-1	1
1	6-2	1


Cut by knife

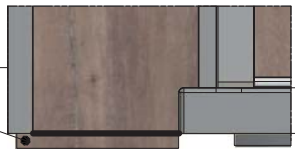

H1 (Tray)

Parts to be used		
Qty.	Number	BOX
1	3c-2	3c
2	3c-4	3c
1	3d-2	3d
2	3d-4	3d
(1)	3b-2	3b
(2)	3b-4	3b
1	3e-2	3e
2	3e-4	3e

**ONLY FOR TRAY
WIDTH OVER 1360**

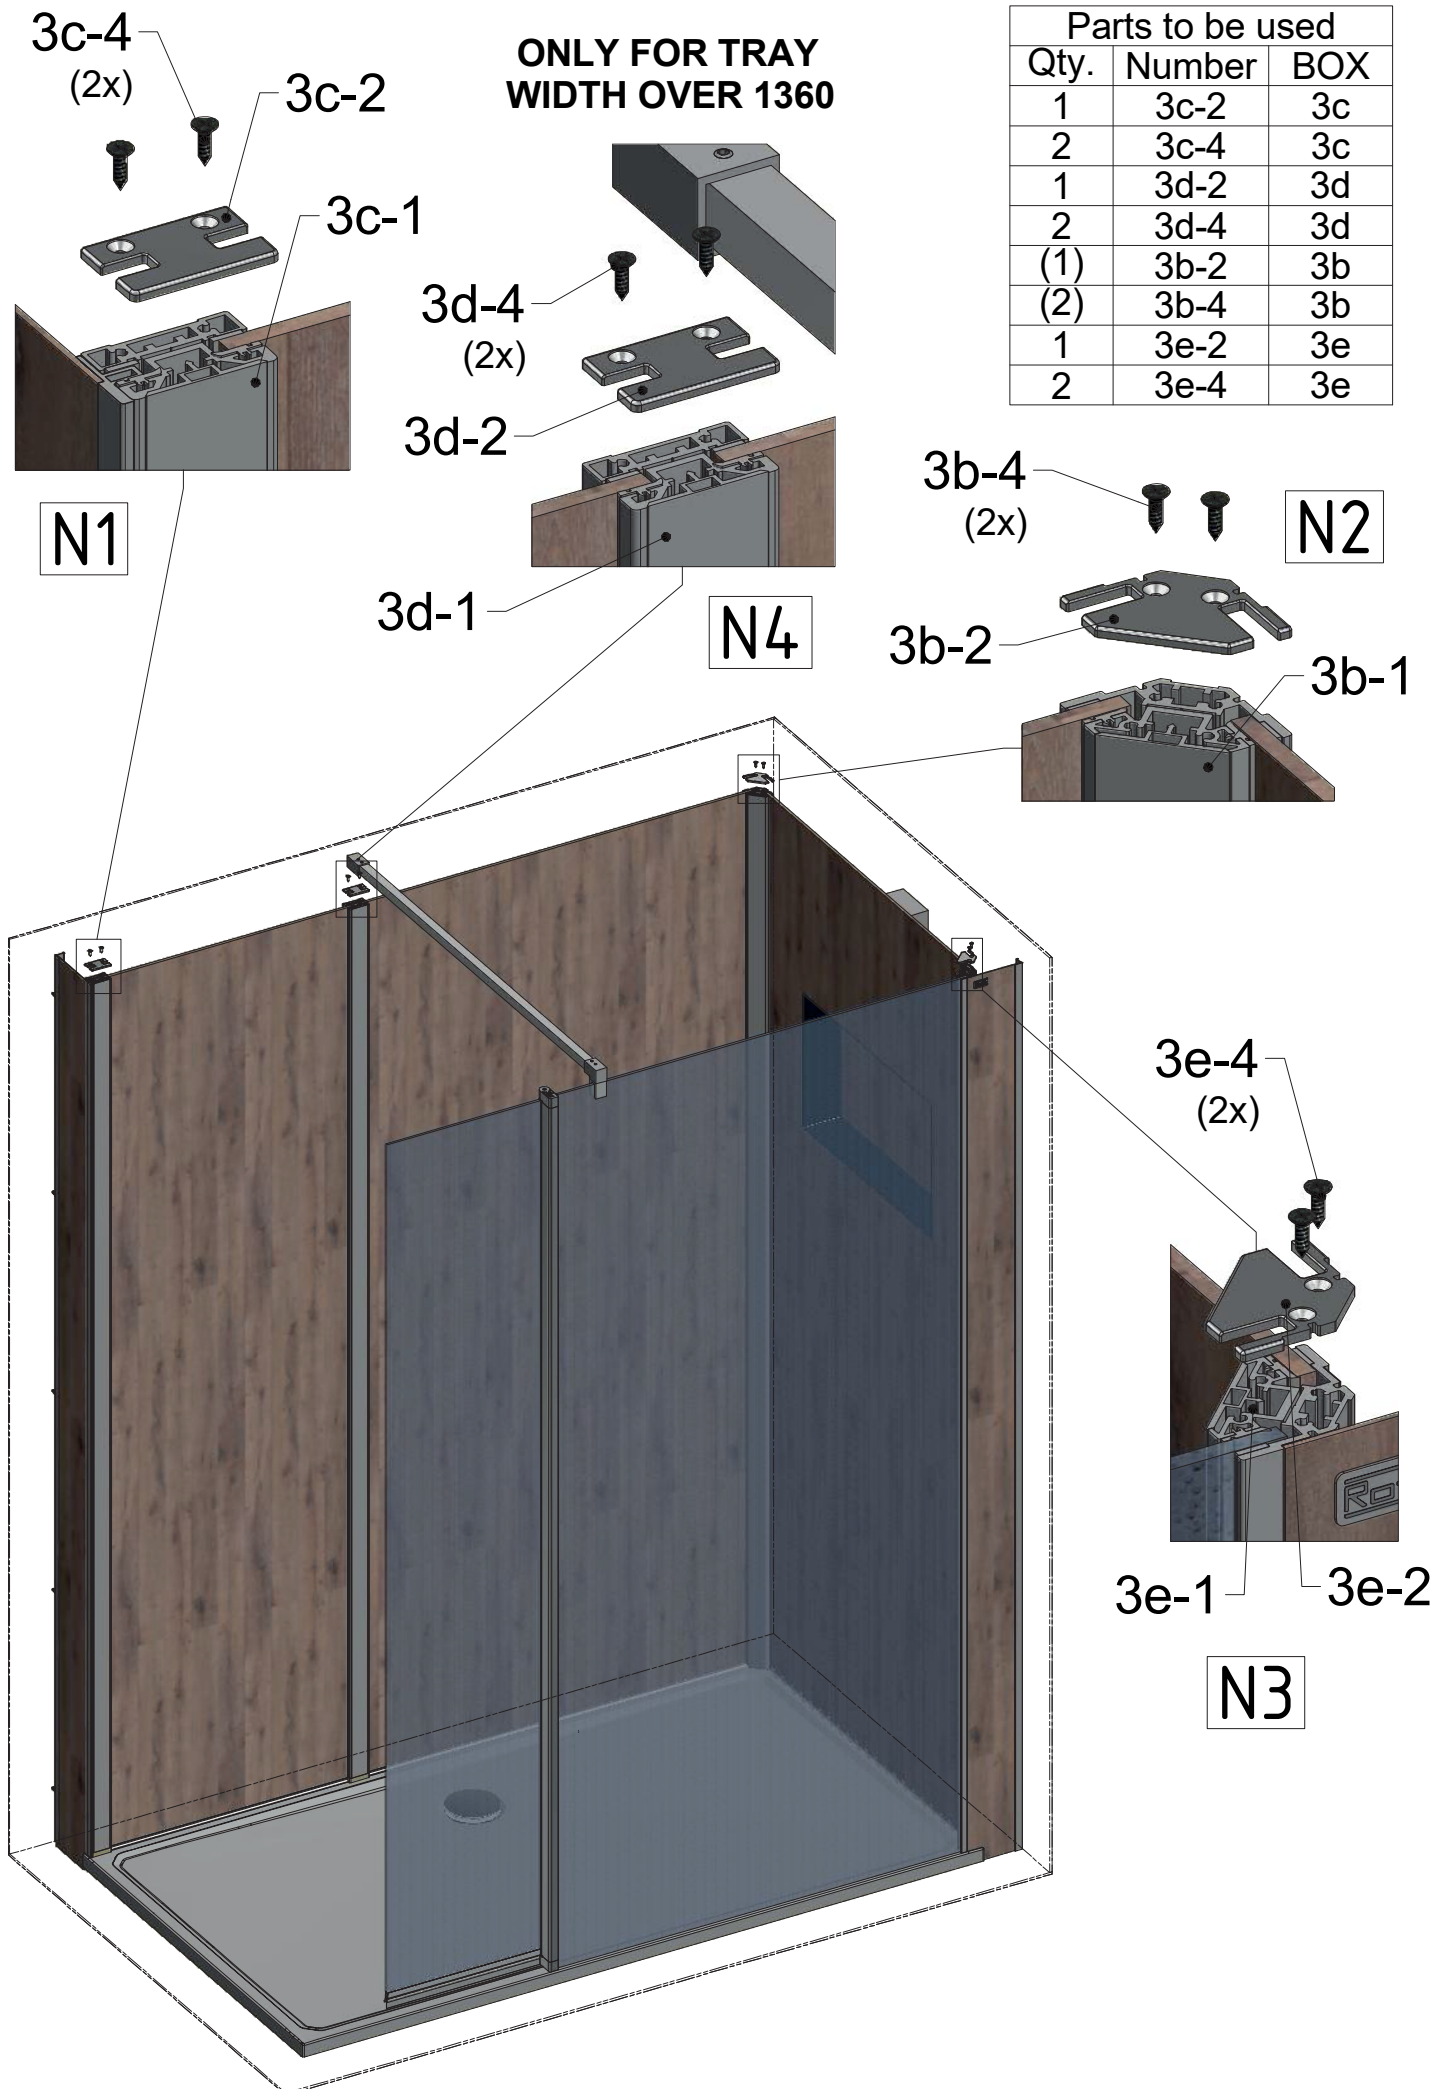



01





Web: www.unidomo.de

Telefon: 04621- 30 60 89 0

Mail: info@unidomo.com

Öffnungszeiten: Mo.-Fr. 8:00-17:00 Uhr

VIESSMANN



 **Vaillant**

WOLF

 **JUNKERS**  **BOSCH**

 **remeha**

 **DAIKIN**

ROTEX
a member of DAIKIN group



Individuelle Beratung



Kostenloser Versand



Hochwertige Produkte




Komplettpakete



Über 15 Jahre Erfahrung



Markenhersteller

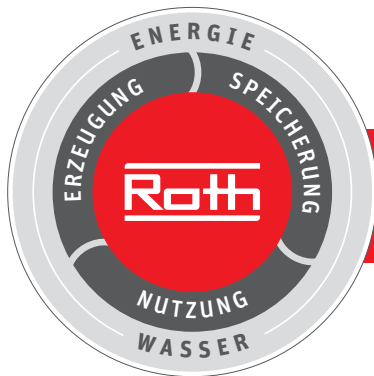

Roth Energie- und Sanitärsysteme

Erzeugung

Solarsysteme <
Wärmepumpensysteme <

Speicherung

Speichersysteme für
Trink- und Heizungswasser <
Brennstoffe und Biofuels <
Regen- und Abwasser <

Nutzung

> Flächen-Heiz- und Kühlsysteme
> Wohnungsstationen
> Rohr-Installationssysteme
> Duschsysteme



■ Deutschland

ROTH WERKE GMBH

Am Seerain 2
35232 Dautphetal
Telefon: 06466/922-0
Telefax: 06466/922-100
E-Mail: service@roth-werke.de
www.roth-werke.de

■ Czech Republic

Roth Czech s.r.o.

Třebářov 160
569 33 Třebářov
Tel.: +420 461 324 301
Fax.: +420 461 324 297
E-Mail: objednavky@roth-czech.cz
www.roth-czech.cz